
# **GEUTEBRUCK**

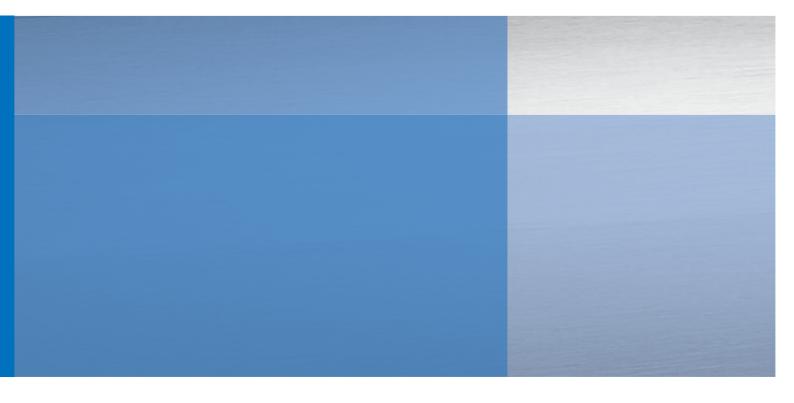

# VIPCAM-GNSD882 VIPCAM-GNSD682

Integrierte High-Speed IP-Dome System-Kameras

Integrated High Speed IP Dome System Cameras

Installationsanleitung

Installation Manual

#### Einführung

#### Allgemeines

Vielen Dank für Ihre Entscheidung, ein Gerät aus der GEUTEBRÜCK Systemreihe zu erwerben. Seit Jahren setzt GEUTEBRÜCK Qualitätsmaßstäbe in der Mikroprozessorgesteuerten Sicherheitstechnik. Die in unseren Geräten eingesetzte Technologie ist das Ergebnis der eigenen Entwicklung und ausgewählter Lieferanten. Deshalb ist das optimale Zusammenwirken der von GEUTEBRÜCK angebotenen Komponenten garantiert.

Die integrierten Hochgeschwindigkeits-Dome **GNSD882 und GNSD682** sind speziell für CCTV-Anwendungen konzipiert.

**Der GNSD882** kann bei Temperaturen zwischen -50 °C und +50 °C **im Außenbereich, der GNSD682** bei Temperaturen zwischen 0 °C und +45 °C **im Innenbereich** eingesetzt werden.

#### Inhalt der Anleitung

Dieses Manual gilt für beide Speed-Dome-Typen. Abweichungen bzgl. technischer Details, der Befestigung/Installation, usw., werden an den entsprechenden Stellen getrennt beschrieben. Die Beschreibung zeigt Ihnen, wie Sie Ihr High-Speed Dome-System komplett, mit allen Video- und Steueranschlüssen, in Betrieb nehmen können.

Bitte lesen Sie unbedingt alle verfügbaren Beschreibungen, um Ihr System vollständig in Betrieb nehmen und bedienen zu können!

#### Elektromagnetische Verträglichkeit (EMC)

Dieses Gerät ist CE zertifiziert. In elektronisch empfindlicher Umgebung kann es trotzdem zu Störungen kommen. In diesen Fällen kann es notwendig sein, weitere Schutzmaßnahmen (Abschirmung) zu ergreifen. Dieses Produkt entspricht der EMC Direktive 89/336 und der Niederspannungsverordnung LVD 73/23 EEC, der Norm EN 55022 für Störstrahlung, IEC 801 Part 2, 3 und 4, für externe Störfestigkeit und der Norm EN 60095 für elektrische Sicherheit.



#### Bitte beachten!

Wir weisen darauf hin, dass für die Netzwerkanbindung der VIPCAM Dome Netzwerkkabel mindestens der Kategorie CAT 5 oder besser verwendet werden sollten.

Ebenso sind unmittelbar am Dome sowohl das Netzwerk-, als auch das Systemkabel mit Klappferriten (siehe Bilder) zu versehen, damit die EMV-Richtlinien erfüllt werden.

Der graue Ferritkern wird auf das Powerkabel, der schwarze auf das Netzwerkkabel gesetzt und danach zusammengedrückt.

Damit sich die Ferrite nicht weiter absetzen können, sollten sie mit jeweils zwei kleinen Kabelbindern fixiert werden. Der Abstand zwischen den Ferriten muss mindestens 40 mm betragen, da sie nebeneinander nicht gemeinsam in den Deckenabstand-, bzw. Masthalter (Gooseneck / Schwanenhals) passen.





#### **Hinweis**

Alle Informationen in dieser Bedienungsanleitung gelten ab der Veröffentlichung. Die GEUTEBRÜCK GmbH behält sich das Recht vor, alle technischen Daten, die in dieser Anleitung genannt sind, ohne Vorankündigung zu ändern.

#### Urheberrecht

Diese Anleitung ist urheberrechtlich geschützt. Ohne vorherige Genehmigung der GEUTEBRÜCK GmbH ist es nicht gestattet, diese Anleitung zu kopieren, zu übersetzen, oder auf ein elektronisches Medium zu übertragen. Es ist ebenfalls nicht gestattet, den Inhalt in ein maschinenlesbares Format umzuformen. Das gilt auch für Teile dieser Anleitung.

© Copyright 2012, GEUTEBRÜCK GmbH.

#### **Wichtiger Hinweis**

Vor Inbetriebnahme lesen Sie bitte erst alle Anweisungen und Warnungen, die in dieser Anleitung enthalten sind, sorgfältig durch. Bei Unklarheiten wenden Sie sich bitte an Ihren Händler. Bitte bewahren Sie diese Anleitung und die Originalrechnung für eventuelle spätere Garantiefälle auf. Beim Auspacken achten Sie auf eventuell fehlende und/oder beschädigte Teile. In diesem Fall benachrichtigen Sie umgehend Ihren Händler, bevor Sie mit der Inbetriebnahme beginnen. Er wird alles Notwendige veranlassen. Wir bedanken uns, dass Sie sich für ein GEUTEBRÜCK-Produkt entschieden haben und wünschen Ihnen eine dauerhafte und einwandfreie Funktion. Sollte dies einmal nicht der Fall sein, wenden Sie sich bitte an Ihren Händler oder an die GEUTEBRÜCK GmbH, Abteilung Qualitätswesen,

Tel.:+49(0)2645 137-0.

### Sicherheitshinweise zur Montage, Installation und Inbetriebnahme

- Behandeln Sie das Dome-System pfleglich
- Demontieren Sie das vormontierte Dome System nicht.

**Ausnahme:** Wenn Sie ausdrücklich in dieser Anleitung dazu aufgefordert werden. Führen Sie nur die beschriebenen Maßnahmen aus.

- Verschließen Sie keine Öffnungen für Lüftung und Kühlung.
- Betreiben Sie das Dome-System nur bei den spezifizierten Temperatur- und Luftfeuchtigkeitswerten.

Betreiben Sie die Dome - Kamera nur bei Temperaturen wie vor angegeben und einer relativen Luftfeuchtigkeit kleiner 90 % (nicht kondensierend).

Der **GNSD882** besitzt die Schutzklasse IP66 für den Außenbereich, der **GNSD682** eignet sich **AUSSCHLIESSLICH** für Innenräume.

- Montieren Sie das Dome System nur an einem geeigneten, stabilen und schwingungsfreien Montageort.
- Richten Sie die Kamera nicht mit dem Objektiv in die Sonne.

Wenn die Kamera auf die Sonne oder andere extrem helle Objekte ausgerichtet wird, können starke Bildstörungen wie **Blooming** (ein weißer Nebel umgibt diese Objekte) und/oder **Smear** (das sind vertikal verlaufende weiße Striche, die von diesen Objekten ausgehend über die gesamte Bildhöhe verlaufen können) auftreten. Außerdem kann der Bildsensor dabei beschädigt werden.

• Benutzen Sie keine scharfen, schleifenden oder sonstige aggressiven Reinigungsmittel für das Gehäuse.

Ein weiches Tuch (Baumwolle) und ein mildes Reinigungsmittel sind ausreichend. Nur leicht reiben.



Arbeiten Sie nur am Schwenk-/Neigekopf, wenn sicher ist, dass keine Netzspannung anliegt. Netzstecker ziehen und gegen Wiedereinstecken sichern. **Unfallgefahr!** 

## Inhalt

1. Überblick	6
1.1 Besondere Produkteigenschaften	7
2. Installation / Inbetriebnahme GNSD882 / GNSD682	8
2.1.1 Lieferumfang GNSD882	8
2.1.2 Lieferumfang GNSD682	9
2.1.3 Schalterbeschreibung und Einstellung	10
2.1.4 Dome - Kamera Fernsteuerprotokoll (Schalter D)	11
2.1.5 22-polige Steckerbelegung	12
2.1.6 Alarm Kontakt Beschreibung	13
2.2 Installation / Inbetriebnahme des GNSD882	14
2.3 Installation / Inbetriebnahme des GNSD682	17
2.3.1 Innen-Dome Installation	17
2.3.1.1 Deckenmontage	17
2.3.1.2 Wandmontage mit Wandhalter	24
2.4 Systemvarianten f ür die Bedienung von IP-Domen mit dem Bedienger ät MBeg/G	CT-3X-LAN 25
2.5 Programmierung von IP-Domen in GSC-Setup	28
2.5.1 Programmierung von VIPCAM-Domen in GSC-Setup	29
3. Bedienung und Einstellung	36
3.1 OSD Menü Anzeigeformat	36
3.2 OSD Menü Baumstruktur	37
3.3 Einstellungsmenü	40
OSD-EINSTELLUNG mit dem GEUTEBRÜCK Bediengerät MBeg/	GCT40
OSD-EINSTELLUNG via GscTelecontrol	41
3.3.1 LANDESSPRACHE	41
3.3.2 STANDARD (Werkeinstellung) KAMERA	41
3.3.3 GEGENLICHT(Gegenlichtkompensation)	41
3.3.4 FOKUS	42
3.3.5 AE MODUS (Automatische Belichtungsregelung)	42
3.3.6 WBC MODUS (Weißbalance)	43
3.3.7 EINSTELLMENÜ 1	44
ZOOMGESCHWINDIGKEIT	44
DIGITALER ZOOM	44
LANGZEITBELICHTUNG (slow shutter)	44
BILDUMKEHRUNG	45
STANDBILD (Freeze)	45
KANTENANHEBUNG (Apertur)	45
BILDSTABILISIERUNG	45
STABILER ZOOM	45
BEENDEN	45

3.3.8 EINSTELLMENÜ 2	46
DREHEN (FLIP/elektronische oder mechanische Bildumkehr)	46
WINKELJUSTIERUNG (Min/Max)	47
GESCHWINDIGKEIT PRO ZOOM	47
AUTOKALIBRIERUNG	
PASSWORT	
SYSTEM RESET (Zurückstellen)	
SCAN MODUS	47
BEENDEN (EXIT)	
3.3.9 ID ANZEIGE	
3.3.10 TITEL ANZEIGE (Kamera - Titeleinblendung)	
3.3.11 TITEL EINSTELLUNG	
3.3.12 VORGABE FESTPOSITIONEN	
3.3.13 SEQUENZ	
3.3.14 AUTOMATISCHES SCHWENKEN	
3.3.15 KAMERAFAHRT	52
3.3.16 STARTEINSTELLUNG	
3.3.17 IR FUNKTION (Zuschaltbarer IR Cut Filter)	54
3.3.18 ALARMEINSTELLUNG	55
3.3.18.1 ALARMERKENNUNG	57
3.3.19 WDR FUNKTION (Erweiterter Dynamikbereich)	59
3.3.20 PRIVACY MASK (ESF Elektronische Sichtschutzfunktion)	60
3.3.21 ZEITEINSTELLUNG (Uhrzeit/Datum-Funktion)	61
3.3.22 ZEITPLAN (Termin/Zeitplanung)	62
3.3.23 BEENDEN OSD	
Anhang A: Technische Daten GNSD882 / GNSD682	64
Steuerprotokolle JVC TK-C 676E (im Anhang d. engl. Manuals)	
Anhang B: Verfügbares Zubehör	66
Netzteil PSU-24VAC/80VA/Boxed (5.14040)	66
Bracket Wall Mount GSD/BWM-003 (5.04802)	67
Bracket Ceiling Mount GSD/BCE-002 (5.04801)	68
Corner Mount Adapter GSD/CMA-003 (5.04806)	69
Pole Mount Adapter GSD/PMA-003 (5.18374)	70
Montagezubehör für GNSD682	71
Wandhalter GSD/BWM-001 (5.04864)	71
Dome Montageadapter (5.04866)	
Deckeneinbausatz GSD/BFC-001 (5.04860)	72
Deckenhalter GSD/BPE-001 (5.04862)	73

### 1. Überblick

Beide Speeddome-Typen beinhalten das gleiche Kamera-Zoomblock-Modul. Das integrierte High-Speed Dome-Kamera-Modul verfügt über die neueste Generation besonders leistungsfähiger DSP-Farbkameras, mit 36-fach optischem und 12-fachem Digital Zoom. Durch diese hohe Zoomfähigkeit erlaubt die Kamera einen klaren Blick, auch über große Distanzen. Ergänzt durch Auto-Fokus, Gegenlicht-Kompensation, automatische Belichtungsregelung AES, ausschwenkbares IR-Sperrfilter, Privacy Masking (ESF - elektronische Sichtschutzfunktion) und Wide Dynamic Range (WDR), wird so unter fast allen Umständen eine möglichst optimale Bildqualität erreicht. Eine sog. "Home-Funktion" ermöglicht es, nach einer variabel einstellbaren Zeit entweder eine bestimmte "Home Position" einzunehmen, bzw. eine bestimmte Funktion, z.B. Sequenz, Autoschwenken, Kamerafahrt, auszuführen.

Der Dome bietet variable Schwenk- und Neigegeschwindigkeiten im Bereich von 0,5°/s bis zu 400°/s. Das ergibt eine wesentlich bessere Steuerbarkeit gegenüber konventionellen Antrieben. Der Schwenkbereich beträgt 360° (Endlos-Drehung). Der Neigebereich reicht von -10° bis +100°. So kann der Dome auch Objekte bis zu 10° oberhalb der Waagerechten (in beiden Richtungen) erfassen. Damit ist eine kontinuierliche Objektverfolgung gewährleistet. Es können bis zu 256 Positionen (Presets), 8 Sequenzen, 4 Auto-Schwenk-Variationen und 4 Kamera-Fahrten (Touren) programmiert werden. Die Kommunikation der Fernsteuerung erfolgt bis zu 1.200 m Entfernung über eine RS-485-Schnittstelle.

Die Dome-Kamera verfügt über 7 + 1\* Alarmeingänge (z.B. lokale Sensoren) und einen Alarmausgang. Diese können vorprogrammierte Funktionen wie Preset, Autopan, Sequence oder Tour auslösen. Die Alarmreaktionen werden über das "On Screen Menü" (OSD) programmiert. Ein zusätzlicher Eingang kann zur externen (manuellen) Umschaltung zwischen Farb- (Tag) und SW- (Nacht) Betrieb genutzt werden. Hierüber können eine oder mehrere Dome - Kameras (z. B. mit einem Dämmerungsschalter) zwischen Farbe und SW umgeschaltet werden. Die Funktion "Home Position" erlaubt es, die Dome - Kamera in eine programmierbare Grundposition fahren zu lassen. Diese Funktion kann auch zeitabhängig ausgelöst werden.

(\* = Alarmeingang 8 dient für die externe Tag/Nacht-Umschaltung; offen = Tagbetrieb, geschlossen = Nachtbetrieb).

Fertigung und Test jeder Dome - Kamera unterliegen den strengen Anforderungen der DIN/ISO 9001-Vorschriften.

### 1.1 Besondere Produkteigenschaften

#### Präzise und genaue Objektverfolgung

- Automatischer Abgleich
- Positionsgenauigkeit für Schwenken und Neigen: +- 0.225°
- Geschwindigkeit beim Anlaufen von Festpositionen: bis zu 400°/s.
- Die Schwenk-/Neigegeschwindigkeiten k\u00f6nnen proportional zur eingestellten Brennweite gew\u00e4hlt werden.

#### Tag/Nacht-Umschaltung

Ausschwenkbares IR Sperrfilter

#### Anwendungen bei schwacher Beleuchtung

 Minimale Beleuchtungsstärke 0,01 Lux (S/W) mit Slow Shutter Integration (Mehrfachabtastung)

#### Perfekte Kontrastübertragung für hohe Bildqualität

- Erweiterter Dynamik-Bereich durch WDR (Wide Dynamic Range)
- Automatischer Weißabgleich (AWB)
- Automatische Verstärkungsregelung (AGC)
- Backlight Compensation (BLC)
- Automatische Blendenregelung
- Alarmerkennung
- Bildumkehrung

### Privacy Masking für Privatsphärenschutz

• Bis zu 24 Zonen programmierbar (unabhängig, überlappend)

### **Dynamische Dome-Konfiguration**

- Flexible Montagehilfen für Innen- und Außenanwendung
- Kompaktes und leichtes Gehäusedesign für einfache Installation
- Wetterfestes Gehäuse für Einsatz bei unterschiedlichen Temperaturen, Sonneneinstrahlung und Regen (gilt nur für den GNSD882!).

### Video-DSP und Ethernet/IP-Interface zur GeViScope System-Integration:


• Der DSP (Digital Signal Processor) in dieser Kamera ist ein Hochleistungs-Video-DSP, der speziell für die Integration der Kamera in das GEUTEBRÜCK GeViScope-System vorgesehen ist. Dieser DSP übernimmt alle Funktionen der Bildvorverarbeitung, wie sie auch im GeViScope ausgeführt werden, z. B. die Bildsignalkompression und die Bewegungserkennung. Im Zusammenhang mit dem Ethernet/IP-Interface kann dadurch auf ein analoges Videokabel zum GeViScope verzichtet werden, ohne dass dabei Funktionalität oder Leistungsfähigkeit verloren geht, wie das bei üblichen IP-Kameras der Fall ist.

#### 2. Installation / Inbetriebnahme des GNSD882 / GNSD682

Die nachfolgende Dokumentation beschreibt den Anschluss, die Einstellung und Bedienung der Dome - Kameras. Bitte beachten Sie, dass Sie zur Steuerung und Kontrolle der Hochgeschwindigkeitsdome grundsätzlich ein Bediengerät (z.B. GEUTEBRÜCK MBeg/GCT), bzw. Software (z. B. GscTelecontrol), benötigen.

### 2.1.1 Lieferumfang GNSD882

Bitte prüfen Sie die Lieferung auf Vollständigkeit (siehe nachfolgende Liste). Bei eventuell fehlenden und/oder beschädigten Teilen benachrichtigen Sie bitte umgehend Ihren Händler, bevor Sie mit der Inbetriebnahme beginnen. Er wird alles Notwendige veranlassen.

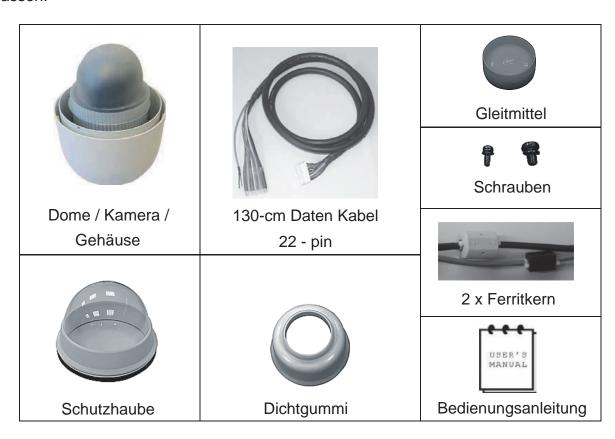

### 2.1.2 Lieferumfang GNSD682


Bitte prüfen Sie die Lieferung auf Vollständigkeit (siehe nachfolgende Liste). Bei evtl. fehlenden und/oder beschädigten Teilen benachrichtigen Sie bitte umgehend Ihren Händler, bevor Sie die Inbetriebnahme beginnen.

Er wird alles Notwendige veranlassen.



### 2.1.3 Schalterbeschreibung und Einstellung

Bevor Sie die Dome - Kamera mit anderen Geräten verbinden, ist es unerlässlich, die Dome ID (Adresse) und das Kommunikations-/Steuerprotokoll zu überprüfen. Die für die Einstellungen benötigten Schalter befinden sich im Unterteil der Dome - Kamera (s. Abbildung).

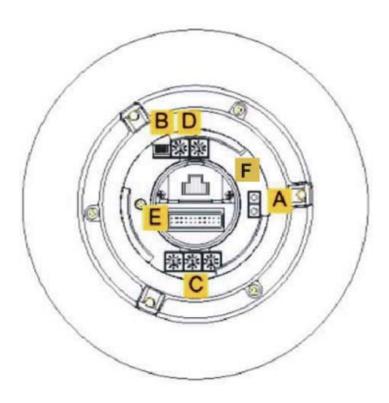


Α	Reserviert
В	wird nicht mehr benötigt
С	Dome ID (muss auf 001 stehen!)
D	Dome-Protokoll (muss auf 20 stehen!)
Е	22-Pin Buchse
F	RJ-45 Buchse

### 2.1.4 Dome - Kamera Fernsteuerprotokoll (Schalter D)

Einstellung der Schalter D für das benötigte Fernsteuerprotokoll

Switch Nr.	Protokoll	Baud Rate
15	JVC	9600
20	JVC/GEUTEBRÜCK	9600

Wählen Sie das JVC/GEUTEBRÜCK Protokoll mit der Schalterstellung 20 und Baud Rate 9600, wie in der folgenden Abbildung dargestellt.

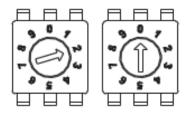

Zehner Einheit Einer Einheit

Schnittstellenparameter: 9600 Baud

8 Datenbits / 1 Stoppbit mit Parity even

Halb-Duplex / Kein Handshake

Schalter D -> Nr. 20


### 2.1.5 22-polige Steckerbelegung

Der Dome-Kamera ist ein 22-poliges Anschlusskabel mit 130 cm Länge zum vereinfachten Anschluss beigelegt.

Die nachfolgenden Abbildungen und Tabellen zeigen die Pinbelegung des 22-poligen Steckers.



Achtung: VOR dem Anschluss unbedingt die Farben des beiliegenden Kabels prüfen!

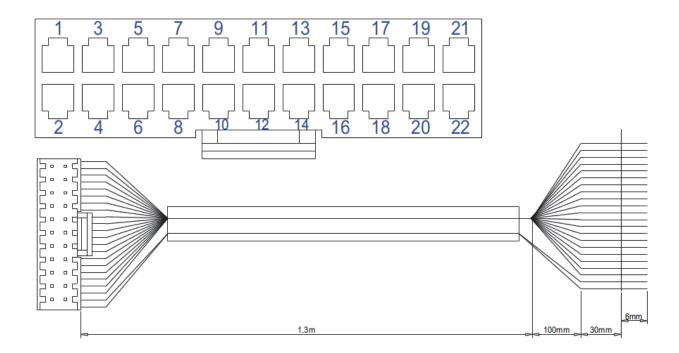


Funktion und Kennzeichnung der Anschlüsse:

Nr.	Funktion	Farbe	Kabel
1	AC24-1	rot	
2	Alarm Kontakt		
3	AC24-2	schwarz	1007 20AWG
4	Alarm Kontakt		1007 20AWG
5	FG	gelb	
6	Alarm Kontakt		
11-20	Alarm Konta	akte	

### 2.1.6 Alarm Kontakt Beschreibung

Nachfolgend wird die Funktion und Pinbelegung für die Alarmkontakte in der 22-poligen Buchse im Unterteil der Dome - Kamera beschrieben

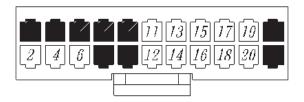

Kontakt	Farbe	Definition
2	Weiss	ALARM NORMAL OFFEN
4	Schwarz/Weiss	ALARM NORMAL GESCHLOSSEN
6	Grün/Schwarz	ALARM GEMEINSAMER
11	Blau/Weiss	ISOG
12	Rot/Weiss	ALARM-1
13	Violett	ALARM-3
14	Grau	ALARM-2
15	Blau	ALARM-4
16	Weiss/Schwarz	ALARM-5
17	Orange/Schwarz	ALARM-6
18	Violett/Weiß	ALARM-7
19	Grau/Schwarz	SCHALTER FARBE/SW (*)
20	Braun/Weiß	ALARM MASSE

(\* = 7 Alarmeingänge + Eingang 8 als Tag/Nacht-Umschalter)

### 2.2 Installation / Inbetriebnahme des GNSD882

Die nachfolgende Dokumentation beschreibt Installation der Dome - Kamera.

Auspacken und Bereitstellen der Dome - Kamerateile













Drehen und Abnehmen der oberen Gehäusekappe. Evtl. vorher die Arretierschraube im Deckel lösen.

Entfernen der Schutzabdeckung.

Den Gummidichtring der unteren Domekuppel mit dem beigelegten Gleitmittel bestreichen. Das erleichtert die Montage der unteren Kuppel und vermeidet Beschädigungen des Dichtringes. Montage der unteren Kuppel.

Bitte beachten Sie, dass die kleine Nase an der Kuppel mit einem der vier Löcher am oberen Gehäuseteil übereinstimmt.

Mit zwei Händen und leichtem Druck die Kuppel einsetzen. Vorher die kleine Nase in passendes Loch einhaken.

**Auf keinen Fall** die Kuppel wie im Bild gezeigt einsetzen. Dadurch wird der Gummidichtring beschädigt.

Verschrauben der Domekuppel mit dem Wetterschutzgehäuse.

Verbinden der RS-485, Spannungsversorgungs- und BNC-Kabel mit den vorbereiteten Anschlüssen

Führen Sie die Kabel durch den Wandhalter und die obere Dome - Kameraabdeckung.

Montieren Sie die obere Dome - Kameraabdeckung durch Rechtsdrehung in den Wandhalter.












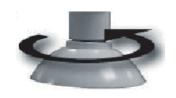

Mit der beigefügten Schraube fixieren Sie die obere Dome - Kameraabdeckung im Wandhalter.



Einstecken des Kabels in die Dome - Kamera



Montieren (Rechtsdrehung) und Verschrauben der oberen Dome - Kameraabdeckung.







Fertig montierte Dome - Kamera GNSD882

### 2.3 Installation / Inbetriebnahme des GNSD682

Die nachfolgende Dokumentation beschreibt die Installation der Dome - Kamera.

#### 2.3.1 Dome Installation

Je nach Installationsumgebung wird der Dome an der Decke oder Wand montiert. In den folgenden Abschnitten werden die unterschiedlichen Installationszubehöre und -arten im Detail beschrieben.

### 2.3.1.1 Deckenmontage

Grundsätzlich gibt es drei Deckenmontagearten: Aufputzmontage, Deckeneinbau und Montage mit Abstandshalter (Abstandsrohr)

Die folgenden Abbildungen zeigen die unterschiedlichen Kabelanschlussarten.

**Aufputzmontage** 



(Kabel sichtbar)



Deckeneinbau



(verdeckte Kabelführung)



### **Aufputzmontage**

Aufputzmontage ist die Standardinstallation für Innendome. Das hierfür notwendige Montagezubehör liegt der Domeverpackung bei. Die benötigten Zubehöre sind im folgenden Abschnitt gelistet.

#### **Benötigtes Material:**

- Dome Kamera
- Aufputzmontagering und Zierring (Enthalten)
- Fixierungslasche (Enthalten)

Beachten Sie die nachfolgenden Schritte für die Dome-Aufputzmontage.



#### Achtung:

Entfernen Sie vor der Montage die Domekuppel!

#### Schritt 1

Schrauben Sie die Fixierungslasche auf das Domegehäuse.



#### Schritt 2

Lösen Sie den Zierring vom Aufputzmontagering.

#### Schritt 3

Platzieren Sie den Montagering am vorgesehenen Platz an der Decke.

Markieren Sie die Bohrlöcher.



Bohren Sie die Befestigungslöcher.

#### Schritt 5

Schrauben Sie den Montagering an die Decke.





#### Schritt 6

Ziehen Sie das Datenkabel durch den Montagering und stecken Sie es in den vorgesehenen Domeanschluss.



#### Schritt 7

Stecken Sie das Domegehäuse in den Montagering und drehen Sie ihn im Uhrzeigersinn bis zum Anschlag.



Fixieren Sie das Domegehäuse durch Anziehen der Fixierungsschraube (s. Abbildung).



#### Schritt 8

Befestigen Sie den Zierring.



#### Schritt 9

Montieren Sie die Domekuppel.



#### **Fertig montierter Dome**

### Deckeneinbaumontage

Das hierfür notwendige Montagezubehör liegt den Verpackungen bei. Die benötigten Zubehöre sind im folgenden Abschnitt gelistet.

#### **Benötigtes Material:**

- Dome Kamera
- T-Bar (Einbausatz, optionales Zubehör)
- Fixierschraube (Enthalten im Einbausatz)
- Montageschablone (Enthalten im Einbausatz)
- Zierring (enthalten in Domeverpackung)

Beachten Sie die nachfolgenden Schritte für die Deckeneinbaumontage.



Achtung: Entfernen Sie vor der Montage die Domekuppel!

#### Schritt 1:

Lösen Sie die markierte Fixierungslasche (s. Abbildung)




#### Schritt 2:

Schrauben Sie mit der beigefügten Fixierungsschraube die Lasche an das Domegehäuse (s. Abbildung)



#### Schritt 3

Zeichnen Sie mit Hilfe der roten Schablone den Deckenausschnitt an.

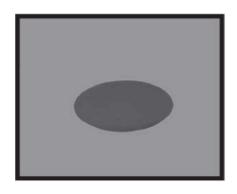

#### Schritt 4

Platzieren Sie den Einbausatz in die vorgesehene Öffnung.

#### Schritt 5

Drehen Sie die Befestigungsflügel um 180°

#### Schritt 6

Ziehen Sie die 3 Schrauben (s. Abbildung) soweit an, bis der Einbausatz fest in der Öffnung sitzt.

#### Schritt 7

Ziehen Sie das Datenkabel durch den Montagering und stecken Sie es in den vorgesehenen Domeanschluss.

#### Schritt 8

Stecken Sie das Domegehäuse in den Montagering und drehen Sie ihn im Uhrzeigersinn bis zum Anschlag.

Fixieren Sie das Domegehäuse durch Anziehen der Fixierungsschraube (s. Abbildung).











Befestigen Sie den Zierring.




### **Deckenmontage mit Abstandsrohr**

Das Abstandsrohr ist in 2 Längen erhältlich: 25 cm und 50 cm.

#### **Benötigtes Material:**

- Dome Kamera
- Abstandsrohr mit Zubehör (optional)
- Montageadapter und Zubehör (optional)

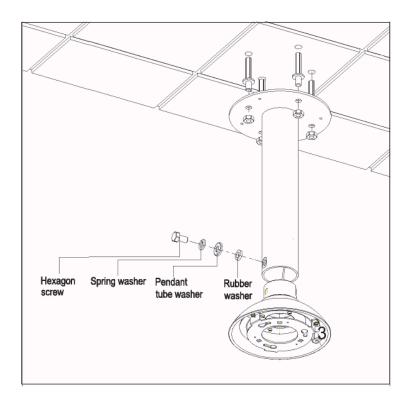

Beachten Sie die nachfolgenden Schritte für die Deckeneinbaumontage.



#### Achtung:

Entfernen Sie vor der Montage die Domekuppel!

- 1) Stellen Sie sicher, dass die Decke ausreichend tragfähig ist.
- 2) Beachten Sie: diese Montage ist nur mit verdeckter Kabelführung möglich!

- 3) Befestigen Sie das Abstandsrohr mit Schrauben und Dübeln an der Decke.
- 4) Ziehen Sie das Kabel durch das Abstandsrohr und den Montageadapter.

**Achtung:** Ziehen Sie vor Montage des Adapters die Gummiabdeckung über das Abstandsrohr.

- 5) Verschrauben Sie den Montageadapter mit dem Abstandsrohr.
- **6)** Schrauben Sie die Fixierungslasche auf das Domegehäuse, s. Abbildungen





- **7)** Stecken Sie das Datenkabel in den vorgesehenen Domeanschluss.
- 8) Stecken Sie das Domegehäuse in den Montageadapter und drehen Sie ihn im Uhrzeigersinn bis zum Anschlag. Fixieren Sie den Dome mit der Sicherungsschraube, (s. Abbildung)



### 2.3.1.2 Wandmontage mit Wandhalter


#### **Benötigtes Material:**


- Dome Kamera
- Wandhalter und Zubehör (optional)
- Montageadapter und Zubehör (optional)

Beachten Sie die nachfolgenden Schritte für die Domeaufputzmontage.





Achtung: Entfernen Sie vor der Montage die Domekuppel!

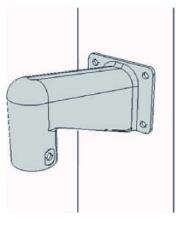

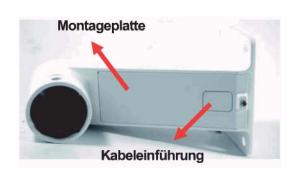

- 1) Offene und verdeckte Kabelführung möglich.
- 2) Um das Eindringen von Insekten zu vermeiden, verschließen Sie die Kabeldurchführung mit beiliegendem Schwamm (s. Abbildung).

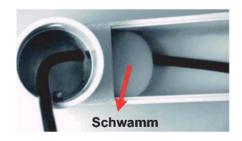

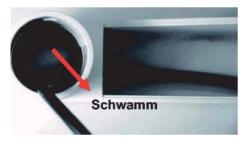


- **3)** Ziehen Sie das Kabel durch den Wandhalter und den Montageadapter und stecken Sie es in den vorgesehenen Domeanschluss.
- 4) Befestigen Sie den Dome und Montageadapter am Wandhalter und verfahren weiter

wie unter Schritt 6 -9 der Deckenmontageanleitung mit Abstandsrohr.

Bitte beachten Sie bei der Montage des **GNSD682**, dass dieser nur mit dem Domemontageadapter **GSD/BDA-001** montiert werden kann.

Bitte separat bestellen (5.04866)

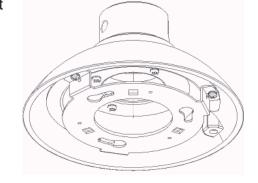


# 2.4 Systemvarianten für die Bedienung von IP-Domen mit dem Bediengerät MBeg/GCT-3X-LAN

#### a) MBeg/GCT-3X-LAN an re\_porter/GeViScope:

Bei dieser Konstellation besteht die Möglichkeit maximal 1 Bediengerät direkt an das jeweilige re\_porter/GeViScope System anzuschließen. Mit diesem Bediengerät kann dann immer nur das verbundene Gerät bedient werden.

Das MBeg/GCT-3X-LAN wird über einen Switch mit dem Gerät verbunden. Die anzuschließenden IP-Dome werden ebenfalls über diesen Switch (oder auch mehrere, wenn nötig) an den re\_porter angeschlossen. Die Anzahl der möglichen IP-Dome ist von der Aufzeichnungsrate, der Bildqualität, usw. abhängig.

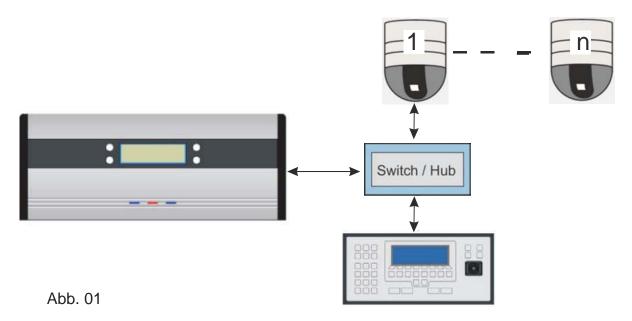

Die IP-Dome sind im GSC-Setup als CAM2IP-Signalquellen zu erkennen.

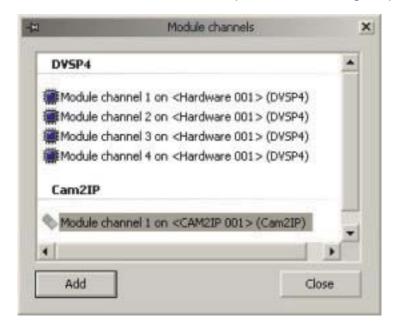


Abb. 02

Ihren MAC-Adressen werden im Setup die entsprechenden IP-Adressen zugeordnet und entsprechend ihrer Auswahl als lokale Eingänge konfiguriert (notwendig für die

Kameraeingabe am MBeg/GCT-3X-LAN ).

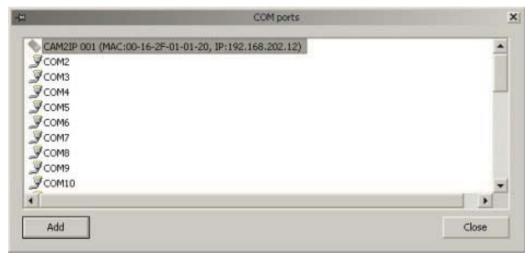


Abb. 03

Die "Schnittstelle" wird unter "Telecontrol" als CAM2IP-Port erkannt und muss hier für das notwendige Protokoll (GEUTEBRÜCK/JVC) parametriert werden.


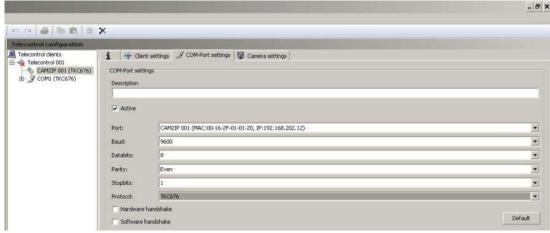


Abb. 04

Die Kameraanwahl per MBeg/GCT-3X-LAN ist analog zu der Anwahl von "normalen" Kameras – die lokalen Eingänge werden im Setup in der Reihenfolge der aktivierten CAM2IP-Kameras entsprechend gesetzt.

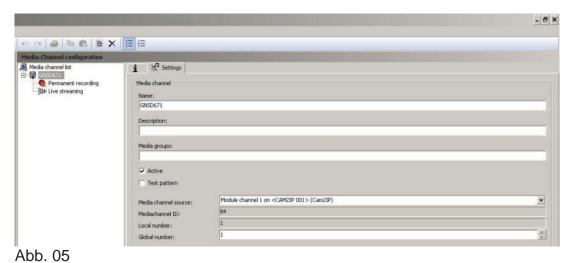

#### b) MBeg/GCT-3X-LAN in Verbindung mit maximal drei GeViScope Geräten:

Auf einem GeViScope Gerät (GeViScope Dongle) sind grundsätzlich folgende Lizenzen enthalten:


1 x Licence/GSC/OpKeyb plus 3 x Licence/GSC/SysIntMSC+GSC.

Auf dem "ersten" GeViScope (GSC) wird die Software GeViSoft installiert. Hier werden dann die oben genannten Lizenzen benötigt.

Die GSCs werden im Netzwerk miteinander verbunden und dem "ersten" GSC wird dann das MBeg/GCT-3X-LAN zugeordnet. An jedem der drei GSCs können jetzt, wie schon in Variante a) beschrieben, so viele IP- Dome angeschlossen werden, wie es die Aufzeichnungs-Parameter zulassen. Aktivierung und Einstellung der IP-Dome ist identisch zu a). In jedem GSC, dem 1 Dome zugeordnet werden soll, muss Telecontrol aktiviert/programmiert werden!




Hinweis: um z. B. nur EIN GeViScope mi t einem Bediengerät zu verbinden, muss ebenfalls die Software GeViSoft auf dem jeweiligen Gerät installiert werden!

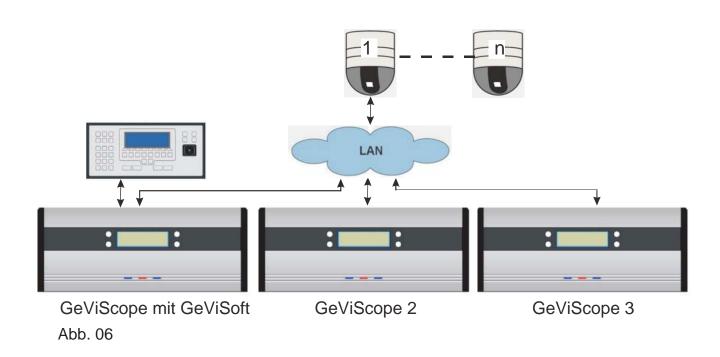

#### c) MBeg/GCT-3X-LAN in Verbindung mit n GeViScope-Geräten:

Hier empfiehlt es sich, einen Rechner mit der Software GeViSoft auszustatten. Dieser Rechner benötigt dann einen GeViSoft-Dongle mit einer entsprechenden Anzahl an Lizenzen: 1 x Licence/GSC/OpKeyb plus n x Licence/GSC/SysIntMSC+GSC. Das MBeg/GCT-3X-LAN wird diesem separaten Rechner zugeordnet.

Über Netzwerkkabel können nun n GeViScope Geräte angeschlossen werden. Wie schon unter b) beschrieben, können nun IP-Dome an jedes GeViScope angebunden werden, soweit es die Aufzeichnungs-Parameter zulassen. Die Bedienung erfolgt dann zentral von dem Management-System GeViSoft aus.

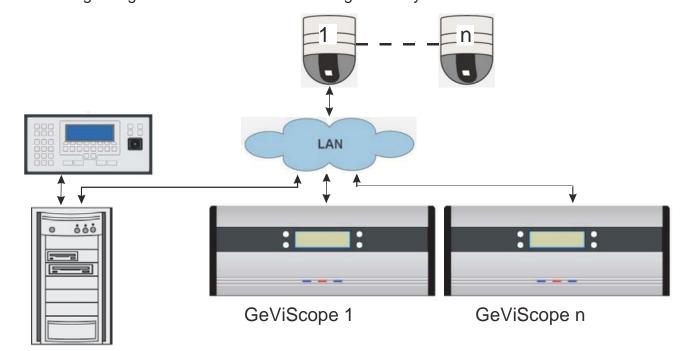

PC mit GeViSoft-Dongle und entspr. Lizenzen

Abb. 07

### 2.5 Programmierung von IP-Domen in GSC-Setup

IP-Dome werden im Setup des GeViScopes eingebunden / aktiviert. Hierbei sollte die ID-Adresse des einzustellenden Domes und dessen Protokoll-Nr. überprüft werden. ID **muss** 001, das Protokoll die Nr. 20 sein (GEUTEBRÜCK/ JVC-Protokoll, s. Abschnitt 2.2). Nachdem die Dome an einen Switch angeschlossen und ihre Spannungsversorgungen eingeschaltet sind, können nun im Menü

"Hardware" durch "Hinzufügen" die erkannten "CAM2IPs" addiert werden. Danach gibt man den einzelnen Domen eine entsprechende IP-Adresse. Im Menüpunkt "Telecontrol" fügt man nun den sog. "CAM2IP-Port" hinzu und konfiguriert ihn auf das benötigte Protokoll. Danach muss allen IP-Domen die Bus-Adresse "1" zugeordnet werden. Jetzt sind alle an diesem Gerät eingestellten Dome steuerbar.

**Hinweis:** Sollte die Dome-ID (im Dome) auf "000" stehen, befindet er sich im Testmodus und ist nicht steuerbar!

### 2.5.1 Programmierung von VIPCAM-Domen in GSC-Setup

Im GSCSetup werden die im LAN erreichbaren VIPCam-Dome automatisch gesucht. Sie erscheinen in der Hardware Module List.

Es sind folgende Schritte erforderlich:

- Zuordnung einer IP-Adresse und eines Funktionspaketes (Function package).
- Hinzufügen und Konfiguration der Medienkanäle (Media channels).
- Hinzufügen des Netzwerk-Ports in Telecontrol
- Überprüfung der Domefunktionen in Telecontrol

Danach stehen die angeschlossenen VIPCAM-Dome im GeViScope / re\_porter zur Verfügung.




#### **Unbedingt beachten:**

Die einwandfreie Funktion der VIPCAM-Dome ist erst ab der GeViScope/re\_porter Softwareversion 5.0.790.48 gewährleistet. Update-Download unter www.geutebrueck.de

#### Hinzufügen der VIPCAM-Dome

Öffnen Sie GeViScope Setup mit einem Doppelklick auf das Icon GscSetup




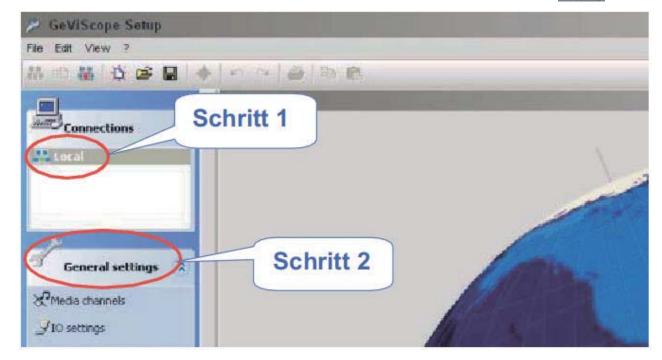

Schritt 1: Verbinden Sie im Menü Connections das GeViScope mit einem Server.

**Schritt 2:** Öffnen Sie mit einem Klick mit der linken Maustaste das Menü General Settings.

Schritt 3: Klicken Sie im Menü General Settings auf den Menüpunkt Hardware. Es wird die angemeldete und konfigurierte Hardware des Basisgerätes aufgelistet.

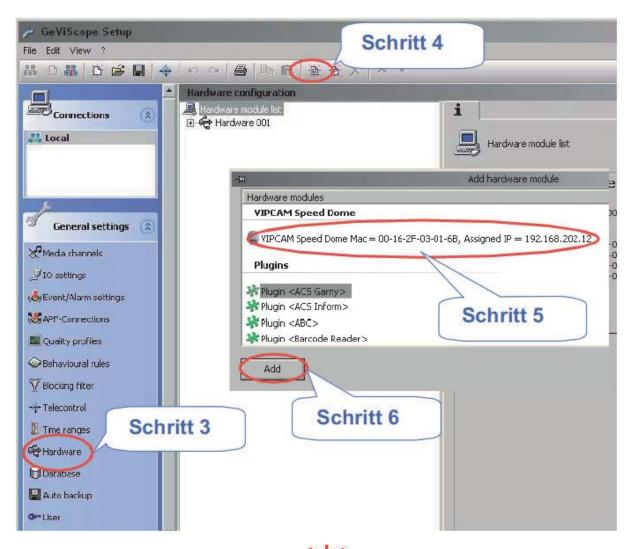

Schritt 4: Ein Mausklick auf den Button



[Hinzufügen] öffnet das Kontextmenü.


**Schritt 5:** In der erscheinenden Liste markieren Sie bitte die Module, die Sie hinzufügen möchten.

Schritt 6: Bestätigen Sie die Auswahl indem Sie auf Add [Hinzufügen] klicken. Es erscheinen nun die zusätzlichen VIPCAM-Dome in der Hardwaremodulliste.

Klicken sie auf das Ikon , um die Einstellungen an den Server zu senden.

Schritt 7: Markieren Sie den zu konfigurierenden Dome.

Schritt 8: Vergeben Sie im Register VIPCAM Speeddome settings eine verfügbare IP Adresse.

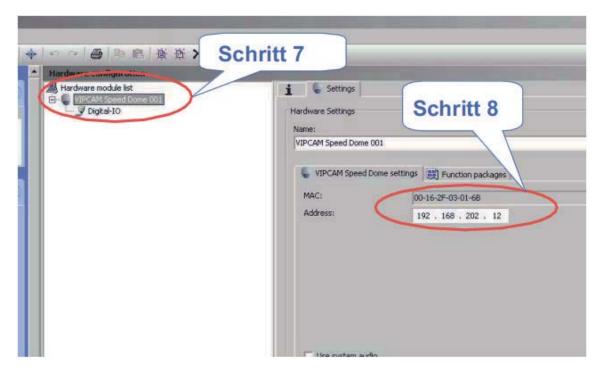

#### Installationshinweise zur IP-Adresskonfiguration:

VIPCAM-Dome verwenden statische IP Adressen. Daher muss die IP Adresse des GeViScopes eine IP Adresse aus dem gleichen IP-Subnetz, wie die VIPCAM-Dome haben.

#### a) Statische IP Adresse

Dem GeViScope wird eine feste statische IP-Adresse mit dem selben IP-Subnetz der VIPCAM- Dome vergeben.

Dies ist die bevorzugte Konfiguration für ein GeViScope, das VIPCAM-Dome verwendet.

#### b) 2 Netzwerkkarten

Alternativ zu a) kann eine 2. Netzwerkkarte im GeViScope installiert werden. Diese ermöglicht einen dualen Betrieb von DHCP und statischer IP. Die Kommunikation mit den VIPCAM-Domen erfolgt über die 2. Netzwerkkarte, die mit einer statischen IP Adresse wie in a) konfiguriert wird.

#### c) DHCP Modus

Einem GeViScope, welches im DHCP Modus läuft, muss vom DHCP Server entweder eine stati- sche IP-Adresse oder eine IP-Adresse aus dem gleichen IP-Subnetz der VIPCAM-Dome vergeben werden.



#### **ACHTUNG:**

Ein Verbindungsverlust zum DHCP Server kann zu einem Verbindungsverlust zu den VIPCAM- Domen führen!

Dieser Betriebsmodus sollte nur verwendet werden, wenn eine ständige Verbindung zum DHCP Server gesichert ist!

Verwendung von VIPCAM-Domen in IP Netzwerken mit Routern:

VIPCAM-Dome verwenden in der aktuellen Softwareversion UDP Broadcastpakete für die Lokalisierung und Statusübertragung.

Eventuell vorhandene Router müssen so konfiguriert werden, dass >alle< TCP und UDP Pakete mit den Portnummern


#### 12010 bis 12013

in beide Richtungen weitergeleitet werden.

Wenn die VIPCAM-Dome nicht lokalisiert werden können, sind die Router für den VIPCAM-Dome Betrieb nicht korrekt konfiguriert.

**Schritt 9:** Überprüfen Sie im Register Function packages [Funktionspakete] ob das geeignete

Funktionspaket (Mpeg4CCTV) eingestellt ist.

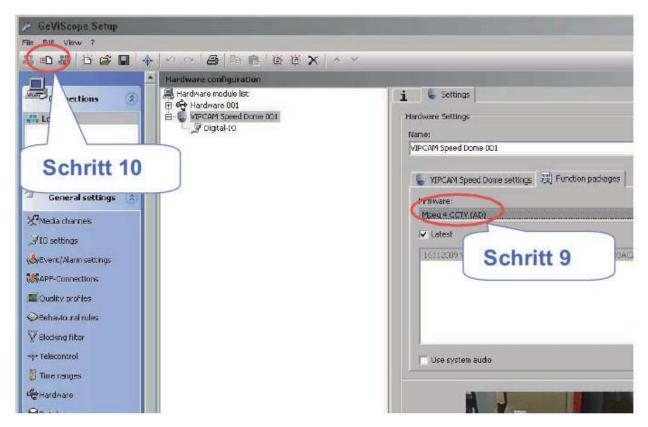

Wenn mehrere Funktionspakete vorhanden sind, können Sie durch anklicken der Funktion Latest [Neustes] bestimmen, dass immer die neueste Version geladen wird.

Schritt 10: Wenn Sie alle Einstellungen nochmals überprüft haben, klicken sie auf das


Ikon iii, um die Einstellungen an den Server zu senden.

Hinzufügen und Konfiguration der Medienkanäle (Media channels)

**Schritt 11:** Klicken Sie im Auswahlmenü General settings [Generelle Einstellungen] auf Media channels [Medienkanäle], um die Medieneinstellung zu initialisieren. Es werden die Medienkanäle des Basisgerätes angezeigt.




"Hinzufügen" öffnet das Kontextmenü.

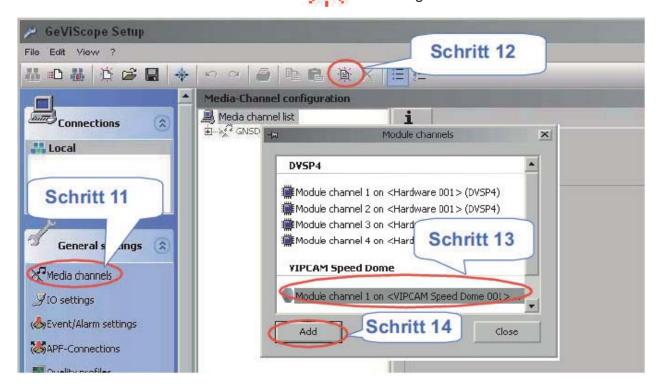

**Schritt 13:** In der erscheinenden Liste markieren Sie bitte die Kanäle, die Sie hinzufügen möchten.


Schritt 14: Bestätigen Sie die Eingabe, indem Sie auf Add [Hinzufügen] klicken.

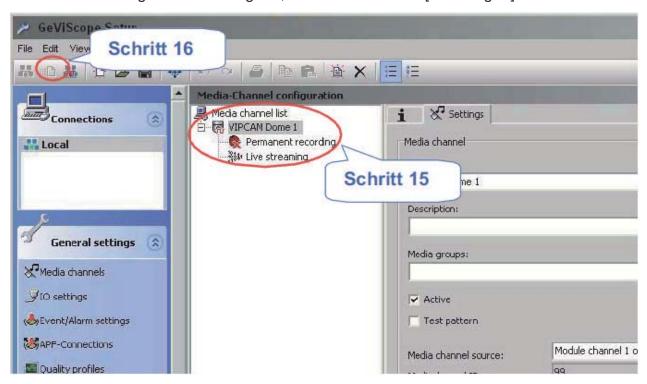

Schritt 15: Parametrieren Sie die Medienkanäle wie in der Online-Hilfe beschrieben.
Schritt 16: Wenn Sie alle Einstellungen nochmals überprüft haben, klicken sie auf das Ikon ; um die Einstellungen an den Server zu senden.

#### **Einstellungen in GSCSetup / Telecontrol**

**Schritt 17:** Klicken Sie im Auswahlmenü General settings [Generelle Einstellungen] auf Telecontrol.

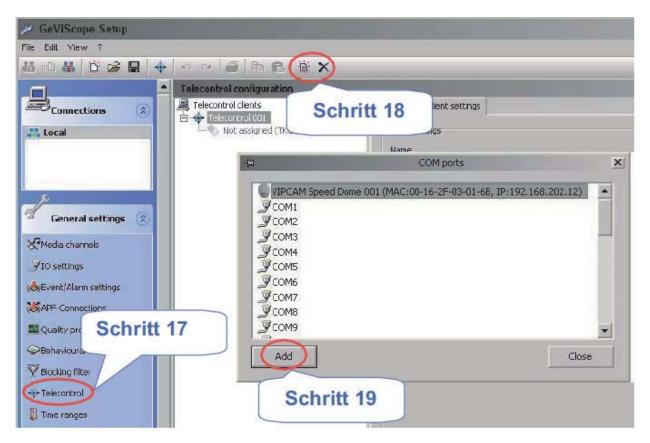

Schritt 18: Ein Mausklick auf den Button



"Hinzufügen" öffnet das Kontextmenü.

**Schritt 19:** In der erscheinenden Liste markieren Sie bitte den VIPCAM-Dome, den Sie hinzufügen möchten. Bestätigen Sie die Eingabe, indem Sie auf Add [Hinzufügen] klicken.


Schritt 20: Klicken Sie in der Auswahlliste auf den hinzugefügten Dome.

Schritt 21: Ein Mausklick auf den Reiter "Camera Settings" öffnet das Kontextmenü.

Schritt 22: Klicken Sie auf den Button "Telecontrol".

Es öffnet sich das Fernbedienungsfenster für den VIPCAM-Dome.


**Schritt 23:** Überprüfen Sie die Funktionen des Domes. Klicken Sie den Joystick oder die Schieberegler an, halten die Maustaste gedrückt und bewegen Sie z.B. den Joystick. Die Reaktion sehen Sie im Videokontrollfenster des Reiters Camera Settings.

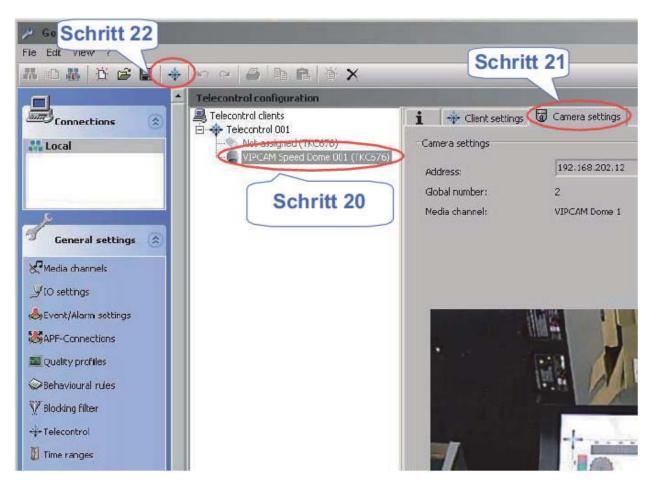



**Schritt 24:** Um das OSD-Menü des VIPCAM-Domes sichtbar zu machen, klicken Sie auf den Button "Function V On" oder "Camera ON".




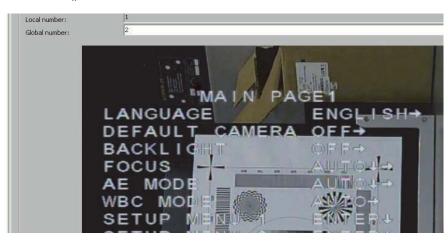

# 3. Bedienung und Einstellung der Kamera

# 3.1 OSD Menü Anzeigeformat

Die dargestellten Informationen werden in der OSD- (On-Screen-Display) Menü-Baumstruktur beschrieben. Die Position auf dem Bildschirm und die Funktionsbeschreibung entnehmen Sie der nachfolgenden Tabelle.

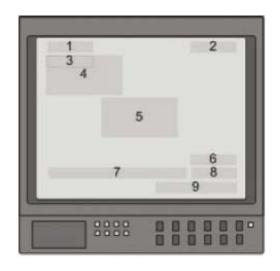

Position	Funktion	OSD Anzeige	Beschreibung
1		ohne Funktion	nicht enthalten
2	Alarm	ALARM	Alarm Meldung
		A	Auto-Fokus-Modus
3	Fokus Modi &	M	Manueller Fokus-Modus
3	Backlight	X	Backlight Compensation AUS
		В	Backlight Compensation AN
		XX(Dome-Typ)	
4	Startmeldung	ID: 001 (Default)	Dome-Typ, Bus-Adresse,
7	Startmeldung	DSCP/9600 (Default)	Protokoll und Baud Rate
		INITIALISIERUNG	
		Schwenken Fehler	Angeige van Fahlern heim
5	Fehlermeldung	Neigen Fehler	Anzeige von Fehlern beim Startvorgang
		KamModul Fehler	
6	Zoom-Faktor	x1	Momentaner Zoom-Faktor
	200m-i aktor	<b>A1</b>	(Optisch /Digital)
7	Titel	<ul> <li>maximal</li> </ul>	20 Zeichen pro Titel
,	TILOI	• 16 Ti	tel sind verfügbar
8	Kamera ID	001	Anzeige d. Bus-Adresse
9	Zeit	XXXX/XX/XX XX:XX	Jahr/Monat/Tag Stunde:Minute

# 3.2 OSD-Menü Baumstruktur

Im nachfolgenden Abschnitt wird die OSD-Menü-Struktur und das Setup beschrieben. Der Stern steht für "**Werkeinstellung**".

Die ausführliche Funktionsbeschreibung folgt in Abschnitt 4.3 Menüeinstellungen.

Begriff	Ebene 1	Ebene 2	Ebene 3	Werk- einst.
SPRACHE	<ital>, <japanis< td=""><td colspan="2">REINF. CHINES.&gt;, <franz.>, <deutsch>, CH&gt;, <polnisch>, <portug.>, ANISCH&gt;, <tuerkisch></tuerkisch></portug.></polnisch></deutsch></franz.></td><td>ENGLISCH</td></japanis<></ital>	REINF. CHINES.>, <franz.>, <deutsch>, CH&gt;, <polnisch>, <portug.>, ANISCH&gt;, <tuerkisch></tuerkisch></portug.></polnisch></deutsch></franz.>		ENGLISCH
STANDARD KAMERA	<an>, <aus></aus></an>			AN
BEL. KOMP.	<an>, <aus></aus></an>			AUS
FOKUS	AUTO	AF MODUS: <zoom td="" trig<=""><td><normal>, <intervall>,</intervall></normal></td><td>NORMAL</td></zoom>	<normal>, <intervall>,</intervall></normal>	NORMAL
	MANUELL		CHW. <01>~<08>	
	BELICHTUNGS- KOMPENSATION	<+10.5dB>	CHTUNGSWERT: <-10.5dB> ~	AUS
		AUTO		
		HELLIGKEIT	HELLIGKEITSWERT <00>~<31>	
		SHUTTER	SHUTTER GESCHW. <1/10000>~<1>SEK.	
AE MODUS	AE MODUS	BLENDE	BLENDENZAHL <zu>, <f1.6> ~ <f28></f28></f1.6></zu>	
			HELL. WERT: AUTO	
			SHUTTER GESCHW.	
		MANUELL	<1/10000>~<1>SEK.	
			BLENDE <f1.6>~<f28></f28></f1.6>	
			VERST. <-3>dB ~ <28>dB	
	BEENDEN	JA		Α
	AUTO (Auto White	Balance)		☆
	INNEN			
WBC MODUS	AUSSEN ATTACA (Auto Tarabia a Milita)			
	ATW (Auto-Tracking White)  R VERST. <000>~<127>		00. 407	
	MANUELL	B VERST. <0		
	ZOOM GESCHW.	<1>~<8>	00>~<121>	8
	DIGITAL ZOOM	<an>, <aus></aus></an>	_	AN
	SLOW SHUTTER	<an>, <aus></aus></an>		AUS
	BILDUMKEHR	<an>, <aus></aus></an>		AUS
EINST.	STANDBILD	<an>, <aus></aus></an>		AUS
MENUE 1	KANTENANH.	<01>~<16>		11
	STABILIZER	<0N>. <0FF>		OFF
	STABLE ZOOM	<on>. <off></off></on>		OFF
	BEENDEN	JA		
EINST.	FLIP	<aus>, <m.e< td=""><td>&gt;, <bild></bild></td><td>AUS</td></m.e<></aus>	>, <bild></bild>	AUS
MENUE 2	WINKEL-EINST.		. <-10°~+10°>	0
	VVIININLL-EIIVOI.	MAX. WINKE	L <080° ~ 100°>	90
	PROPORT. ZOOM	<an>, <aus></aus></an>	•	AUS
	AUTO KALIBR.	<an>, <aus></aus></an>	<b>&gt;</b>	AUS
	PASSWORT	<an>, <aus></aus></an>		AUS

EINST.	SYSTEM RESET	JA	
	SCAN MODE	<l>, <p></p></l>	I
MENUE 2	BEENDEN	JA	
ID ANZEIGE	<an>, <aus></aus></an>		AN
TITEL ANZEIGE	<an>, <aus></aus></an>		AUS
TITEL EINST.	<01> ~<16>		01
	VORG. SETZEN	<001>~<256>	EINGABE
VORGABE	VORG. START	<001>~<256>	EINGABE
	BEENDEN	JA	EINGABE
	SEQUENZ LINIE	<1> ~<8>	1
	SEQUENZ PUNKT	<01> ~<32>	01
	VORGABE.	<001>~<255>, <ende></ende>	001
SEQUENZ	GESCHW.	<01>~<15>	01
	VERWEILZEIT	<000>~<127>SEK.	000
	SEQ. START	EINGABE	
	BEENDEN	JA	
	AUTOS. LINIE	<1> ~<4>	1
	STARTPUNKT	<finden>, <speichern></speichern></finden>	
	ENDPUNKT	<pre><finden>, <speichern></speichern></finden></pre>	
AUTOSCHW.	RICHTUNG	<rechts>, <links></links></rechts>	RECHTS
	GESCHW.	<01>~<04>	01
	AUTOS. START	EINGABE	
	BEENDEN	JA	
	KAMF. LINIE	<1> ~<4>	1
	AUFZ. START	EINGABE	
KAMERAFAHRT	AUFZ. ENDE	EINGABE	
	KAMF. START	EINGABE	
	BEENDEN	JA	
	STARTFUNKTION		AUS
	MODUSWAHL	<vorgabe>, <sequenz>, <autoschw.>, <kamerafahrt></kamerafahrt></autoschw.></sequenz></vorgabe>	VORGABE
	VORG. PUNKT	<001>~<256>	001
STARTEINST.	SEQUENZ LINIE	<1>~<8>	1
01741111011	AUTOS. LINIE	<1> ~<4>	1
	KAMF. LINIE	<1> ~<4>	1
	RUECKKEHRZEIT	<1>~<128>MIN.	1
	START	EINGABE	
	BEENDEN	JA	
ID FUNKTION	<auto></auto>	GRENZWERT <01> ~ <29> Light Source IR/Visible	
IR FUNKTION	<manuell></manuell>	<an>, <aus> GRENZWERT &lt;01&gt; ~ &lt;29&gt; Light Source IR/Visible</aus></an>	AUTO
	<kabel></kabel>	(Alarm-Pin 8: offen = Farbmodus; geschl. = SW- Modus)	

	ALARM PIN	<1> ~<8>		1
	ALARM SCH.	<an>, <aus></aus></an>		AUS
	ALARM TYP	· ·	nal Offen), <nc> (Normal Geschl.)</nc>	N.C.
	7.2		>, <sequenz>,</sequenz>	
ALARM –	ALARMAKTION	<autosch< td=""><td>.,</td><td>VORGABE</td></autosch<>	.,	VORGABE
EINSTELLUNG		<kameraf< td=""><td>AHRT&gt;</td><td></td></kameraf<>	AHRT>	
	VORG. PUNKT	<001>~<256>		001
	SEQUENZ LINIE	<1> ~<8>		1
	AUTOS. LINIE	<1> ~ <4>		1
	KAMF. LINIE	<1> ~ <4>		1
	VERWEILZEIT		7>sec, <immer></immer>	IMMER
	BEENDEN	JA		
	ERK. SCHALTER	<an>, <aus< td=""><td></td><td>AUS</td></aus<></an>		AUS
	ERK. MODUS		DKUS>, <fix fokus="">, <fix ae="">, NG&gt;; AUS: KEIN</fix></fix>	
	BLOCK MODUS	KEIN; BEWI	EGUNG: <an>, <aus></aus></an>	
ALARMERK.	RAHMEN	KEINI: BEWI	EGUNG: <01> ~ <04>	
	SETZEN	KEIN, BEVVI	EGUNG. <01> ~ <04>	
	RAHMEN DEAKT.	<b>-</b>	EGUNG: <01> ~ <04>	
	GRENZWERT	<b>⊣</b> ′	EGUNG: <001> ~ <255>	
	BEENDEN	JA		
WDD ELINICAL	<an>, <aus></aus></an>			4110
WDR FUNKTION	<auto>. <rf>. <dc></dc></rf></auto>			AUS
	PRIVACY	ANI ALIO		4110
	SCHALTER	<an>, <aus></aus></an>		AUS
	TRANSPARENZ	<an>, <aus:< td=""><td></td><td>AUS</td></aus:<></an>		AUS
	FARBE	<schwarz>, <hellgrau>, <dunkelgrau>, <weiss>, <rot>, <gruen>, <blau>, <cyan>, <gelb>, <magenta></magenta></gelb></cyan></blau></gruen></rot></weiss></dunkelgrau></hellgrau></schwarz>		SCHWARZ
PRIVACY MASK		,	H MITTE: L/R	
			V MITTE: U/O	
	MASKE SETZEN	<01>~<24>	H GROESSE <000> ~ <080>	
			V GROESSE <000> ~ <060>	
	MASKE LOESCH	<01>~<24>	BEENDEN + SPEICHERN	
	BEENDEN	JA		
	ZEITANZEIGE	<an>, <aus:< td=""><td>&gt;</td><td></td></aus:<></an>	>	
	JAHR EINST.	<00> ~ <99>		
	MONAT EINST.	<01>~<12>		
ZEITEINSTELLG.	TAG EINST.	<00>~<31>		
	STUNDE EINST. MINUTE EINST.	<00> ~ <23>		
	BEENDEN + SP.	<00> ~ <59>		
	ZEITSCHALTER	<an> <aus< td=""><td>i&gt;</td><td></td></aus<></an>	i>	
	ZEITPUNKT	<01> ~<32>		01
	STUNDE	<00> ~ <23>		00
	MINUTE	<00> ~ <59>		00
		KEIN	KEINE FUNKTION	☆
		VORGABE SEQUENZ	VORGABEPUNKT <001> <256> SEQUENZ LINE <1>~<8>	
ZEITPLAN	MODUS	AUTOSCH	AUTOSCHW. LINIE <1> ~ <4>	
		KAM	KAMFAHRT LINIE <1> ~ <4>	
		IR	IR FUNKTION <auto>, <an>,</an></auto>	
	ZEITPLAN	FUNKTION	<aus></aus>	
	RESET	JA		
	BEENDEN	JA		
BEENDEN OSD	JA			

# 3.3 Einstellungsmenü

Die verfügbaren Funktionen und Parametereinstellungen Ihrer Hochgeschwindigkeits -Dome - Kamera werden mit einem Bediengerät über das OSD (On Screen Display)-Menü konfiguriert.

Die einzelnen Elemente des OSD-Menüs werden in den folgenden Abschnitten beschrieben.


HAUPTSEITE 1 DEUTSCH SPRACHE STANDARD KAMERA ΑN GEGENLICHT AUS **FOKUS AUTO** AE MODUS **AUTO** WBC MODUS **AUTO** EINSTELLMENÜ 1 **FNTFR** EINSTELLMENÜ 2 **ENTER** 

_			_
	HAUPTSEITE 2		)
	ID ANZEIGE	AN	
	TITELANZEIGE	AUS	
	TITEL EINSTELLUNG	01	
	VORGABE	ENTER	
	SEQUENZ	ENTER	
	AUTOM. SCHWENKEN	ENTER	
	KAMERAFAHRT	ENTER	
	STARTEINSTELLUNG	ENTER	
			J

# OSD-EINSTELLUNG mit dem GEUTEBRÜCK Bediengerät MBeg/GCT

Um in das OSD-Menü Ihrer Kamera zu gelangen, drücken Sie die <KAMERA AN> Taste Ihres MBeg/GCT.

Bewegen Sie mit dem Joystick Ihres Bediengerätes den OSD-Cursor zum gewählten OSD - Menüpunkt.

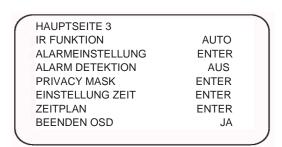

- Bei Menüpunkten mit einem → Zeichen, drücken Sie den Joystick in Richtung rechts oder links, um den Menüpunkt auszuwählen und zu konfigurieren.
- Bei Menüpunkten mit einem ↓ Zeichen, drücken Sie die <KAMERA AUS> Taste des Bediengerätes, um in das dazu gehörige Untermenü zu gelangen.
- Bei Menüpunkten mit einem → Zeichen, drücken Sie den Joystick in Richtung recht oder links zur Auswahl einer Funktion und danach die <KAMERA AUS> Taste, um in das dazu gehörige Untermenü zu gelangen.

Weitere Einzelheiten zur Bedienung finden Sie in der Dokumentation Ihres Bediengerätes.

### OSD-EINSTELLUNG via GscTelecontrol (nur im GscSetup möglich!)

Um das OSD-Menü des Domes aufzurufen, drücken Sie den <CAMERA ON>-Button. Bewegen Sie mit dem Joystick den OSD-Cursor zum gewählten OSD - Menüpunkt.

- Bei Menüpunkten mit einem → Zeichen, bewegen Sie den Joystick nach links oder rechts, um die Funktion dieses Menüpunktes auszuwählen.
- Bei Menüpunkten mit einem ↓ Zeichen, drücken Sie den <CAMERA OFF>- Button (= <ENTER>) um in das dazu gehörige Untermenü zu gelangen.

Alle folgenden Bewegungen im OSD-Menü werden so ausgeführt!

### 3.3.1 LANDESSPRACHE

Die Kamera unterstützt die OSD-Funktionen in verschiedenen Landessprachen. Es sind aktuell folgende Landessprachen verfügbar: Englisch (Werkeinstellung), Chinesisch, Französisch, Deutsch, Italienisch, Japanisch, Polnisch, Portugiesisch, Russisch, Türkisch und Spanisch.

Wenn Sie eine Sprache mit den Joystick (Rechts/Links) ausgewählt haben, wechselt das OSD-Menü automatisch in die gewählte Sprache.

# 3.3.2 STANDARD (Werkeinstellung) KAMERA

Wählen Sie "AN" um die Kamera auf die Werkeinstellungen zurückzusetzen. Wenn Sie Änderungen vornehmen wollen, wählen Sie "AUS". Werden Änderungen vorgenommen, geht diese Anzeige automatisch auf "AUS".

# 3.3.3 GEGENLICHT (Gegenlichtkompensation)

Sind sehr helle Flächen hinter einem Objekt in Bildmitte, so wird dieses zu dunkel dargestellt. In solchen Fällen "AN" wählen. Das Objekt im Vordergrund wird dann heller dargestellt. Das Kompensationslevel ist im Bereich 0 bis 30 einstellbar.



### **3.3.4 FOKUS**

Für die optische Fokussierung kann zwischen dem "Manuellen Fokus Modus" und dem "Autom. Fokus Modus" gewählt werden.

#### AUTOMATISCH

Die optimale Schärfe wird durch einen internen Regelkreis ständig optimiert. Hier gibt es drei Modi für unterschiedliche Bedingungen:

Normaler AF-Modus (Autofokus ): der Dome regelt den Fokus ständig nach.

**Zoom Trigger Modus:** wenn die Brennweite verändert wird, regelt der Dome den Fokus nach Beenden des Zooms nach (Werkeinstellung ist 5 Sek.).

**Intervall AF-Modus:** wenn die Brennweite in bestimmten Intervallen verändert wird, regelt der Dome den Fokus in einstellbarer Zeit nach (Werkeinstellung 5 Sek.).

#### MANUELL

Der Bediener kann mit den Potis <FocusNear(Nah)/Far(Fern)> auf der Oberfläche die Bildschärfe verändern; die Geschwindigkeit ist variabel von 1 bis 8.



Beachte! Der AF-Modus wird nach jedem Neustart wieder aufgenommen.

# 3.3.5 AE MODUS (Belichtungsregelung)

Hier kann die Funktion der Belichtungsregelung gewählt werden. Ein manueller Wert reicht von -10,5 dB bis +10,5 dB. Mit "AUS" sind folgende Punkte erreichbar:

# • AUTOMATISCH (wird dieser Modus deaktiviert, schaltet der IRC-Filter NICHT mehr automatisch um!)

Bei dieser Einstellung beeinflusst die Kamera die Regelkreise VERSCHLUSS, BLENDE, HELLIGKEIT + AGC selbsttätig.

Ziel ist es, immer den vollen Videoausgangspegel zu erreichen. Diese Einstellung ist die beste, wenn durch die Anwendung keine anderen Prioritäten gesetzt werden.

#### VERSCHLUSS (Shutter, Belichtungszeit)

Hier wirkt zuerst die Belichtungszeitregelung. Ist diese an ihrer Grenze, greifen "BLENDE" und dann "AGC" ein.

#### • BLENDE (Iris)

Hier wirkt zuerst die Blendenregelung. Ist diese an ihrer Grenze, greifen "VERSCHLUSS" und dann "AGC" ein.

#### • HELLIGKEIT (Brightness)

Der interne Rechenalgorithmus beeinflusst hier sowohl Blende als auch AGC.

Die Helligkeit wird geregelt: bei dunkler Umgebung von der Verstärkung (Gain) und bei hellerer Umgebung von der Blende (der Wert reicht von 00 bis 31).

### AGC (Automatische Verstärkungsregelung)

Bei dieser Option wirkt zuerst die Verstärkungsregelung. Die AGC kann nur ausgeschaltet werden. Es wirken nur "BLENDE" und dann "VERSCHLUSS". Diese Einstellung ist empfehlenswert, wenn ein zu starkes Bildrauschen verhindert werden soll (ist jedoch mit Verlust an Lichtempfindlichkeit verbunden).

#### Manuell

In diesem Modus können die Verschlusszeiten zwischen 1/10.000 und 1, die Blende zwischen F1.6 bis F28 und die Verstärkung von -3dB bis +28 dB eingestellt werden.

# 3.3.6 WBC MODUS (Weißbalance)

Eine Digitalkamera benötigt eine Referenz-Farbtemperatur, um die Qualität von Lichtquellen messen zu können und in der Folge die Farben zu berechnen. Die Maßeinheit ist Grad Kelvin (K). Die folgende Tabelle zeigt die Farbtemperaturen verschiedener Lichtquellen.

Hier wird gewählt, wie die Weißbalance eingestellt werden soll.

Lichtquelle	Farbtemperatur in K
Bedeckter Himmel	6.000 - 8.000
Mittagssonne/klarer Himmel	6.500
Wohnungsbeleuchtung	2.500 - 3.000
75 Watt Glühlampe	2.820
Kerzenflamme	1.200-1.500

#### AUTOMATISCH

Die Weißbalance erfolgt in dem zur Verfügung stehenden Farbtemperaturbereich zwischen 3.000 K und 7.500 K (empfohlen).

INNEN (Indoor) > auf der Basis von 3200 K; AUSSEN (Outdoor) mit 5860 K.

ATW (Auto Tracking White) > Regelung im Bereich von 2000 K bis 10000 K.

#### MANUELL

In dieser Betriebsart wird die Weißbalance manuell eingestellt und bleibt für alle Lichtverhältnisse gleich. R-gain (Rot-Verstärkung) und B-gain (Blau-Verstärkung) können in einem Bereich von 0 bis 127 verändert werden. Nur zu empfehlen bei konstanter Farbtemperatur (z. B. Innenräume, Tunnels, etc.).

WBC MENÜ R VERSTÄRKUNG 50 B VERSTÄRKUNG 50

# 3.3.7 EINSTELLMENÜ 1



### ZOOMGESCHWINDIGKEIT

Der Bediener kann eine gewünschte Zoomgeschwindigkeit einstellen zwischen 8 (Werkeinstellung = schnell) und 1 (langsam).

#### DIGITALER ZOOM

Der Digital Zoom ist max. 12-fach. Nach Erreichen der längsten optischen Brennweite läuft der digitale Zoom bis zum maximalen Wert weiter.

**Achtung!** Der Digital Zoom nimmt ein Teil des Bildes und dehnt ihn. Deshalb ist die Bildqualität hierbei reduziert! Die Werkeinstellung ist <AN>.

### LANGZEITBELICHTUNG (slow shutter)


Die Verschluss-Geschwindigkeit regelt die Dauer, die der Bildsensor dem Licht ausgesetzt ist. Um klare Bilder in einem dunklen Umfeld zu erzeugen, aktivieren Sie bitte diese Funktion und wählen Sie eine längere Verschlusszeit.

Durch die Integration mehrerer Bilder kann die Lichtempfindlichkeit im gleichen Verhältnis gesteigert werden. Bei zu hoher Integration erscheinen Bewegungen jedoch verwischt (Mann geht durch die Wand). Der Dome stellt den Slow Shutter automatisch auf die Helligkeitsverhältnisse der Installationsumgebung ein. Objekte unterhalb von ca. 0,2 Lux können so noch sichtbar gemacht werden (Werkeinstellung=AUS) .

### BILDUMKEHRUNG (z. B. für Demozwecke > Dome STEHT)

Wählen Sie die Option <AN> wenn Sie das dargestellte Bild horizontal und vertikal spiegeln möchten (siehe Darstellungen unten). **Privacy Masking wird in diesem Fall deaktiviert!** Die Werkeinstellung ist <AUS>.

BILDUMKEHRUNG (AUS)

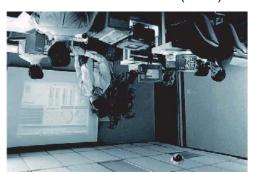

BILDUMKEHRUNG (AN)



## • STANDBILD (Freeze)

Hier kann während der Anfahrt zu einer Festposition das vorher gezeigte Bild "eingefroren" werden. Das Standbild verschwindet erst, wenn die gewünschte Festposition erreicht ist.

### KANTENANHEBUNG (Aperture)

Eine Verbesserung des Schärfeneindrucks kann durch Variation der elektronischen Apertur erreicht werden. Achtung! Zu viel Apertur wirkt plastisch und verursacht stärkeres Rauschen im Bild. Hier sind Einstellwerte von <01> bis <16> möglich, wobei <01> gleichbedeutend ist mit "keine Anhebung" (Werkeinstellung ist <11>).

#### BILDSTABILISIERUNG

Der Anwender kann die Bildstabilisierungsfunktion einschalten <AN>, um ein Zittern des Bildes zu reduzieren, welches durch Erschütterungen oder andere Umstände hervor gerufen werden kann. Somit ist es möglich, eine fast 90%ige Unterdrückung des Zitterns zu erreichen bei Frequenzen um die 10 Hz.

Dabei wird der Bildausschnitt und die Auflösung verändert, während die Empfindlichkeit beibehalten wird, weil diese Funktion auch den Digital-Zoom mit einschließt. Die Werkeinstellung ist <AUS>.

#### STABILER ZOOM

Mit aktivierter Funktion beginnt die Bildstabilisierung OHNE die plötzliche Änderung des Bildausschnitts in horizontaler Richtung. Somit ist eine Stabilität bis zum 33-fachen optischen Zoom möglich. Werkeinstellung ist <AUS>.

#### BEENDEN

Sie verlassen < EINSTELLMENÜ 1> und gehen zurück zur < HAUPTSEITE 1>.

## 3.3.8 EINSTELLMENÜ 2

E	INSTELLMENÜ 2		
D	REHEN	ENTER	
V	INKELJUSTIERUNG	ENTER	
G	ESCHW. PRO ZOOM	AUS	
A	UTOM. KALIBRIERUNG	AUS	
P.	ASSWORT	AUS	
S	YSTEM RESET	JA	
S	CAN MODE	I	
( В	EENDEN	JA	

### • DREHEN (FLIP/elektronische oder mechanische Bildumkehr)



**Achtung!** Wenn die Bildumkehr aktiv ist, wird automatisch die Privacy Masking Funktion deaktiviert!

Der Beobachter kann ein Objekt kontinuierlich verfolgen, auch wenn es sich unter der Kamera hindurch bewegt. Hierbei wird das Bild, wenn die Kamera senkrecht nach unten sieht, elektronisch oder mechanisch umgekehrt. Ohne eine dieser Maßnahmen würde das Bild, wenn das Objekt sich weiterbewegt, auf dem Kopf stehen. Bei der elektronischen Lösung bewegt die Kamera sich in der Richtung weiter, in die sie vorher schon gelaufen ist. Das Bild wird elektronisch gespiegelt.

Vorteil: keine Bildstörung. Bei der mechanischen Lösung wird die Kamera um 180° gedreht und läuft danach weiter. Hieraus ergibt sich eine geringfügige Störung durch das schnelle Drehen der Kamera.

(Anm.: ältere Dome - Kameras konnten nicht 180°, sondern nur 90° neigen.)

#### **BILD**

Bei senkrechtem Blick nach unten wird das Bild, wie schon erklärt, elektronisch gespiegelt. Das ergibt ein kurzes Zucken im Bild.

### ME (Mechanischer Flip)

Die Kamera wird, bei senkrechtem Blick nach unten, sehr schnell (400°/s) um 180° gedreht. Dies kann eine kurze Bildstörung durch das verwischte Bild der Kamera beim schnellen Drehen verursachen.



Achtung! Falls ein Fixpunkt (für Festpositionen oder Sequenzen) gesetzt wurde, der nur mit dieser Funktion erreichbar war, wird dieser unerreichbar, wenn die Bildumkehr deaktiviert ist!

#### **AUS**

Schaltet die Flip-Funktion aus.



### WINKELJUSTIERUNG (Min/Max)

Mit dieser Einstellung ist es möglich auch Objekte zu sehen, die sich bis zu 10° oberhalb der horizontalen Blickrichtung (+/-10°) befinden. Das Maximum der Auslenkung ist wie folgt einstellbar:

WINKELJUSTIERUNG
MIN WINKEL -10°
MAX WINKEL 100°
BEENDEN + SPEICHERN JA

### GESCHWINDIGKEIT/ZOOM

Die manuelle Schwenk-/Neigegeschwindigkeit wird mit zunehmender Brennweite langsamer.

#### AUTOKALIBRIERUNG

Die Dome - Kamera ist auf einen horizontalen Bezugspunkt und auf einen vertikalen Infrarot - Bezugspunkt eingestellt. Durch Installation oder Wartung kann die Distanz zu diesen Bezugspunkten verändert werden. Ist diese Funktion eingeschaltet, erkennt die Dome - Kamera diese Veränderung und setzt automatisch den horizontalen Bezugspunkt zurück auf die Originalposition.

### PASSWORT

Hier kann ein neues Benutzerpasswort eingesetzt werden. "AUS" ändern auf "EIN" und mit <ENTER> bestätigen. Im Untermenü mit dem Cursor die Ziffern "0-9" anwählen und jeweils mit <ENTER> bestätigen. Das neue Passwort muss zur Bestätigung wiederholt werden. Das werkseitig eingestellte Passwort lautet "9527".

# • SYSTEM RESET (Zurückstellen)

Ein Reset stellt die Kamera auf die Werkeinstellungen (Default) zurück.

#### SCAN MODUS

Wählen Sie <P> für den Progressive Scan Mode, bzw. <I> für den Interlaced Mode (Zeilensprungverfahren) aus. Werkeinstellung ist <I>.

**Hinweis:** Wenn der Scan Mode geändert wurde, **MUSS** die Kamera einem Kaltstart unterzogen werden! Nur durch Spannung AUS / EIN wird der neue Scan Mode aktiviert. Ein Neustart-Kommando wäre nutzlos.

# • BEENDEN (EXIT)

Verlassen von < EINSTELLMENÜ 2> und zurück zum < HAUPTMENÜ 1>.

### 3.3.9 ID ANZEIGE

Diese Funktion erlaubt Ihnen die Einblendung der ID-Nummer zur Identifizierung der Dome - Kamera. Gehen Sie mit dem Joystick im <HAUPTMENÜ> zur Seite 2 und wählen den Menüpunkt <ID ANZEIGE>. Weitere Informationen zur Dome ID finden Sie im Abschnitt <u>2.4 Dome ID Einstellungen.</u>

#### AN

Einblendung der ID Adresse des aktiven Domes rechts unten auf dem Bildschirm.

#### AUS

Löschen der Einblendung.

# 3.3.10 TITEL ANZEIGE (Kamera - Titeleinblendung)

Anzeigebereiche können zur leichteren Identifizierung mit einer Texteinblendung versehen werden.

AN

Texteinblendung aktiv

AUS

Texteinblendung aus (auch wenn vorher Titel angelegt wurden)

### 3.3.11 TITEL EINSTELLUNG

Hier können Namen für verschiedene Kamerablickbereiche vergeben werden. Wenn die Kamera diese Position wieder anfährt, wird der programmierte Name eingeblendet. Bis zu 16 Titel mit max. 20 Buchstaben pro Titel können eingegeben werden.

Folgende Schritte sind notwendig:

**Schritt 1:** Bewegen Sie den Dome zu dem Blickbereich, den Sie benennen wollen.

Schritt 3: Wählen Sie eine Nummer für diese Position.

**Schritt 4:** Drücken Sie <ENTER>, um in den Editier-Betrieb zu gelangen.



**Schritt 5:** Wählen Sie ein Zeichen mit dem Joystick rechts/links aus und drücken Sie <ENTER>.

Beispiel: A "ENTER", B "ENTER", C "ENTER". Als Titel erhalten Sie: ABC

**Schritt 6:** Um einen Buchstaben zu löschen, bewegen Sie den Cursor auf den Buchstaben und drücken <ENTER>, dann auf <LÖSCHEN> und ebenfalls <ENTER>.

**Schritt 7:** Bewegen Sie den Cursor auf <SPEICHERN> und drücken <ENTER> um die Einstellungen zu speichern.

# 3.3.12 **VORGABE** (Festpositionen)

#### VOREINSTELLUNG

Bewegen Sie die Kamera zum gewünschten Bildausschnitt. Wenn der Cursor blinkt, drücken Sie <ENTER>, um den eingestellten Zielpunkt 1 zu setzen. Wiederholen Sie dies für Punkt 2, 3, etc. Insgesamt können 256 Zielpunkte vorgewählt werden (\*).

(\*) Achtung! Wenn die FPs via GscTelecontrol/MBeg bedient werden, sind diverse Festpositionen NICHT anwählbar, da sie für den Aufruf spezieller Funktionen dienen!! Siehe Appendix C.

#### VOREINSTELLUNG AUSFÜHREN

Wählen Sie den Zielpunkt, den Sie ansteuern wollen. Drücken Sie <ENTER>, und die Dome - Kamera wird den Zielpunkt anfahren.

#### BEENDEN

Verlassen des < VORGABE > Menüs > und zurück zur < HAUPTSEITE 2 >.

### **3.3.13 SEQUENZ**

Diese Funktion führt eine Sequenz von vordefinierten Einstellungen für Schwenken, Neigen, Zoom und Fokus aus. Bevor Sie eine Sequenz einstellen, müssen Sie 2 Vorgabepunkte definieren, die die Kamera anlaufen soll.

	SEQUENZ		)
1	SEQUENZ LINIE	1	
1	SEQUENZ PUNKT	01	
1	VORGABE POSITION	001	
1	GESCHWINDIGKEIT	01	
1	HALTEZEIT	001	
1	SEQUENZAUSFÜHREN	ENTER	
1	BEENDEN	JA	
/			

### • SEQUENZ LINIE (Sequenzablauf)

Hier können bis zu acht verschiedene Abläufe programmiert werden. Durch Betätigen des Joysticks rechts/links wird eine "Sequenz Linie" ausgewählt.

#### SEQUENZ PUNKT (Sequenz-Haltepunkt)

Es können bis zu 32 Positionen pro Sequenz-Verlauf programmiert werden. Diese Liste stellt die Verknüpfung mit den programmierten oder noch zu programmierenden Festpositionen her. "Sequenz Linie" fährt die hier eingegebenen Positionen nacheinander ab. Dieser Vorgang wiederholt sich so lange, bis "Sequenz" ausgeschaltet oder durch eine manuelle Anwahl unterbrochen wird.

#### VORGABE POSITION

Hier können die gewünschten Festpositionen (wenn nicht schon geschehen) programmiert werden. "BEENDEN" wird benötigt , wenn weniger als 32 Positionen in der Sequenz angefahren werden sollen. Dies bedeutet, dass z. B. bei nur 5 in der Sequenz verwendeten Positionen die Festpos. 6 als Endpunkt markiert werden muss!

#### GESCHWINDIGKEIT

Hier kann die Schwenk-/Neigegeschwindigkeit der Kamera während der Sequenz gewählt werden, von 1 (langsam) bis 15 (schnell). SCHWENKEN variiert von 10 bis 400°/s und NEIGEN von 8 bis 400°/s.

#### HALTEZEIT (Verweilzeit in Sekunden)

Für die hier eingestellte Zeit verweilt die Kamera auf der jeweiligen Position, bevor sie zur nächsten Position weiterfährt. Die Verweilzeit kann zwischen <0> bis <127> Sekunden eingestellt werden. Ist die Verweilzeit <0>, verbleibt der Dome an dieser Position für weniger als 1 Sekunde und wechselt dann zur nächsten Position.

### • SEQUENZ AUSFÜHREN

Mit diesem Kommando wird die Sequenzfunktion gestartet.

#### BEENDEN

Verlassen des **<Sequenz>** Menüs.

### 3.3.14 AUTOMATISCHES SCHWENKEN

"AutoPan" ist das automatische kontinuierliche Schwenken der Kamera zwischen zwei programmierten Punkten: dem Start- und dem Endpunkt. Wird für Start- und Endpunkt

AUTOMATISCHES SCHWENKEN
AUTOM. SCHWENKEN LINIE 1
STARTPUNKT FINDEN
ENDPUNKT FINDEN
RICHTUNG RECHTS
GESCHWINDIGKEIT 01
AUTOM. SCHWENKEN AUSFÜHREN ENTER
BEENDEN JA

der gleiche Wert gesetzt, schwenkt die Kamera endlos um 360°.

#### AUTOM. SCHWENKEN LINIE (Autopanablauf)

Hier können bis zu vier verschiedene Abläufe programmiert werden. Durch Betätigen des Joysticks wird eine Autopan Linie ausgewählt.

#### STARTPUNKT

Startposition für den Autopanablauf.

>FINDEN<: Durch Drücken von <ENTER> gelangt man in den Joystick-Modus. Mit dem Joystick kann dann die gewünschte Position eingestellt werden.

>SPEICHERN<: Durch Drücken von <ENTER> wird der Joystick Modus wieder verlassen und der Startpunkt gespeichert.



**Achtung:** Die Neige- und Zoom-Werte werden aufgezeichnet und gelten für den gewählten automatischen Schwenkablauf.

#### ENDPUNKT

Endposition für den Autopanablauf.

>FINDEN<: Durch Drücken von <ENTER> gelangt man in den Joystick-Modus. Mit


dem Joystick kann dann die gewünschte Position eingestellt werden.


>SPEICHERN<: Durch Drücken von <ENTER> wird der Joystick Modus wieder

verlassen und der Endpunkt gespeichert.

### RICHTUNG

Hier bestimmen Sie die Schwenkrichtung der Dome - Kamera. Der Dome startet z.B. im Uhrzeigersinn, wenn Sie <RECHTS> als Richtung gewählt haben. Siehe auch nachfolgende Grafik.

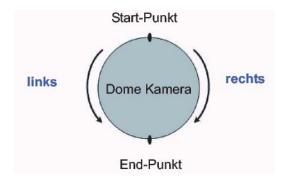

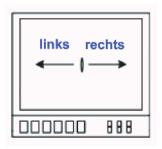

#### **GESCHWINDIGKEIT**

Geschwindigkeit der Kamera während der automatischen Schwenkfunktion. Die Geschwindigkeit ist einstellbar von 1 bis 4 (10 ~ 45°/s).

#### **AUTOM: SCHWENKEN AUSFÜHREN**

Start der automatischen Schwenkfunktion.

#### **BEENDEN**

Verlassen des Menüs < AUTOM. SCHWENKEN>.

### 3.3.15 KAMERAFAHRT

Es können vier Touren (KAMERAFAHRT) programmiert werden. Hierbei werden die Joystickkommandos, die Geschwindigkeit und die Zeit aufgezeichnet. Die Tour kann einen beliebigen Verlauf haben. Es können auch Haltepunkte enthalten sein.

KAMERAFAHRT
KAMERAFAHRTLINIE 1
AUFZEICHNUNG START ENTER
AUFZEICHNUNG ENDE ENTER
KAMERAFAHRT AUSFÜHREN ENTER
BEENDEN JA

#### AUFZEICHNUNG START

Startet die Aufzeichnung des Tourverlaufs. Bedienfehler werden natürlich mit aufgezeichnet. Deshalb vorher einen Plan für den Tourverlauf anlegen.

Schritt 1: Durch Drücken von <ENTER> gelangt man in den Joystick-Modus.

**Schritt 2:** Jetzt den geplanten Tourverlauf durchführen. Der Cursor im OSD-Menü bewegt sich automatisch auf "AUFZEICHNUNG ENDE".

**Schritt 3:** Durch Drücken von <ENTER> den Tourverlauf speichern. Achtung! Wenn der Speicher vorher die 100% erreicht, wird die Aufzeichnung automatisch gestoppt!

#### AUFZEICHNUNG ENDE

Dieses Kommando beendet die Aufzeichnung des Tourverlaufs.

#### KAMERAFAHRT AUSFÜHREN (1 - 4)

Start der <KAMERAFAHRT> Funktion.

#### BEENDEN

Verlassen des <KAMERAFAHRT> Menüs.

### 3.3.16 STARTEINSTELLUNG

Parameter für den Start werden hier eingestellt.

STARTEINSTELLUNG
STARTFUNKTION AUS
MODUS AUSWÄHLEN VORGABE
VORGABEPUNKT 001
RÜCKKEHRZEIT 001 MIN.
START ENTER
BEENDEN JA

#### STARTFUNKTION

Schaltet <STARTFUNKTION> ein oder aus.

### AUSWAHL MODUS (AUTOM. SCHWENKEN /SEQUENZ/ KAMERAFAHRT/VORGABE)

Die Kamera führt die hier gewählte Funktion aus, wenn <STARTFUNKTION> eingeschaltet und die <RÜCKKEHRZEIT> abgelaufen ist.

#### VORGABEPUNKT

Geben Sie eine Position ein (1 - 256), die in der STARTPOSITION angefahren werden soll.

#### **SEQUENZ LINIE**

Geben Sie eine Sequenz ein (1 - 8), die in der STARTPOSITION ausgeführt werden soll.

#### **AUTOM. SCHWENKEN LINIE**

Geben Sie einen Autopanablauf ein (1 - 4), der in der STARTPOSITION ausgeführt werden soll.

#### KAMERAFAHRT LINIE

Geben Sie eine Tour ein (1 - 4), die in der STARTPOSITION ausgeführt werden soll.

### • RÜCKKEHRZEIT (in Minuten)

Die Kamera zählt die <RÜCKKEHRZEIT> zurück, nachdem der Bediener die Kamera in eine beliebige Position bewegt hat.

Die <RÜCKKEHRZEIT> kann eingestellt werden im Bereich von 1 bis 128 Minuten.

#### START

Zur manuellen Ausführung (Kontrolle) der STARTFUNKTION. Nur möglich, wenn STARTFUNKTION ("HOME FUNC ON") eingeschaltet ist.

#### BEENDEN

Verlassen des **<STARTEINSTELLUNG>** Menüs.

, AANA B	1050
MAIN P	AGE 3
IR FUNKTION	AUTO
ALARM EINST	ENTER
ALARM DETEKT	AUS
WDR FUNKTION	AUS
PRIVACY MASK	ENTER
ZEIT EINST	ENTER
ZEITPLAN	ENTER
BEENDEN	JA

# 3.3.17 IR FUNKTION (schwenkbarer IR Cut Filter)

Hier wird eingestellt, wie die Farbe/SW-Funktion und das motorisch betriebene IR-Sperrfilter arbeiten soll.

#### • AUTOM.

Die Umschaltung zwischen Farbe und SW findet automatisch statt. Bei SW wird das IR-Sperrfilter aus dem Strahlengang gefahren und die Farbmodulation im Signal (nicht der Farbhilfsträger!) abgeschaltet. Der Umschaltpunkt von Farbe nach SW und umgekehrt wird durch die Einstellung <GRENZWERT> (1 - 29) bestimmt.

Ist z. B. der Wert <29> eingestellt und die Kamera befindet sich im Nachtmodus, so wird die Kamera erst etwas später wieder in den Tagmodus schalten, als bei <1> (s. u.).

#### MANUELL

#### - EIN

Schaltet die IR-Funktion ein (SW-Betrieb).

#### - AUS

Schaltet die IR-Funktion aus (Farb-Betrieb).

#### KABEL

Die Umschaltung zwischen Farbe und SW wird hier mit einem potenzialfreien Kontakt gewährleistet. Hierfür steht der 8. Alarmeingang zur Verfügung:

- geschlossen = S/W-Betrieb; - offen = Farb-Betrieb.



#### **GRENZWERT**

Hier sind Werte zwischen <1> und <29> wählbar. <1> bedeutet sehr empfindlich: die Umschaltung von Tag- zu Nachtbetrieb erfolgt bei ca. 1 Lux, jedoch kann es hier zur Oszillation zwischen Tag- und Nachtbetrieb kommen. Bei <29> schaltet der Dome zwar auch bei etwa 1 Lux in den Nachtbetrieb, aber der Wechsel von Nacht zu Tag erfolgt erst wieder, wenn die Beleuchtungsstärke den Wert von ca. 7 Lux überschreitet. Deshalb ist ein Default-Wert von <11> gewählt. Über einen externen Kontakt (z. B. Dämmerungsschalter) kann die Umschaltung manuell und damit zwangsgesteuert stattfinden.

#### LIGHT SOURCE

Hier wird gewählt, ob die Lichtquelle Infrarot oder sichtbares Licht ist.

### 3.3.18 ALARMEINSTELLUNG

Beide Dome stellen 7 + 1\* Alarmeingänge (N.O./Normal Offen oder N.C./Normal Geschlossen) und einen Alarmausgang zum Anschluss von Alarmgeräten bereit. Mit dieser Funktion kann der Dome mit einem Alarmsystem kooperieren und z.B. Ereignis-/Alarmbilder liefern.

In diesem Menü werden die Alarmparameter eingestellt.

1	AL A DIAGNICITE LLUNG		`
1	ALARMEINSTELLUNG		
П	ALARMKONTAKT	1	
ı	ALARMSCHALTER	AUS	
ı	ALARM TYP	N.C.	
ı	ALARMAKTION	VORGABE	
ı	VORGABEPUNKT	001	
ı	HALTEZEIT	IMMER	
l	BEENDEN	JA	
/			J

<sup>\* 7</sup> Alarmeingänge + Eingang 8 als Tag/Nacht-Umschalter.

#### ALARM KONTAKT

Der Dome unterstützt 8 Alarmeingänge und 1 Alarmausgang. Wählen Sie den Alarmeingang, dessen Alarmparameter Sie einstellen möchten. Anschließend stellen Sie die Parameter im Menü <ALARMEINSTELLUNG> ein.

**Achtung!** Wenn z. B. zwei Alarme zeitgleich eintreffen, wird immer die niedrigere Alarmnummer bearbeitet (z. B. 1+3 gleichzeitig > 1 wird bearbeitet).


#### ALARMSCHALTER

Hier wird eine Alarmeingangsfunktion ein- oder ausgeschaltet.

### ALARM TYP

Es gibt zwei Arten von Alarmen, Normal offen (N.O.) und Normal geschlossen (N.C.) (siehe Darstellung).

Wählen Sie hier den Alarmtyp aus, in dem der Alarmeingang sein muss, um mit Ihrer Alarmanwendung zu korrespondieren.

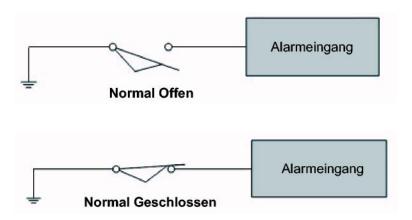

#### ALARMAKTION

Hier wird ausgewählt, welche Funktion bei Eingang eines Alarms ausgeführt werden soll. Es gibt vier Möglichkeiten.

- 1. Die Kamera läuft in eine von 256 programmierten Positionen.
- 2. Es wird eine von acht Sequenzen gestartet.
- 3. Es wird eine von vier Autoschwenkabläufen gestartet.
- 4. Es wird eine von vier programmierten Touren gestartet.

#### VORGABEPUNKT

Geben Sie eine Position ein (1 - 256), die im Alarmfall angefahren werden soll.

#### SEQUENZ LINIE

Geben Sie eine Sequenz ein (1 - 8), die im Alarmfall ausgeführt werden soll.

#### AUTOM, SCHWENKEN LINIE

Geben Sie einen Autopanablauf ein (1 - 4), der im Alarmfall ausgeführt werden soll.

#### KAMERAFAHRT LINIE

Geben Sie eine Tour ein (1 - 4), die im Alarmfall ausgeführt werden soll.

#### HALTEZEIT (Verweilzeit in Sekunden)

Die Kamera verweilt in der vorgewählten Position für die <HALTEZEIT> in Sekunden. Danach fährt sie in die vorherige Position zurück. Wenn Sie "IMMER" wählen, bleibt die Kamera in der angefahrenen Position bis ein neuer Alarm einläuft, der Joystick oder eine andere Funktion betätigt wird.



**Achtung:** Die Verweilzeit ist nur einstellbar, wenn Sie **VORGABE** als Alarmaktion ausgewählt haben.

#### BEENDEN

Verlassen des Menüs < ALARMEINSTELLUNG>.

### 3.3.18.1 ALARMERKENNUNG

Wenn die Alarmerkennungsfunktion aktiviert ist, reagiert die Kamera auf Bewegung in einem speziellen Sichtbereich und gibt automatisch ein Alarmsignal. Im oberen linken Bildschirmeck erscheint dann blinkend <MOTION>.



#### ERKENNUNGS-SCHALTER

Dieser Punkt wird verwendet, um die ALARMERKENNUNG zu aktivieren.

#### ERKENNUNGS-MODUS

Vier Alarmerkennungs-Modi werden unterstützt:

#### **INT FOKUS (Interner Fokus)**

Der Alarm wird generiert, wenn der interne Fokus variiert; wenn der Fokus zur Originalposition zurückkehrt, stoppt der Alarm.

#### **FIX FOKUS**

Wenn Fokusbewegung erkannt wird, wird der Alarm generiert; der Alarm stoppt, wenn der Fokus zur Originalposition zurückkehrt; falls die Fokusbewegung länger als vier Sekunden dauert, wird die neue Fokusposition als neue Referenz gespeichert und der Alarm wird gestoppt.



**ACHTUNG:** die INT FOKUS und FIX FOKUS Modi sind nur im Auto-Fokus-Modus aktivierbar.

#### **INT AE (Interne AE, Autobelichtung)**

Wenn AE-Veränderungen erkannt werden, wird ein Alarm generiert. Wenn der AE-Pegel zum Ursprungswert zurückkehrt, wird der Alarm gestoppt.

#### FIX AE (voreingestellter Belichtungswert)

Ein Alarm wird generiert, wenn der Belichtungswert variiert; wenn der justierte AE-Pegel vier Sekunden lang variiert, wird dieser Wert als neue Referenz gespeichert und der Alarm danach gestoppt.

#### **BEWEGUNG**

Die Bewegungserkennung entdeckt verdächtige Bewegungen und gibt Alarm, wenn der Bewegungspegel in dem überwachten Bereich den eingestellten Empfindlichkeitsgrenzwert erreicht oder überschreitet.

#### BLOCK-MODUS

Im sog. Block-Modus (welchen man AN oder AUS wählen kann) werden Veränderungen, z. B. verursacht durch Eindringversuche, in den Bereichen des angezeigten Bildes dynamisch aufgehellt angezeigt.

#### RAHMEN SETZEN

In einem angezeigten Bereich kann der Nutzer spezielle Felder setzen. Bitte folgen Sie den Anweisungen, um die Parameter der sog. "Rahmen" eines jeden Bewegungserkennungs-bereiches einzustellen. Wenn in einem definierten Rahmen eine Bewegung erkannt wird, erscheint "MOTION" im oberen linken Bildschirmeck. Insgesamt 4 Rahmen können gesetzt werden. Wählen Sie einen Rahmen mit dem

Joystick (Rechts/Links) aus und drücken Sie <ENTER>, um ins Submenü zu gelangen.

RAHMEN 1 LINKER RAND L/R OBERER RAND O/U HGROESSE -/ + VGROESSE -/ + MODUS VORGABE VORG. PUNKT 001 VERWEILZEIT 001 SEK BEENDEN JA

#### LINKER RAND

Bewegen Sie den Rahmen mit dem Joystick (Rechts/Links).

#### **OBERER RAND**

Schieben Sie den Rahmen mit dem Joystick an die gewünschte Stelle.

#### H/V GROESSE

Verändern Sie die Höhe und Breite des Rahmens mit dem Joystick.

#### **MODUS**

Wählen Sie eine Reaktion für den eingestellten Rahmen. Zwischen VORGABE, SEQUENZ, AUTO-SCHWENKEN und KAMERAFAHRT können Sie wählen. Wenn in einem Rahmen Bewegung erkannt wurde, wird der Dome diese Reaktion ausführen.

#### **VERWEILZEIT**

Die VERWEILZEIT ist die Dauer der Reaktion nach Erkennung. Wenn z. B. der VORGABE-Modus gewählt wird, fährt der Dome zur ausgewählten Festposition und verweilt dort für die voreingestellte Zeit (1-127 Sek./Immer). Falls andere Modi (SEQUENZ/AUTOSCHWENKEN/ KAMERAFAHRT) aktiviert wurden, führt der Dome diesen Modus so lange aus, bis er durch andere Kommandos dabei unterbrochen wird (VERWEILZEIT/IMMER).

#### **BEENDEN**

Beenden Sie "RAHMEN SETZEN" und kehren zur Seite <ALARMERK.>zurück.

#### RAHMEN DEAKTIVIEREN

Wählen Sie einen zu deaktivierenden Rahmen und drücken Sie <ENTER>. Dieser Rahmen verschwindet dann aus dem Anzeigebereich.

#### GRENZWERT

Der Grenzwertbereich liegt zwischen 1-255. Je kleiner der Wert, desto empfindlicher ist der Rahmen; d.h. 1 ist die höchste und 255 die geringste Empfindlichkeit.

#### BEENDEN

Beenden Sie das Menü <ALARMERKENNUNG> und fahren Sie fort mit dem <HAUPTMENÜ 3> und dem Punkt 3.3.19 WDR-FUNKTION.

MAIN PAGE 3 IR FUNKTION AUTO ALARM EINST **ENTER** ALARM DETEKT **AUS** WDR FUNKTION AUS PRIVACY MASK **ENTER** ZEIT EINST **ENTER** ZEITPLAN **ENTER** BEENDEN

# 3.3.19 WDR FUNKTION (Erweiterter Dynamikbereich)

Die Einstellungen des erweiterten Dynamikbereiches werden hier vorgenommen. Bei der WDR-Funktion wird das Bild zweimal mit unterschiedlichen Belichtungszeiten abgetastet. Mit der normalen und einer kurzen (für die hellen Bildteile). Durch Integration in Echtzeit (in einem Bildspeicher) werden die beiden Bilder addiert. Man erreicht damit eine verbesserte Wiedergabe der bei normaler Belichtung überbelichteten Bildteile. Die Übertragungskennlinie (Gamma) wird dadurch im oberen Pegelbereich stark abgeflacht und es treten auch keine Überbelichtungseffekte (Auskalken, etc.) auf. Die Wirksamkeit muss in der praktischen Anwendung überprüft werden.

Wählen Sie <AN>, um die WDR-Funktion zu aktivieren und <AUS>, um sie abzuschalten. Mit <AUTO> entscheidet die Kamera intern, bei welcher Helligkeit im Bildinhalt die Einoder Abschaltung ausgeführt wird.

Mit <RF> (Ratio Fix = Fester Wert) wird ein bestimmter Wert dieser Bildhelligkeit als Schaltschwelle festgelegt. Hierbei wird die Shuttergeschwindigkeit für kurze Belichtungszeiten gefixt und für lange Belichtungszeiten eingestellt, indem dieser Wert (bezogen auf die kurze Belichtungszeit) als Vergleichsparameter gesetzt wird. Eine sog. verriegelte Schatten-Korrektur (auch Spitzlicht-Austastung) findet nicht statt.

<DC> (D version compatible = vergleichbar der WDR-Funktion des Vorgänger-Moduls FCB-EX1010P/D) erlaubt einen WDR-Modus, der ein Histogramm (treppenförmige Regelung) verwendet, um die vorgenannte Schatten-Korrektur durchzuführen.

## **3.3.20** PRIVACY MASK (ESF Elektronische Sichtschutzfunktion)

Hier können Zonen im Bild programmiert werden, die den Blick der Kamera auf diese Bereiche verdecken. Die Kamera nimmt zwar weiterhin auch diese Bildbereiche auf, aber in den Bereichen der programmierten Felder wird das Bildsignal ausgetastet und durch auswählbare Farben ersetzt. Bei Veränderung des Zooms und der Blickrichtung werden diese Felder in Größe und Perspektive automatisch angepasst.



**Achtung:** BILD DREHEN (Flip) und BILDUMKEHRUNG (Image Inverse) sind automatisch deaktiviert, wenn die PRIVACY MASK Funktion eingeschaltet ist.

Der Setzbereich für die Masken ist auf 70° vertikal beschränkt. Außerdem können max. 8 Felder in einer Szene gesetzt werden!

$\bigcap$	PRIVACY MASK		
	SICHTSCHUTZ-SCHALTER	AUS	
	TRANSPARENZ	AUS	
	FARBE	SCHWARZ	
	MASKE SETZEN	01	
	MASKE LÖSCHEN	01	
U	BEENDEN	JA	
/			-

### • SICHTSCHUTZSCHALTER (ESF-Schalter)

Hiermit können die programmierten Maskierungen ein- und ausgeschaltet werden.

#### TRANSPARENZ (durchscheinende Maskierung)

Hier kann die Maskierung als (AN) "durchsichtig" oder (AUS) "undurchsichtig" eingestellt werden (dies dient nur zur vereinfachten Maskensetzung!).

#### FARBE

Farbauswahl: Schwarz, Hell/Dunkel-Grau, Weiß, Rot, Grün, Blau, Cyan, Gelb und Magenta.

#### MASKE SETZEN

Bewegen Sie den Dome in den Bereich, den Sie gegen Sicht schützen möcht en. Gehen Sie zu "Maske setzen" und benennen Sie die Nummer der Maske. Die jetzt sichtbare Bildschirmmitte ist der Mittelpunkt der ersten Maske. Mit dem unteren bestimmen Sie Lage und Größe der Masken. Es sind max. 24 Felder setzbar.

$\bigcap$	MASKIERUNG01 MENÜ	
	HOR. MITTE	L/R
	VERT. MITTE	U/O
	HOR. GRÖSSE	000
	VERT. GRÖSSE	000
	BEENDEN+SPEICHERN	JA

#### HOR. MITTE 000-255

Die normale horizontale Mitte der Maske ist der Mittelpunkt des Bildes. Sie können die Mitte der Maske, durch Veränderung dieses Wertes, in die gewünschte Bildschirmposition bewegen.

#### **VERT. MITTE 000-255**

Die gleiche Einstellung für vertikal.

#### **HOR. GRÖSSE 000-127**

Hiermit wird die Maskierung, durch Veränderung des Wertes, auf die gewünschte Breite eingestellt.

#### **VERT. GRÖSSE 000-127**

Die gleiche Einstellung für die Maskenhöhe. Durch abwechselnde Veränderung dieser vier Werte, wird die Maskierung auf die gewünschte Größe und Position eingestellt.

#### MASKE LÖSCHEN

Mit dieser Funktion können Masken gelöscht werden. Verfahren Sie wie folgt:

- 1. Wählen Sie die Maskenzone, die gelöscht werden soll (z.B. 01).
- Drücken Sie <ENTER> zur Bestätigung Ihrer Auswahl.

#### SPEICHERN und BEENDEN

Wenn Sie die Masken eingestellt haben, müssen Sie diese Zeile mit dem Cursor anwählen und mit <ENTER> verlassen.

# 3.3.21 ZEITEINSTELLUNG (Uhrzeit/Datum-Funktion)

Einstellung der Uhrzeit/Datum-Einblendung in das Kamerabild. Sie dient u. A. dazu, das Menü "ZEITPLAN" zu programmieren.

		_
ZEITEINST.		`
ZEITANZEIGE	AUS	
JAHR EINSTELLEN	00	
MONAT EINSTELLEN	01	
TAG EINSTELLEN	00	
STUNDE EINSTELLEN	00	
MINUTE EINSTELLEN	00	
BEENDEN+SPEICHERN	JA	
`		- 4

#### ZEITANZEIGE

Bei Auswahl von "AN" wird Uhrzeit/Datum im Bild angezeigt. Bei "AUS" nicht.

#### JAHR/MONAT/TAG)

Hier werden die o. g. Werte eingestellt.

#### STUNDE/MINUTE


Hier werden die o. g. Werte eingestellt.

#### BEENDEN UND SPEICHERN

Verlassen des Menüs < ZEITEINSTELLUNG>.

# 3.3.22 ZEITPLAN (Termin/Zeitplanung)

Die Terminplanfunktion ermöglicht es, in einem bestimmten Zeitrahmen automatisch einen bestimmten VORGABEPUNKT anzufahren oder eine bestimmte Funktion (SEQUENZ/AUTOM. SCHWENKEN/KAMERAFAHRT) auszuführen.

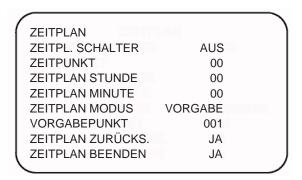

#### ZEITPLAN SCHALTER

Schaltet die Terminplanfunktion ein <AN> oder aus <AUS>

#### ZEITPUNKT

Ermöglicht dem Nutzer 32 verschiedene Zeitabläufe zu programmieren.

#### ZEITPLAN STUNDE/MINUTE

Hier werden Stunden und Minuten für die verschiedenen Zeitabläufe eingetragen.

### ZEITPLAN MODUS (Aktionen nach Zeitplan)

Hier kann programmiert werden, welche Funktion an der jeweiligen Stelle des Zeitplans ausgeführt werden soll.

#### **KEINE**

Es wird keine Funktion ausgeführt.

#### **VORGABE**

Bis zu 256 Festpositionen können eingestellt werden.

#### SEQUENZ

Bis zu 8 Sequenzabläufe können eingestellt werden.

#### **AUTOM. SCHWENKEN**

Bis zu 4 Autopanabläufe können eingestellt werden.

#### **KAMERAFAHRT**

Bis zu vier Tourabläufe können voreingestellt werden.

#### **IR FUNKTION**

Die IR-Funktion "AUTO" kann damit ein- oder ausgeschaltet werden.

#### ZEITPLAN ZURÜCKSETZEN

In diesem Menüpunkt kann die komplette Terminplanfunktion auf 0 (Ausgangspunkt) zurückgesetzt werden.

#### ZEITPLAN BEENDEN

Verlassen des **<ZEITPLAN>** Menüs.

# 3.3.23 BEENDEN OSD

Um das OSD Setup-Menü zu verlassen, wählen Sie diesen Menüpunkt mit dem Joystick an und bestätigen ihn mit <CAMERA OFF> (= ENTER).

# **Anhang A: Technische Daten GNSD882**

Technische Daten	VIPCAM-GNSD882	
Bildaufnehmer (Chip)	1/4" Sony EX-View HAD Sensor	
Abtastsystem	Progressive Scan	
Abtastfrequenz	15,625 kHz (H), 50 Hz (V)	
Pixel (H x V)	752 x 582 (effektiv)	
Horizontale Auflösung	550 TV-Linien	
Minimale Empfindlichkeit:		
Farbe	0,1 Lux (50 IRE); IR Cut Filter, AGC eingeschaltet	
S/W	0,01 Lux (50 IRE); IR Pass Filter, AGC eingeschaltet	
Synchronisation	Intern / Extern (Netzsynchronisation)	
Signal/Rauschverhältnis	>50 dB (AGC ausgeschaltet)	
Weißabgleich	Automatisch / Manuell	
Shutter	An / Aus - Manuell/Automatisch elektronisch (AES), 1/1,5 bis 1/4000 s	
Gegenlichtkompensation	An / Aus	
Automatische Verstärkungsregelung (AGC)	Automatisch / Manuell	
Erweiterter Dynamikbereich	Ja	
LAN-Schnittstelle	RJ45 Anschluss, 10/100Base-TX	
Übertragung	TCP (Transmission Control Protocol)	
Kompression/Kodierung	Bilder werden direkt im GeViScope kompatiblen Datenformat übertragen: MPEG4CCTV	
Farb- / S/W-Umschaltung	Automatisch (IR-Schwenkfilter)	
Elektronische Sichtschutzfunktion (Privacy masking)	24 Sichtschutzzonen einstellbar über On Screen Menü	
Objektiv	3,4 mm bis 122,4 mm (Optisch)	
Zoomfaktor (Optisch)	36fach	
Zoomfaktor (Digital)	1fach - 12fach proportional	
Bildstabilisierung	Ja	
Stabiler Zoom	Ja	
Schwenkbereich	360° endlos schwenken	
Neigebereich	-10° bis 190°	
Schwenk-/Neigegeschwindigkeit	1°/s bis 90°/s (Manuell)	
Geschwindigkeit bei Festpositionen	5°/s bis 400°/s (Schwenken/Neigen)	
Anfahrgenauigkeit	0,225° (Schwenken), 0,45° (Neigen)	
Automatisches Wechseln der Blickrichtung (Auto Flip)	Ja	
Automatische Fokussierung (Auto Fokus)	Automatisch / Manuell	
Anzahl Festpositionen	256 Festpositionen mit Standbildfunktion*	
	(* -> s. Abschnitt 3.3.12; u. U. sind nur 239 Festpositionen verfügbar!	
Sequenz-Modus	Ja; 8 x	
Kontur-Modus (Patrouille)	Ja; 4 x	
Automat. Schwenken	Ja; 4 x	
Eingebaute Protokolle	JVC/Geutebrück Protokoll	
Betriebstemperatur	- 50 °C bis + 50 °C	
Luftfeuchtigkeit bei Betrieb	0 % bis 90 % rel. Luftfeuchte (nicht kondensierend)	
Schutzklasse	IP 66 mit Sonnenschutzdach	
Spannungsversorgung	24 V AC	
Leistungsaufnahme	Ca. 65 W (mit Heizung)	
Abmessungen in mm (D x H)	233,5 x 302,5	
Gewicht	Ca. 2,6 kg	
Zertifikate	CE, FCC	

# **Anhang A: Technische Daten GNSD682**

Technische Daten	VIPCAM-GNSD682
Bildaufnehmer (Chip)	1/4" Sony EX-View HAD Sensor
Abtastsystem	Progressive Scan
Abtastfrequenz	15,625 kHz (H), 50 Hz (V)
Pixel (H x V)	752 x 582 (effektiv)
Horizontale Auflösung	550 TV-Linien
Minimale Empfindlichkeit:	
Farbe	0,1 Lux (50 IRE); IR Cut Filter, AGC eingeschaltet
S/W	0,01 Lux (50 IRE); IR Pass Filter, AGC eingeschaltet
Synchronisation	Intern / Extern (Netzsynchronisation)
Signal/Rauschverhältnis	>50 dB (AGC ausgeschaltet)
Weißabgleich	Automatisch / Manuell
Shutter	An / Aus - Manuell/Automatisch elektronisch (AES), 1/1,5 bis 1/4000 s
Gegenlichtkompensation	An / Aus
Automatische	Automatisch / Manuell
Verstärkungsregelung (AGC)	
Erweiterter Dynamikbereich	Ja
LAN-Schnittstelle	RJ45 Anschluss, 10/100Base-TX
Übertragung	TCP (Transmission Control Protocol)
Kompression/Kodierung	Bilder werden direkt im GeViScope kompatiblen Datenformat übertragen: MPEG4CCTV
Farb- / S/W-Umschaltung	Automatisch (IR-Schwenkfilter)
Elektronische Sichtschutz- funktion (Privacy masking)	24 Sichtschutzzonen einstellbar über On Screen Menü
Objektiv	3,4 mm bis 122,4 mm (Optisch)
Zoomfaktor (Optisch)	36fach
Zoomfaktor (Digital)	1fach - 12fach proportional
Bildstabilisierung	Ja
Stabiler Zoom	Ja
Schwenkbereich	360° endlos schwenken
Neigebereich	-10° bis 190°
Schwenk-/Neigegeschwindigkeit	1°/s bis 90°/s (Manuell)
Geschwindigkeit bei Festpositionen	5°/s bis 400°/s (Schwenken/Neigen)
Anfahrgenauigkeit	0,225° (Schwenken), 0,45° (Neigen)
Automatisches Wechseln der Blickrichtung (Auto Flip)	Ja
Automatische Fokussierung (Auto Fokus)	Automatisch / Manuell
Anzahl Festpositionen	256 Festpositionen mit Standbildfunktion* (* -> s. Abschnitt 3.3.12; u. U. sind nur 239 Festpositionen verfügbar!)
Sequenz-Modus	Ja; 8 x
Kontur-Modus (Patrouille)	Ja, 6 X Ja; 4 X
Automat. Schwenken	
	Ja; 4 x
Eingebaute Protokolle	JVC/Geutebrück Protokoll
Betriebstemperatur	- 10 °C bis + 45 °C; (0 °C bis 40 °C empfohlen)
Luftfeuchtigkeit bei Betrieb	0 % bis 90 % rel. Luftfeuchte (nicht kondensierend)
Schutzklasse	IP 20 (zum Betrieb in trockenen Räumen)
Spannungsversorgung	24 V AC
Leistungsaufnahme	Ca. 20 W
Abmessungen in mm (D x H)	131 x 226
Gewicht	Ca. 1,6 kg
Zertifikate	CE, FCC
Bestell-Nr.	0.34873

# Anhang B: Verfügbares Zubehör

Die folgenden Abschnitte zeigen verschiedene Zubehöre und Möglichkeiten, die Domekameras zu installieren.

Beachten Sie: Die Maueranker mit Sechskantmutter gehören nicht zum Lieferumfang. Verwenden Sie Befestigungsteile (Maueranker, Dübel, evtl. Schwerlastdübel), die für das Zubehör geeignet sind.

# Netzteil/Montagebox PSU-24VAC/80VA/Boxed (5.14040)

Es wird empfohlen, dieses Zubehör unbedingt zur Montage und Anschluss des GNSD882 und des GNSD682 zu verwenden.




# Bracket Wall Mount GSD/BWM-003 (5.04802)

Wandhalter für **GNSD882 im Außenbereich** (und in Verbindung mit einem Dome-Montage-Adapter GSD/BDA-001; 5.04866, auch für den **GNSD682 im Innenbereich** zu verwenden!).

Abmessungen in mm (B x H x T): 114 x 138 x 350 Material: Aluminium-Druckguss (Pulverbeschichtet)

Gewicht: ca. 1,5 Kg / Farbe: RAL 7032

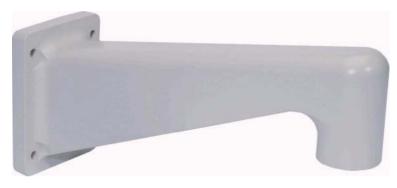

Führen Sie die folgenden Schritte aus, um den Wandhalter zu montieren.

 Machen Sie ein Kabeleingangsloch an der Wand, wenn erforderlich.

- 2) Schrauben Sie die Montageplatte des Halters auf der Wand fest.
- 3) Führen Sie das Kabel in den Wandhalter und durch den Domedeckel ein.
- **4)** Montieren Sie den Domedeckel am Wandhalter mit Hilfe der beigefügten Schrauben und Dichtungsringe und verbinden das Kabel mit dem Dome.
- 5) Befestigen Sie die Kuppelkamera am Domedeckel und ziehen Sie die Schrauben fest.

# **Bracket Ceiling Mount GSD/BCE-002 (5.04801)**

Deckenabstandrohr für GNSD882

Der Deckenhalter ist ausschließlich für den Einsatz in geschlossenen Räumen geeignet.

Abmessungen in mm (B x H x T): 140 x 250

Gewicht: ca. 1 Kg / Farbe: beige

Führen Sie die folgenden Schritte aus, um das Abstandrohr an der Decke zu montieren.

- 1) Stellen Sie sicher, dass die Decke das Gewicht der Domekamera, des Domedeckels und des Abstandrohres tragen kann.
- 2) Machen Sie ein Kabeleingangsloch in der Decke.
- Schrauben Sie die Montageplatte des Abstandrohrs an der Decke fest.
- **4)** Führen Sie das Systemkabel durch das gerade Rohr und den Domedeckel ein und verbinden Sie den Domedeckel am Abstandrohr mit den beigefügten Schrauben und Dichtungen.
- 5) Verbinden Sie das Systemkabel mit dem Dome.
- **6)** Befestigen Sie den Dome am Halter (siehe Bedienungsanleitung) und ziehen Sie die Schrauben fest.





Bitte achten Sie darauf, dass kein Wasser durch das Abstandrohr eintritt, da die Elektronik des Domes beschädigt werden kann.

# Corner Mount Adapter GSD/CMA-003 (5.04806)

Eckmontageadapter für GNSD882 (und in Verbindung mit einem Dome-Montage-Adapter GSD/BDA-001; 5.04866, auch für den GNSD682 zu verwenden).

Verwendung nur in Kombination mit dem Wandhalter GSD/BWM-003 (5.04802)

Abmessungen in mm (B x H x T): 206 x 222 x 121

Material: Stahlblech (Pulverbeschichtet) Gewicht: Ca. 2 Kg / Farbe: RAL 7032



Mit einer Eckmontageplatte und dem Wandhalter GSD/BWM-003 (5.04802, separat zu bestellen), kann die Domekamera an eine Ecke montiert werden.

- 1) Machen Sie ein Kabeleingangsloch in der Wand, wenn erforderlich.
- 2) Befestigen Sie die Eckmontageplatte mit geeignetem Montagematerial an der Wand.
- Befestigen Sie den Wandhalter an der Eckmontageplatte.
- **4)** Für die Installation der Kabel, gehen Sie wie in 2.3.2.3 beschrieben vor.

# Pole Mount Adapter GSD/PMA-003 (5.18374)

Mastmontageadapter für Tag/Nacht Außen-Dome GNSD882

Verwendung nur in Kombination mit GSD/BWM-003 (5.04802)

Abmessungen in mm (B x H x T): 137 x 182 x 50

Material: Edelstahl (1.4571)

Gewicht: (inkl. Zubehör): ca. 1,0 Kg

Zubehör: 2 x Spannband mit Schloss und 4 x 6-Kantschraube M8 x 30

Für die Schlösser wird ein Inbus M 5 benötigt.

Führen Sie die Schritte aus, um den Mastadapter und den Wandhalter GSD/BWM-003

(5.04802 separat zu bestellen), zu montieren.




- Befestigen Sie den Masthalter mit den rostfreien Spannbändern an einem Mast.
- **2)** Befestigen Sie den Wandhalter GSD/BWM-003 (5.04802) auf dem Masthalter.
- 3) Führen Sie das Systemkabel durch das Rohr des Wandhalters und den Domedeckel ein und verbinden Sie es mit der Domekamera.
- **4)** Für die Installation der Kabel gehen Sie wie in 2.3.2.3 beschrieben vor.

# Wandmontagezubehör für GNSD682 Wandhalter GSD/BWM-001 (5.04864)

#### Wandhalter GSD/BWM-001

Weiß; 184 x 104 x 115.2 mm

mit zugehörigen Schrauben, Dichtungen und U-Scheiben

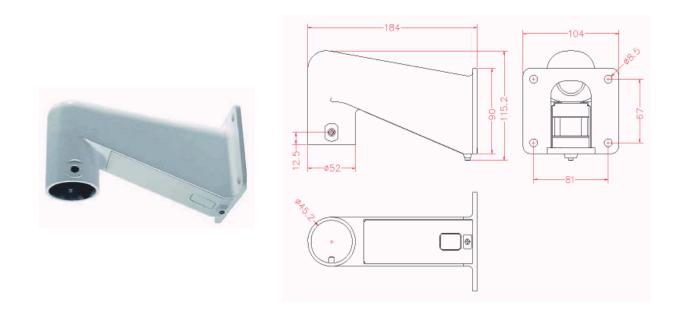

# Dome-Montageadapter GSD/BDA-001 (5.04866)

#### Montageadapter

Zur Montage des GNSD682 an einen Wandhalter oder Abstandsrohr.

Weiß; Durchmesser 140 mm; Höhe: 74 mm

Beigefügtes Zubehör: Innensechskantschlüssel, Sicherungsplatte und 3 Schrauben








# Deckenmontagezubehör für GNSD682 Deckenmontage-Kit (im Lieferumfang enthalten)

### **Deckenmontage-Kit**

Für Aufputzmontage. Höhe: 21,4mm; Durchmesser Bohrungen: 4,5mm;

Durchmesser Montagelochkreis: 158 mm



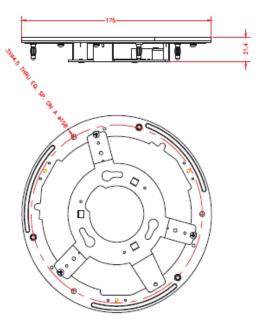


### Deckeneinbau-Kit GSD/BFC-001 (5.04860)


#### Deckeneinbau-Kit

Zum Deckeneinbau.

Höhe: 170 mm; Durchmesser: 180 mm; 0,5 Kg



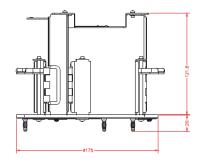

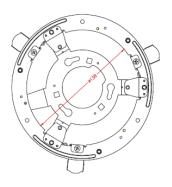


# Deckenhalter GSD/BPE-001 (5.04862)

### Deckenhalter für GNSD-682

Weiß; Höhe: 250 mm; Durchmesser: 50 mm

1 Kg mit zugehörigen Schrauben, Dichtungen und U-Scheiben,

1 x weisse Gummiabdeckung.

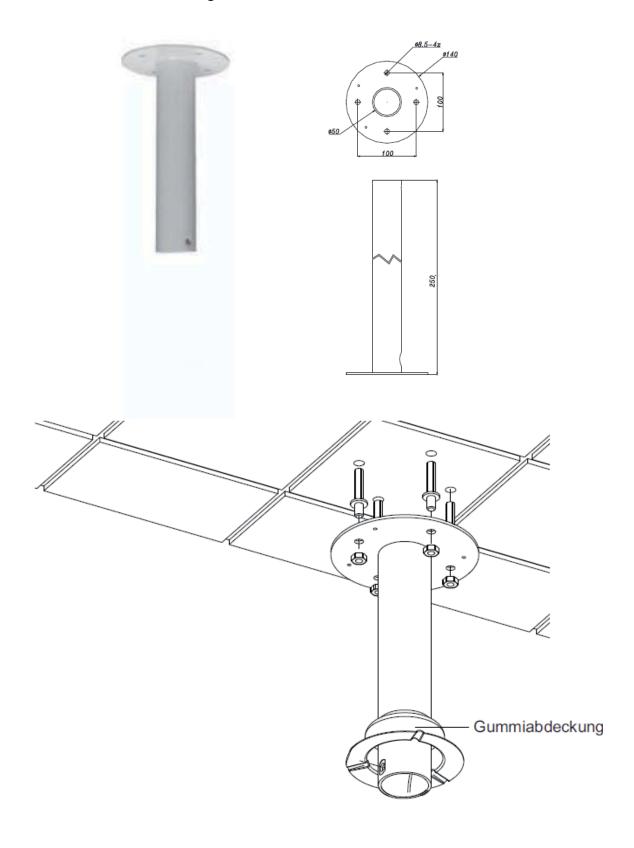

### **Preface**

The information given in this manual was up to date when published. The company reserves the right to revise and improve its products. All specifications are subject to change without notice.

#### **Notice**

To work with the Integrated IP High Speed Dome Cameras, any installer or technician must have the following minimum qualifications:

- A basic knowledge of CCTV and IP systems and components
- A basic knowledge of electrical wiring and low-voltage electrical hookups
- Have read this manual completely

#### Copyright

Under copyright laws, the contents of this user manual may not be copied, photocopied, translated, reproduced or reduced to any electronic medium or machine-readable format, in whole or in part, without prior written permission of the company.

#### **Important Information**

Before proceeding, please read and observe all instructions and warnings in this manual. Retain this manual with the original bill of sale for future reference and, if necessary, warranty service. When unpacking your unit, check for missing or damaged items. If any item is missing, or if damage is evident, DO NOT INSTALL OR OPERATE THIS PRODUCT. Contact your dealer for assistance.

#### Regulation



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



# Attention please!

We highly recommend, to use network cable with category 6 or higher for network application of the VIPCAM domes.

Also it is recommended to fullfil the EMC specification. Therefore you must apply ferrite beads to the network- and system cable nearby the dome connections (see pictures).

The grey ferrite bead must be applied to the power cable, the black one to the network cable. Than press them together. Please fix the ferrite beads with cable straps.

The distance between the ferrite beads must be 40 mm at least, because they did not fit to the straight tube or gooseneck side by side.





### **Cautions**

Handle the camera carefully



Do not abuse the camera. Avoid striking, shaking, etc. The camera could be damaged by improper handling or storage.

Do not disassemble the camera



To prevent electric shock, do not remove screws or covers. There are no user serviceable parts inside. Ask a qualified service person for servicing.

 Do not operate the camera beyond the specified temperature, humidity or power source ratings



Use the camera under conditions where temperature is between -50°C ~ +50°C (-58°F ~122°F) and humidity is below 90%.

Do not use strong or abrasive detergents when cleaning the camera body



Use a dry cloth to clean the camera when dirty. In case the dirt is hard to remove, use a mild detergent and wipe gently.

Never face the camera towards the sun



Do not aim the camera at bright objects. Whether the camera is in use or not, never aim it at the sun or other extremely bright objects. Otherwise, the camera sensor may be smeared or damaged.

# Inhalt

1.	Overview	5
1.1	Product Features	6
2.	Connecting the High Speed Domes GNSD882 / GNSD682	7
2.1.1	Package Contents GNSD882	7
2.1.2	Package Contents GNSD682	8
2.1.3	Switch Definition	9
2.1.4	Dome Control Protocol Setting (Switch D)	10
2.1.5	22-Pin Connector Definition	11
2.1.6	Alarm Pin Definition	12
2.2	Installation of the GNSD882	13
2.3	Installation of the GNSD682	16
2.3.1	Ceiling Mount	16
	Hard Ceiling Mounting	17
	In-Ceiling Mounting	19
	Ceiling Mounting with Straight Tube	22
2.3.2	Wall Mount / Mini Pendant Mount	24
2.4	System versions to remote control IP domes via MBeg/GCT-3X-LAN	25
2.5	Commissioning of IP Domes in GSC-Setup	29
3.	Operation and Configuration	36
3.1	Display Format	36
3.2	OSD Menu Tree	37
3.2.1	OSD Menu Tree GNSD882/GNSD682	
3.3	Configuration Menu	40
3.3.1	LANGUAGE	41
3.3.2	DEFAULT CAMERA	42
3.3.3	BACKLIGHT COMPENSATION	42
3.3.4	FOCUS	42
3.3.5	AE MODE	43
3.3.6	WBC MODE	44
3.3.7	SETUP MENU 1	46
	ZOOM SPEED	46
	DIGITAL ZOOM	46
	SLOW SHUTTER	46
	IMAGE INVERSE	46
	FREEZE	47
	APERTURE	47
	STABILIZER	47
	STABLE ZOOM	48
	EXIT	48
3.3.8	SETUP MENU 2	48
	FLIP	48

	ANGLE ADJUSTER	49
	SPEED BY ZOOM	49
	AUTO CALI (Auto Calibration)	49
	PASSWORD	50
	SYSTEM RESET	50
	SCAN MODE	50
	EXIT	51
3.3.9	ID DISPLAY	51
3.3.10	TITLE DISPLAY	51
3.3.11	TITLE SETTING	52
3.3.12	PRESET	53
3.3.13	SEQUENCE	54
3.3.14	AUTOPAN	55
3.3.15	CRUISE	57
3.3.16	HOME SETTING	58
3.3.17	IR FUNCTION (Removable IR Cut)	60
3.3.18	ALARM SETTING	62
3.3.19	ALARM DETECT	65
3.3.20	WDR FUNCTION	68
3.3.21	PRIVACY MASK	68
3.3.22	TIME SETTING	70
3.3.23	SCHEDULE	71
3.3.24	EXIT OSD	72
	dix A: Technical Specifications GNSD882/GNSD682	
Appen	dix B: Available Accessories	75
For Ins	stallation GNSD882	75
Power	Supply PSU-24VAC/80VA/Boxed (5.14040)	75
Bracke	t Wall Mount GSD/BWM-003 (5.04802)	76
Bracke	t Ceiling Mount GSD/BCE-002 (5.04801)	77
Corner	Mount Adapter GSD/CMA-003 (5.04806)	78
Pole M	lount Adapter GSD/PMA-003 (5.18374)	79
For Ins	stallation GNSD682	80
Power	Supply PSU-24VAC/80VA/Boxed (5.14040)	75
Mini Pe	endant GSD/BWM-001 (5.04864)	80
Indoor	Mount Kit GSD/BDA-001 (5.04866)	80
T-Bar I	Mounting GSD/BFC-001 (5.04860)	81
Straigh	nt Tube GSD/PBE-001 (5.04862)	82
∆nnen	dix C: Remote Control Protocol KDec->.IVC TK-C676 (German only)	83

### 1. Overview

The new subcompact Integrated High-Speed IP-Dome is designed todeliver superb performance and durability with an intelligent and stylish housing that is suitable in any security and surveillance installation. The latest Dome Camera possesses the additional functions of Image Inverse and multi-language OSD operation. The dome camera also supports easy installation and can be integrated with various digital surveillance products, such as Digital Video Recorders (DVRs), our Control Keyboard MBeg/GCT-3X-LAN or other IP accessories for a complete surveillance solution.

The Dome Camera delivers up to 432x zoom ratio to capture clear image in the distance. Continuous Auto Focus, Back Light Compensation, Auto Exposure and Digital Slow Shutter functions are provided for clear and high quality image. Removable IR cut filter ensures 24 hours operation, while Privacy Masks are specially designed to avoid any intrusive monitoring at specific region; all of the salient functions can be incorporated to meet your needs. The Home function allows users to specify a preset position as the 'home position' or homefunctions (Sequence/Auto-pan/Cruise). In this mode, Dome Cameras can come back to the preset home position or functions when the camera has been idle for a user-defined period of time. Additionally, the unique Schedule function enables users to program a preset point or function (Sequence/Auto-pan/Cruise) so that these actions can be automatically performed in certain period of time.

The Dome Camera provides variable pan/tilt speeds ranging from a fast patrol of 400°/s to a slow ramble of 0,5°/s with 0.225° pan accuracy for fast and accurate tracking ability. The 360° endless rotation and -10°~ +190° tilt travel make tracking the object passing directly beneath the dome. Maximum 256 preset points can be programmed for precise location of target areas and users can also define 8 sequence, 4 auto-pan and 4 cruise routes for the camera to operate automatically.

The Integrated IP High Speed IP-Dome provides 7 + 1\* alarm inputs and 1 alarm relay output; the smart alarm management mechanism can be programmed through the OSD setup menu. Certain function (Preset/Sequence/Auto-Pan/Cruise) can be activated when an alarm is triggered.

(\* = Alarm Input 8 is reserved for Day/Night switch; open = day mode, closed = night mode)

Built-in protocols provide connectivity to other surveillance systems. The built-in protocols include JVC and JVC/GEUTEBRUECK, which allow the Dome Camera series to be integrated with other suppliers' surveillance systems.

Dependability and ultra high reliability are key factors in the Dome Camera's design cycle. Every speed dome is assembled with meticulous care and thorough testing at our ISO 9001 compliant factory. High performance, reliability and reasonably pricing make this speed dome to be an ideal solution to users' tough surveillance requirement.

### 1.1 Product Features

#### **Precise and Accurate Performance**

- Auto Calibration
- Preset accuracy of 0.225°
- Preset speed up to 400°/sec.
- Proportional Pan & Tilt Speed
- Preset Position/Sequence /Auto-Pan /Cruise

#### **Dynamic Applications**

- Multi-language OSD
- Schedule function
- Multiple built-in Protocols
- Up to 24 masking zones
- 7 + 1 alarm inputs, 1 alarm output
- Alarm Detection
- Flexible indoor/outdoor mountings
- Compact lightweight design for easy installation
- Weather resistant housing
- All-in-one type

#### **Superior Camera Image Quality**

- Minimum illumination 0.01 Lux (B/W)
- Digital Slow Shutter
- Electronic Shutter
- Wide Dynamic Range
- Auto White Balance
- Backlight Compensation
- Auto Exposure
- Image Inverse and Freeze function
- Removable IR Cut Filter

#### Password protected OSD

#### **Video-DSP and Ethernet/IP-Interface for GeViScope system integration:**


One of both DSPs (Digital Signal Processor) in this camera is a high-performance Video-DSP specially provided for the integration of the camera into the Geutebrück GeViScope system. This DSP performs all functions of preprocessing a video signal in the same manner a GeViScope does, e.g., video signal compression and motion detection. In conjunction with an Ethernet/IP-interface, instead of an analog video cable between the camera and the GeViScope an Ethernet connection can be used without losing any functionality or performance as it is the case with usual IP cameras.

# Connecting the High Speed Domes GNSD882 / GNSD682

Please refer to the following sections to connect, set and operate the dome camera. In order to control the integrated high speed IP-domes, basically our control keyboard MBeg/GCT-3X-LAN or GSC-Telecontrol is required.

# 2.1.1 Package Contents GNSD882

Before proceeding, please check that the box contains the items listed here. If any item is missing or has defects, DO NOT install or operate the product and contact your dealer for assistance.

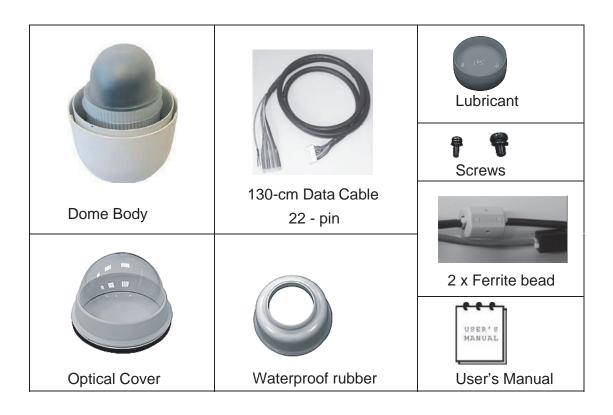


# 2.1.2 Package Content GNSD682

Before proceeding, please check that the box contains the items listed here. If any item is missing or has defects, DO NOT install or operate the product and contact your dealer for assistance.



# 2.1.3 Switch Definition

First of all, checking the dome ID and communication protocol is required before connecting the dome camera to other devices. The switches used for configuring these settings are located on the bottom of the dome camera.

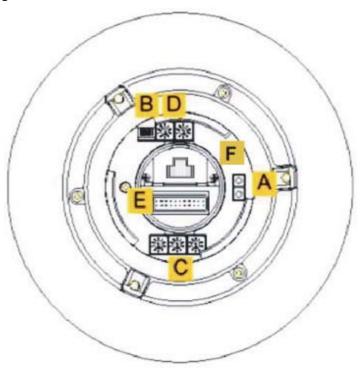


Α	Reserved
В	Not used
С	Dome ID Switch (must be 001)
D	Dome Protocol Switch (must be 20)
Е	22-Pin Connector
F	RJ-45 Connector

# 2.1.4 Dome Control Protocol Setting (Switch D)

Switch No.	Protocol	Baud Rate
15	JVC	9600
20	JVC/GEUTEBRÜCK	9600

Select protocol: JVC/GEUTEBRÜCK, with switch no. 20 and baud rate 9600, for instance, the protocol switch should be set as below.

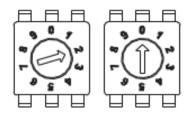

Decimal Digit Single Digit



NOTE: The number "0" should locate upwards as shown in above diagram for correct switch definition.

Interface parameter: 9600 baud

8 data bit / 1 stop bit with parity even

Half duplex / no handshake


Switch D -> Nr. 20

# 2.1.5 22-Pin Connector Definition

A 130-cm data cable (shown as the figure below) is shipped with the integrated high speed IP-dome for quick installation. Additionally, the section will also provide the definition of each pin within the 22-pin connector on the data cable.



CAUTION: Before connecting the cable please be sure, that you are using the correct cable colors!

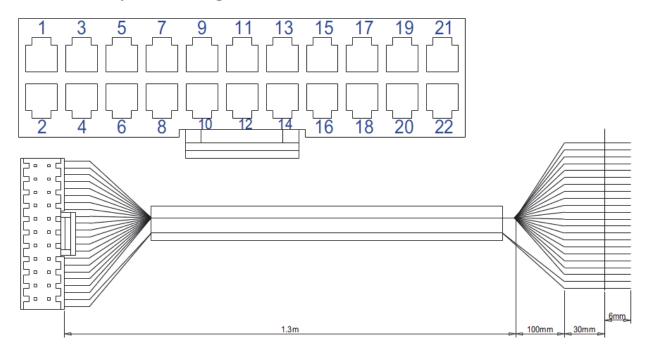


Funktion und Kennzeichnung der Anschlüsse:

No.	Function	Color	Cable
1	AC24-1	Red	
2	Alarm Pin		
3	AC24-2	Black	1007 20AWG
4	Alarm Pin		1007 20AVVG
5	FG	Yellow	
6	Alarm Pin		
11-20	Alarm Pin		

# 2.1.6 Alarm Pin Definition

The alarm pins are serviceable for connecting alarm in- and output devices. Following lists the definition of alarm pin on the 22-pin connector located on the bottom of the dome camera.

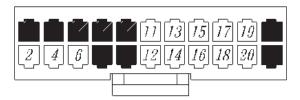

Pin	Color	Definition
2	White	ALM NO
4	Black/White	ALM NC
6	Green/Black	ALM COM
11	Blue/White	ISO
12	Red/White	ALM-
13	Purple	ALM-
14	Grey	ALM-
15	Blue	ALM-
16	White/Black	ALM-
17	Orange/Black	ALM-
18	Purple/White	ALM-
19	Grey/Black	Switch Colour/B&W*
20	Brown/White	ALM GND

<sup>\* 7</sup> alarm inputs + input 8 as day/night-switch

### 2.2 Installation of the GNSD882

Unpack the dome package and take out the dome bodies.



Rotate the **top holder** and take it off from the upper dome body.













Remove the protective cover.

Before actually doing that, apply some lubricant on all surface of water-proof rubber on the upper dome body to make the installation process smoother.

Assembly of the lower hood. Note that the tiny protrusion on upper dome body must match to one of the four holes on lower dome body.

Gently press the upper dome body downward with two hands on the side of the cover.



**DO NOT** press the cover as shown in the picture on the right hand side; this might cause the damage on the dome body.



Screw the two dome bodies together. It should be done if the lower dome body looks swelled.



Connect the attached RS-485, power and BNC cables with your arranged cables.



Put the **cable** through the **wall mount adapter** and the **top mount**.



Mount the **top holder** to the **wall mount adapter** and rotate the **top holder** to lock.



Screw in bolt to lock top holder.



Then connect the cables to the **dome body**.



Mount and screw the **Dome** to the top holder. Put on the **water proof rubber**.







Completed dome camera GNSD882

# 2.3 Connecting the GNSD682

Die nachfolgende Dokumentation beschreibt die Installation der Dome - Kamera.

### 2.3.1 Dome Installation

It is possible to mount the dome at the ceiling or the wall. In the following both kinds of mounting are described.

# 2.3.1.1 Ceiling Mount

Generally, there are three kinds of dome camera ceiling mounting methods: hard-ceiling, in-ceiling and mounting with straight tube. Refer to the following sections for more details.

The following figures show how to connect the cables to the dome camera in different ways.

**Hard Ceiling Mount** 



(cable exposed)



**In-ceiling Mount** 



(cable recessed)



# **Hard Ceiling Mounting**

Hard Ceiling Mounting is a standard installation for an indoor dome, and general mounting accessories are equipped in the standard indoor dome camera package. Here lists the items and tools needed to mount the dome camera onto the ceilings. The supplied items are all in the dome camera package.

#### Items needed:

- Dome Camera
- Hard Ceiling Mount and Decoration Ring (Supplied)
- Fixing Plate (Supplied)

Follow the steps to install the high speed dome camera for hard ceilings.

#### STEP 1

Screw the Fixing Plate to your Dome Body.



#### STEP 2

Remove the Decoration Ring from the Hard Ceiling Mount.

#### STEP 3

Attach the mount to the ceiling. Mark the locations where all three ceiling holes should go.

#### STEP 4

Drill these holes on the hard ceiling.

#### STEP 5


Fix the mount to the holes on the hard ceiling with three screws, as marked in the figure.





#### STEP 6

Thread the data cable through the center hole of the mount and connect the cable to the dome body.

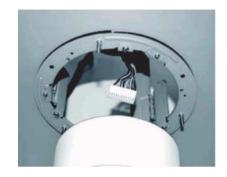

#### STEP 7

Attach the dome body to the mount and rotate the dome clockwise. Tighten the fixing screw, as marked in the figure, to fix the dome body.





**NOTE:** Make sure the optical cover is removed before carrying out the procedure.



#### STEP 8

Fix the decoration ring to the bracket.



#### STEP 9

Place the optical cover back to the dome camera.



### Completion

# **In-ceiling Mounting**

Here lists the items and tools needed to mount the dome camera into the ceiling. The supplied items are in the dome camera package.

#### Items needed:

- Dome Camera
- T-Bar (Optional Accessory)
- Supplied Screw (Equipped with T-Bar)
- Red Sticker (Equipped with T-Bar)
- Decoration Ring (Supplied)

Follow the steps to install the integrated high speed dome camera with T-Bar Ceiling mount accessory for in-ceiling mounting.



**NOTE:** Make sure the optical cover is removed before carrying out the procedure.

### Step 1:

Disassemble the wing (indicated in the diagram) from the T-Bar Ceiling Mount, and take out the supplied screw in the small bag.




### Step 2:

Attach the separated wing to the dome, as shown in the figure.



#### STEP 3

Place the red sticker on the ceiling plate, and cut the circle part out of the ceiling.

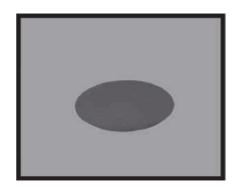

#### STEP 4

Put up the T-Bar into the ceiling opening.

#### STEP 5

Rotate T-Bar wings of the hinge to fix the T-Bar at the edge of the ceiling opening.

#### STEP 6

Tighten the screws, and the T-Bar wings will adhere to the



ceiling.



#### STEP 7

Put the data cable down through the center hole of the T-bar and connect it to the dome body.



#### STEP 8

Mount the dome body to the bracket and rotate it clockwise.



Tighten the fixing screw, as marked in the figure, to fix the dome body.



STEP 9
Fix the decoration ring to the bracket and then place back the optical cover.




# **Ceiling Mounting with Straight Tube**

The straight tube is available in different length: 25 cm and 50 cm.

#### Items needed:

- Dome Camera
- Straight Tube and other equipped items (optional accessory)
- Indoor Mount Kit and attached components (optional accessory)

Screws and Screw Anchors for fixing the straight tube onto the ceiling (not supplied)

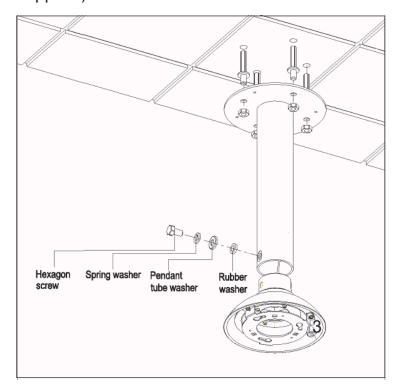

Ceiling Mounting: Straight Tube + Indoor Mount Kit

Follow the steps to mount the dome with the straight tube.




**NOTE:** Make sure the optical cover is removed before carrying out the procedure.

- 1) Ensure that the ceiling can support the weight of the dome camera and straight tube.
- 2) Make a cable entry hole on the ceiling.
- 3) Fix the suspension bracket to the ceiling with proper screws and screw anchors (not supplied).
- 4) Thread the cables through the straight tube and the Indoor Mount kit.



**NOTE:** For the concern of appearance, it is suggested to remove the waterproof rubber equipped with the straight tube during installation.

- 5) Fix the Indoor Mount Kit to the straight tube with the supplied screws and washers.
- 6) Take out the Lock Screw Plate from the small bag in the Indoor Mount Kit's package and attach it to the dome back plate, as shown in the picture.

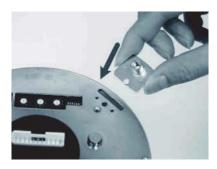



7) Fix the plate onto the dome back with the small screw, as marked in the figure.

Connect the cables to the dome camera. Mount the dome camera to the Indoor Mount Kit. (Ensure the dome camera is fixed completely, and the thread holes on the Lock Screw Plate and Indoor Mount Kit are aligned.) Afterwards, screw the supplied standard screw / security screw, as shown in the picture 3




### 2.3.1.2 Wall Mount / Mini Pendant Mount


#### Items needed:

- Dome Camera
- Mini Pendant Mount and other equipped items (optional accessory)
- Indoor Mount Kit and attached components (optional accessory)
- Screws and Screw Anchors for fixing the Mini Pendant Mount on wall Follow the steps to mount the dome with the Mini Pendant Mount.





**NOTE:** Make sure the optical cover is removed before carrying out the procedure.

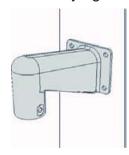

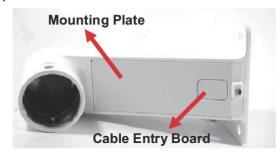

- 1) Make a cable entry hole on the wall to recess the cables. Otherwise, users could push up the cable entry board on the Mini Pendant Mount's mounting plate to place the cables, as shown in the photo below.
- 2) To avoid insects entering the pendant mount, you could block the cable entry hole with the supplied sponge in two ways. See the illustrations below.

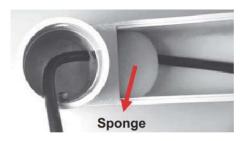

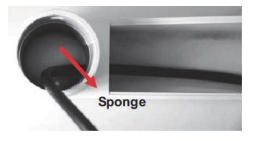


- 3) Thread the cable through the Mini Pendant Mount and fix the pendant mount on the wall with proper screws and screw anchors (not supplied).
- 4) Connect the cable to the dome camera. Then attach the dome to the Indoor Mounting Kit and fix them with the supplied screw. Please refer to Ceiling Mounting with Straight Tube: step 6-9 for

information about mounting with Indoor Mount Kit.

Please note, that you can mount the GNSD682 only by using the Indoor Mount Kit **GSD/BDA-001** 

Please order separately (Ord.no. 5.04866)

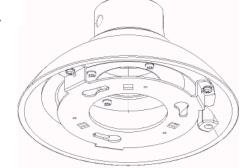


# 2.4 System versions to remote control IP domes via MBeg/GCT-3X-LAN

#### a) MBeg/GCT-3X-LAN in combination with re porter:

In this combination it is possible to connect only 1 remote control device directly to the re\_porter system. With this remote control device you can only control the connected re\_porter.

The MBeg/GCT-3X-LAN should be connected to the re\_porter via switch. The IP domes can be connected to the same switch or, if necessary, to other units, when the number of IP domes exceed the connectors of this switch. The maximum number of IP domes depends on the frame rate, the picture quality, etc.

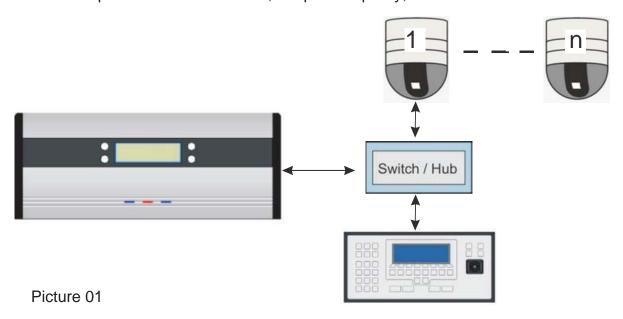


You can see the IP domes as CAM2IP signal sources in GSC-Setup.




Picture 02

You have to combine their MAC-addresses with IP-addresses on this re\_porter and additionally configure them as local video inputs for correct camera identification on the MBeg/GCT-3X-LAN.

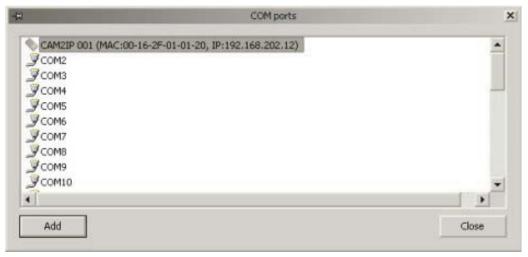


Picture 03

The COM port will be visualised as CAM2IP-Port under Telecontrol and has to be parameterised for the GEUTEBRUECK/JVC protocol.

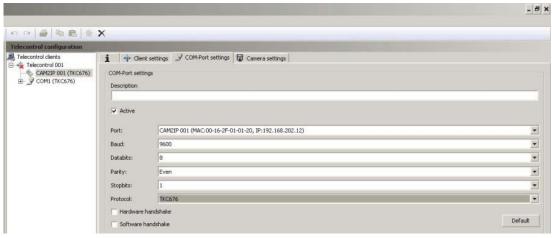

Picture 04

Selecting cameras via MBeg/GCT-3X-LAN is similar to the selection of "normal" cameras – the local inputs will be set in order to the activated CAM2IP- cameras in GSC-Setup.

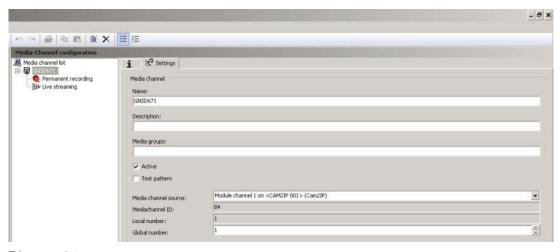

Picture 05

#### b) MBeg/GCT-3X-LAN in combination with max. three GeViScopes:


On a GeViScope (GeViScope Dongle) the following licenses are included: 1x Licence/GSC/OpKeyb plus 3x Licence/GSC/SysIntMSC+GSC.

You have to install the software GeViSoft on the "first" GSC where you need the above mentioned licenses. The GSCs have to be connected via LAN and the MBeg/GCT-3X-LAN to the "first" unit. To every GSC you can connect as many IP domes as it is described in a).

Activation and parameterisation is identical to a). You have to activate and program Telecontrol on EVERY GSC!




Note: to connect only ONE GSC with a remote control keyboard you must install the software GeViSoft on this GSC!

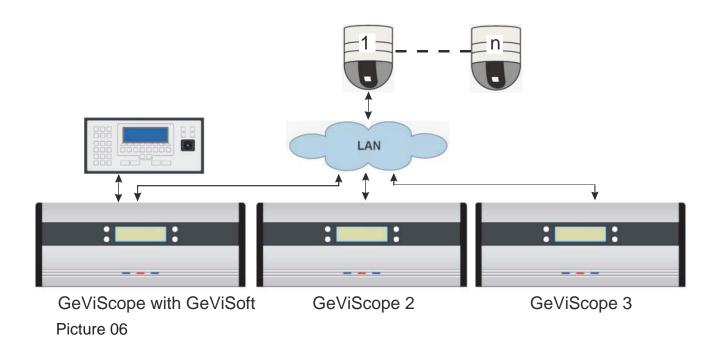

#### c) MBeg/GCT-3X-LAN in combination with n-GSCs:

Here it is recommended to install GeViSoft on a separate PC. This PC needs a GeViSoft-Dongle with an equivalent number of licenses (n x Licence/GSC/Sys-IntMSC+GSC) as there are GeViScopes.

The GSCs must be connected via LAN. As described under b) you can connect as many IP domes to each GSC, depending on frame rate and picture quality, etc. All connected GeViScopes then are controlled through the central management system running GeViSoft.

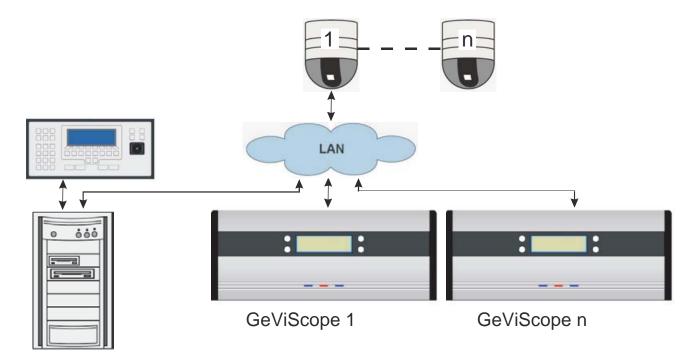

PC with GeViSoft-Dongle and needed Licenses

Picture 07

### 2.5 IP dome programming in GSC-Setup

The IP dome programming/activating is integrated in GSC-Setup. Before doing this, you should check the dome ID (must be 001) and its protocol number (must be 20). connecting the dome to a switch and powering up you can add the located CAM2IPs in the menu "Hardware". Here you have to give them IP-addresses. In the menu point "Telecontrol" you must add the "CAM2IP Port" and configure it for the needed protocol. All bus IDs have to be changed to "1". Now you can remote control the installed IP domes.

**Note!** If the dome ID should be "000" it works in a "Test-mode" and you cannot remote control it!

### 2.5.1 Commissioning of IP Domes in GSC-Setup

The available VIPCAM are automatically searched for in the GeViScope setup. They appear in the hardware module list.

The following steps are required:

- The VIPCAM domes must be assigned an IP address and a function package.
- Adding and configuring of the media channels.
- Adding of the network port in Telecontrol.
- Proof of the dome functions in Telecontrol.

Following this, the connected VIPCAM domes are available in the GeViScope / re\_porter.



#### Attention:

To install the VIPCAM domes correctly, the GeViScope/re\_porter Software must be version 5.0.790.48 or higher.


Older Software must be updated. Please download at: www.geutebrueck.com

#### Hinzufügen der VIPCAM-Dome

Open the GeViScope setup menu by double-clicking the desktop icon




**Step 1:** Connect the GeViScope to a server in the Connections menu.

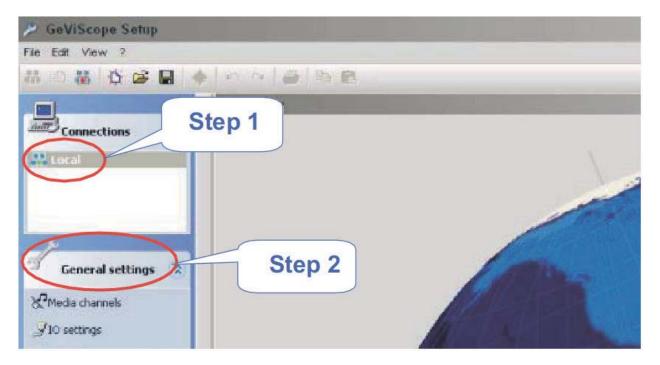

**Step 2:** Click the left mouse button to open the General Settings menu.

**Step 3:** Click the menu item for Hardware in the General Settings menu. The Hardware in the basic unit that have been registered and configured are listed.

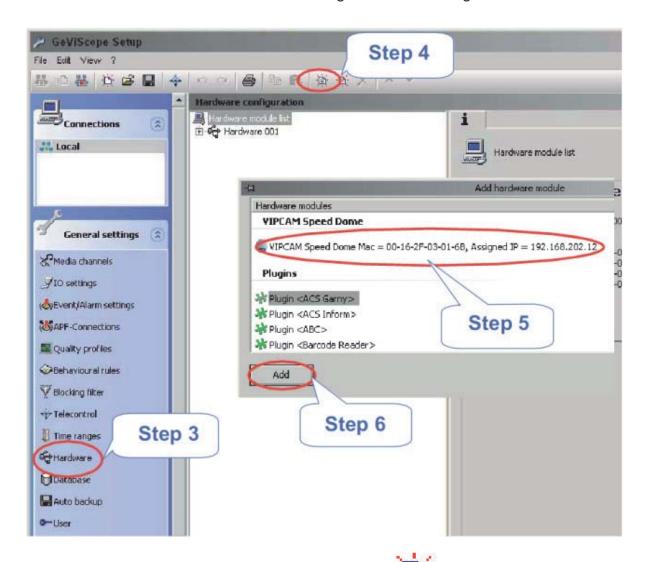

Step 4: The context menu is opened by clicking the [Add] button.


**Step 5:** In the list that appears, please select the VIPCAM domes that you would like to add.

**Step 6:** Confirm the selection by clicking Add.

The additional dome now appears in the hardware module list.

Click the icon it to send the settings to the server.

- Step 7: Select the VIPCAM dome that is to be configured.
- **Step 8:** Choose the VIPCAM dome settings tab and assign an available IP-adress.

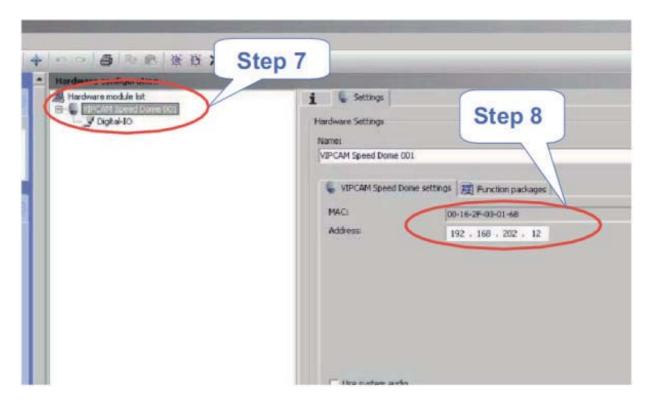

### Installation information for IP address configuration:

VIPCAM domes use static IP addresses. Therefore, the IP address of the GeViScope must have an IP address from the same IP subnet as the VIPCAM dome device.

#### a) Static IP address

GeViScope is assigned a fixed static IP address with the same IP subnet as the VIPCAM dome. This is the preferred configuration for a GeViScope that uses VIPCAM dome devices.

#### b) 2 network cards

As an alternative to a) a second network card can be installed in the GeViScope. This makes a dual operation of DHCP and static IP possible. Communication with the VIPCAM dome devices is carried out over the second network card that is configured with a static IP address as in a).

#### c) DHCP Modus

A GeViScope that runs in DHCP mode must be assigned, by the DHCP server, either a static IP address or an IP address from the same IP subnet as the VIPCAM dome devices.



#### Attention:

A loss of the connection to the DHCP server can cause the connection to the VIPCAM dome devices to be lost! This operating mode should only be used if a continuous connection to the DHCP server is ensured!

#### Use of VIPCAM domes in IP networks with routers:

In the current software version VIPCAM domes use UDP broadcast packages for the localization and status transmission.


Any existing routers must be configured so that >all< TCP and UDP packages with the port numbers

#### 12010 to 12013

are relayed in both directions.

If the VIPCAM dome devices cannot be localized, the routers are not correctly configured for IP dome operation.

**Step 9:** Choose the Function packages tab, and open the selection box. Select the appropriate function package (compression software).

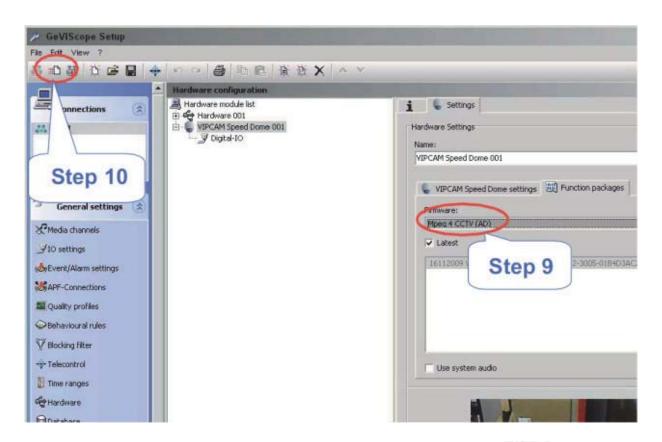

**Step 10:** When you have checked all the settings yet again, click the iii icon to send the settings to the server.

#### Adding and configuring media channels


**Step 11:** On the General settings menu, click Media channels in order to initialize the media settings.

The media channels of the basic unit are displayed.

Step 12: The context menu is opened by clicking the






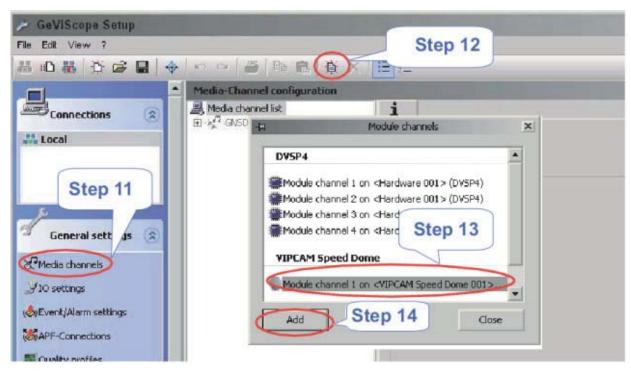

**Step 13:** Please select the channels that you would like to add from the list that appears.

Step 14: Confirm the input by clicking Add.

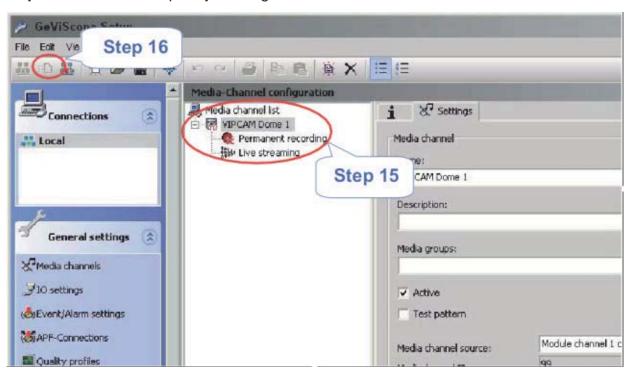


**Step 15:** Parameterize the media channels, as described in the online help.


**Step 16:** When you have checked all the settings yet again, click the icon to send the settings to the server.

### **Settings in GSCSetup / Telecontrol**

**Step 17:** On the General settings menu, click on Telecontrol.

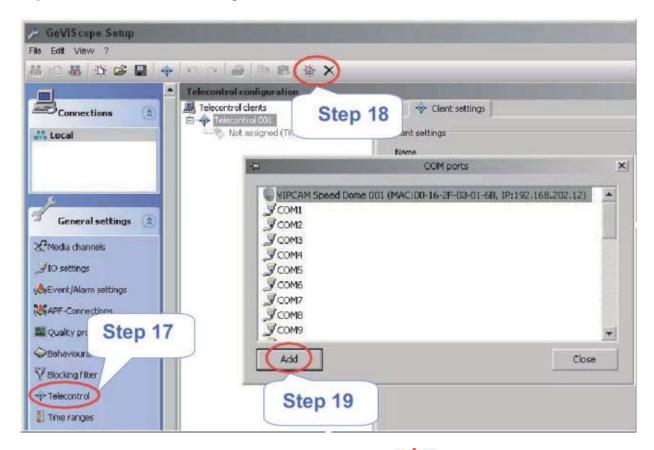


- **Step 19:** Please select the VIPCAM dome that you would like to add from the list that appears. Confirm the input by clicking Add.
- Step 20: Select the added dome.
- Step 21: Click on the tab "camera settings" to open the video control window.
- **Step 22:** Click on the button "Telecontrol" to open the remote control window.
- **Step 23:** Please proof the VIPCAM dome functions by moving the joystick and sliders with your mouse. You can see the movements in the video control window.

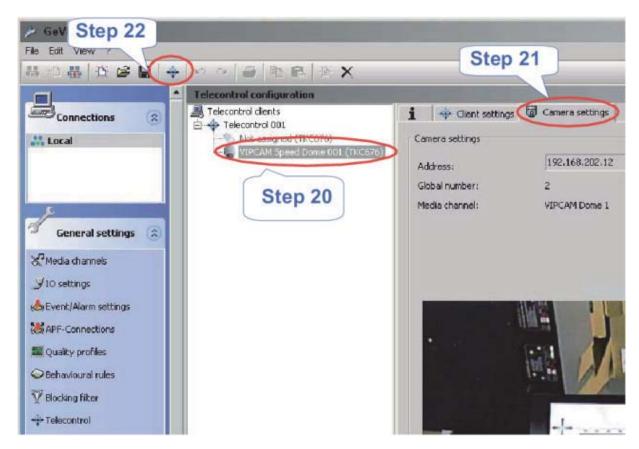

**Step 24:** To open the OnScreenDisplay of the VIPCAM dome, klick on the button "Function V On" or "Camera ON".






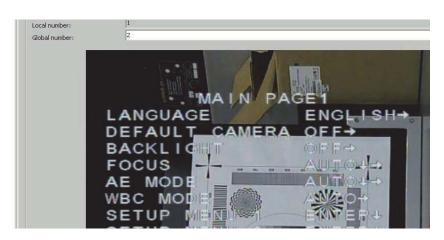

# 3 Operation and Configuration

# 3.1 Display Format

The information shown on the screen is described in terms of OSD, their position and function description in the table below.

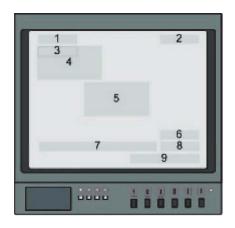

Position	Function	OSD Display	Description
1		without function	not supported
2	Alarm	ALARM	Alarm Message
		Α	Auto Focus Mode
	Focus Modes	M	Manual Focus Mode
3	& Backlight	X	Backlight Compensation OFF
	Baokingrit	В	Backlight Compensation ON
4	Booting Message	XX (Dome Type) ID: 001 (Default) DSCP/9600 (Default) INITIALIZING	Shows Dome Type, ID Address, Protocol and Baud Rate
5	Error Message	PAN ERROR TILT ERROR CAM MODULE ERROR	Shows system initializing error message
6	Zoom Ratio	tatio x1 (Optical Zoo	Present Zoom Ratio (Optical Zoom/Digital Zoom)
7	Title	<ul><li>Maximum 20 characters for each title.</li><li>16 sets of title are available.</li></ul>	
8	Camera ID	001	Shows the camera ID
9	Time	XXXX/XX/XX XX:XX	Year/Month/Day Hour:Minute

# 3.2 OSD Menu Tree

The OSD setup menu structure of the domes is listed in the following section.

The star symbol indicates the factory default.

For detailed function description, please see 3.3 Configuration Menu

# 3.2.1 GNSD882 /GNSD682

Item	Layer 1	Layer 2	Layer 3	Default	
LANGUAGE	<italian>, <jai< td=""><td>PANESE&gt;, <po< td=""><td colspan="3">PLIFIED CHINESE&gt;, <french>, <german>, ANESE&gt;, <polish>, <portuguese>, RKISH&gt;, <spanish></spanish></portuguese></polish></german></french></td></po<></td></jai<></italian>	PANESE>, <po< td=""><td colspan="3">PLIFIED CHINESE&gt;, <french>, <german>, ANESE&gt;, <polish>, <portuguese>, RKISH&gt;, <spanish></spanish></portuguese></polish></german></french></td></po<>	PLIFIED CHINESE>, <french>, <german>, ANESE&gt;, <polish>, <portuguese>, RKISH&gt;, <spanish></spanish></portuguese></polish></german></french>		
DEFAULT CAMERA	<0N>, <0FF>			ON	
BACKLIGHT	<on>, <off></off></on>			OFF	
FOCUS	AUTO	AF MODE < <zoomtrig></zoomtrig>	NORMAL>, <interval>,</interval>	NORMAL	
	MANUAL	FOCUS SPEE	ED <01> ~ <08>		
	EXPOSURE COMP.	<off>, EXPC &lt;+10.5 dB&gt;, &lt;</off>	OSURE VALUE: <-10.5 dB> ~ ON>	OFF	
		AUTO			
		BRIGHT	BRIGHT VALUE <00> ~ <31>		
		SHUTTER	SHUTTER SPEED <1/10000> ~ <1>SEC.		
AE MODE	AE MODE	IRIS	IRIS VALUE <close>, <f1.6> ~ <f28></f28></f1.6></close>		
			BRIGHT VALUE: AUTO		
			SHUTTERSPEED		
		MANUAL	<1/10000> ~ <1>		
			IRIS VALUE <f1.6> ~ <f28></f28></f1.6>		
	EXIT	GAIN VALUE <-3>dB ~ <28>dB YES			
	AUTO (Auto Whi	1		☆	
	INDOOR	ille Balarice)		A	
	OUTDOOR				
WBC MODE	ATW (Auto-tracking WBC)				
		RGAIN <00			
	MANUAL	BGAIN <000> ~ <127>			
	ZOOM SPEED	<1> ~ <8>		8	
	DIGITAL ZOOM			ON	
SETUP MENU 1	SLOW SHUTTER	<on>, <off></off></on>		OFF	
	IMAGE INVERSE	<on>, <off></off></on>		OFF	
	FREEZE	<on>, <off></off></on>		OFF	

Item	Layer 1	Layer 2	Layer 3	Default
	APERTURE	<01> ~ <16>		11
SETUP MENU 1	STABILIZER	<on>, <off></off></on>		OFF
	STABLE ZOOM	<on>, <off></off></on>		OFF
	EXIT	YES		
	FLIP	<off>, <m.e>, <image/></m.e></off>		OFF
	ANGLE	MIN ANGLE <-	10 ~ +10 DEG>	0
	ADJUSTER	MAX ANGLE <080 ~ 100 DEG>		90
	SPEED BY ZOOM	<0N>, <0FF>		OFF
SETUP MENU 2	AUTOCALI	<on>, <off></off></on>		OFF
	PASSWORD	<on>, <off></off></on>		OFF
	SYSTEM RESET	YES		
	SCAN MODE	<l>, <p></p></l>		I
	EXIT	YES		
ID DISPLAY	<on>, <off></off></on>			ON
TITLE DISPLAY	<on>, <off></off></on>			OFF
TITLE SETTING	<01>~ <16>			01
	PRESET SET	<001> ~ <256>		ENTER
PRESET	PRESET RUN	<001> ~ <256>		ENTER
	EXIT	YES		ENTER
	SEQUENCE LINE	<1> ~ <8>		1
	SEQUENCE POINT	<01> ~ <32>		01
SEQUENCE	PRESET POS.	<001> ~ <255>	, <end></end>	001
SEQUENCE	SPEED	<01> ~ <15>		01
	DWELL TIME	<000> ~ <127>	SEC.	000
	RUN SEQUENCE	ENTER		
	EXIT	YES		
	AUTOPAN LINE			1
	START POINT	<to find="">, <t< td=""><td></td><td></td></t<></to>		
	END POINT	<to find="">, <t< td=""><td></td><td></td></t<></to>		
AUTOPAN	DIRECTION	<right>, <le< td=""><td>FT&gt;</td><td>RIGHT</td></le<></right>	FT>	RIGHT
	SPEED	<01> ~ <04>		01
	RUN AUTOPAN			
	EXIT	YES		
	CRUISE LINE	<1> ~ <4>		1
CRUISE	RECORD START	ENTER		
CINOIOL	RECORD END	ENTER		
	RUN CRUISE	ENTER		
	EXIT	YES		

Item	Layer 1	Layer 2 Layer 3	Default	
	HOME FUNCTION	<on>, <off></off></on>	OFF	
	SELECT MODE	<preset>, <sequence>, <autopan>, <cruise></cruise></autopan></sequence></preset>	PRESET	
	PRESET POINT	<001> ~ <256>	001	
LIOME OFTEN	SEQUENCE LINE	<1> ~ <8>	1	
HOME SETTING	AUTOPAN LINE	<1> ~ <4>	1	
	CRUISE LINE	<1> ~ <4>	1	
	RETURN TIME	<1> ~ <128>MIN.	1	
	GO	ENTER		
	EXIT	YES		
	<auto></auto>	THRESHOLD <01> ~ <29> < LIGHT SOURCE>, IR/VISIBLE		
IR FUNCTION	<manual></manual>	IR MANUAL: <on>, <off> &lt; LIGHT SOURCE&gt;, IR/VISIBLE</off></on>	AUTO	
	<cable></cable>	(Alarm pin 8: open = color mode; closed = BW mode)		
	ALARM PIN	<1> ~ <8>	1	
	ALARM SWITCH	<0N>, <0FF>	OFF	
	ALARM TYPE	<no> (Normal Open), <nc> (Normal Close)</nc></no>	N.C.	
	ALARM ACTION	<preset>, <sequence>, <autopan>, <cruise></cruise></autopan></sequence></preset>	PRESET	
ALARM SETTING	PRESET POINT	<001> ~ <256>	001	
SETTING	SEQUENCE LINE AUTOPAN LINE	<1> ~ <8>	1	
		<1> ~ <4>	1	
	CRUISE LINE	<1> ~ <4>	1	
	DWELL TIME	<001> ~ <127>sec., <always></always>	ALWAYS	
	EXIT	YES		
	DETECT SWITCH	<0N>, <0FF>	OFF	
	DETECT MODE	ON: <int focus="">, <fix focus="">, <fix ae="">, <int ae="">, <motion>; OFF: NONE</motion></int></fix></fix></int>		
ALADM DETECT	BLOCK MODE	NONE; MOTION: <on>, <off></off></on>		
ALARM DETECT	FRAME SET	NONE; MOTION: <01> ~ <04>		
	FRAME DISABLE	NONE; MOTION: <01> ~ <04>		
	THRESHOLD	NONE; MOTION: <001> ~ <255>		
	EXIT	YES		
WDR FUNCTION	<on>, <off>, <auto>, <rf>, <dc>, <auto></auto></dc></rf></auto></off></on>		OFF	

Item	Layer 1	Layer 2	Layer 3	Default
	PRIVACY SWITCH	<on>, <off></off></on>	,	OFF
	TRANSPARENCY	<0N>, <0FF>	-ONOFF-	
	TTO GOOD AGE TO T	· · · · · · · · · · · · · · · · · · ·	I GRAY>, <lo gray="">,</lo>	OFF
	COLOR		ED>, <green>, <blue>,</blue></green>	BLACK
PRIVACY MASK		1	<cyan>, <yellow>, <magenta></magenta></yellow></cyan>	
			H CENTER: L/R	
			V CENTER: D/U	
	SET MASK	<01> ~ <24>	H SIZE <000> ~ <080>	
			V SIZE <000> ~ <060>	
			EXIT + SAVE	
	CLEAR MASK	<01> ~ <24>		
	EXIT	YES		
	TIME DISPLAY	<on>, <off></off></on>		
	SET YEAR	<00> ~ <99>		
	SET MONTH	<01> ~ <12>		
TIME SETTING	SET DAY	<00> ~ <31>		
	SET HOUR	<00> ~ <23>		
	SET MINUTE	<00> ~ <59>		
	EXIT+SAVE			
	SWITCH	<on>, <off></off></on>		
	POINT	<01> ~ <32>		01
	HOUR	<00> ~ <23>		00
	MINUTE	<00> ~ <59>		00
		NONE	NO FUNCTION	☆
		PRESET	PRESET POINT <001> ~ <256>	
SCHEDULE		SEQUENCE	SEQUENCE LINE <1> ~ <8>	
OGNEDOLL	MODE	AUTOPAN	AUTOPAN LINE <1> ~ <4>	
		CRUISE	CRUISE LINE <1> ~ <4>	
		IR FUNC.	IR FUNCTION <auto>, <on>, <off></off></on></auto>	
	SCHEDULE RESET	YES		
	EXIT	YES		
EXIT OSD	YES			

# 3.3 Configuration Menu

The detailed functions and parameter settings of your high speed dome can be set through the OSD (On Screen Display) menu with a control device, such as a control keyboard or special software. The items in the OSD menu are described in the following sections.

# **OSD-SETTING** with the **GEUTEBRUECK** keyboard **MBeg/GCT**

To enter the OSD menu of your camera, press the button <CAMERA ON>. With the joystick of the keyboard you can move the cursor to the OSD menu points

- At menu points with a → sign, move the joystick to the right or left to choose and configure the menu point
- At menu points with a ↓ sign, press the button <CAMERA OFF> to enter the sub menu
- At menu points with a  $\rightarrow \downarrow$  sign, move the Joystick to the right or left to choose a function and then the button <CAMERA OFF> to enter the sub menu.

You find more details about the setting in the documentation of your keyboard.

## OSD-SETTING via GscTelecontrol (only in GscSetup!)

To enter the OSD menu of your camera press the button <CAMERA ON>. With the joystick on the screen you can move the cursor to the OSD menu points.

The procedure to move in the OSD menu is as described above.

All movements in the following chapters are done in this manner!

### 3.3.1 LANGUAGE

The camera supports multi-language OSD operation; the available languages include English, Simplified Chinese, French, German, Italian, Japanese, Polish, Portuguese, Russian, Spanish and Turkish. You can straight set a wanted language on the MAIN PAGE 1, as shown below. As you select a language with the joystick, the OSD will automatically change to the language you selected.

The default language is <ENGLISH>.

MAIN PA	GE 1	
LANGUAGE	ENGLISH	
DEFAULT CAMERA	ON	
BACKLIGHT	OFF	
FOCUS	AUTO	
AE MODE	ENTER	
WBC MODE	AUTO	
SETUP MENU 1	ENTER	
SETUP MENU 2	ENTER	

### 3.3.2 DEFAULT CAMERA

The DEFAULT CAMERA is used to restore some camera setting to default setting, including Backlight, Focus, AE, WBC, Aperture, Zoom Speed and Digital Zoom. Once any one of the items is modified, the setting will become <OFF> automatically. Select <ON> for this item to recall the mentioned camera parameters.

### 3.3.3 BACKLIGHT

The Backlight compensation function prevents the center object from being too dark in surroundings where excessive light is behind the object. The Backlight Compensation Level ranges from 00 to 30.





**NOTE**:If this function is enabled, the WDR function will be disabled automatically. For details, refer to section 3.3.19 WDR Setting.

## **3.3.4 FOCUS**

The focus of the dome camera can be operated in two modes: Auto Focus mode and Manual Focus mode. Various settings for different modes are described as following.

### AUTO

The optimum focus is achieved by the internal digital circuit. There are 3 modes for users to select for different conditions.

**Normal AF (Auto Focus)** Mode: the dome camera will automatically adjust the focus of the picture.

**Zoom Trigger Mode**: When users press the TELE or the WIDE keys on a control keyboard or other control devices to change the zoom, the dome camera will automatically adjust its focus after a period of time (the factory default value is five seconds) until the commands of TELE/WIDE is terminated.

**Interval AF Mode:** The mode is used for AF movements carried out at particular intervals. If users pan/tilt the dome camera, the camera will focus automatically after a period of time; the initial value is five seconds.

### MANUAL

In this focus mode, users can adjust the focus speed, ranging from 01-08.

FOCUS SPEED	01	
-------------	----	--

**NOTE:** The AF mode will be resumed after every boot. After completing setup of focus, go back to the **Main Page 1** and continue to set the AE mode.

MAIN PAGE 1
LANGUAGE ENGLISH
DEFAULT CAMERA ON
BACKLIGHT OFF
FOCUS AUTO
AE MODE ENTER
WBC MODE AUTO
SETUP MENU 1 ENTER

### 3.3.5 **AE MODE**

The exposure is the amount of light received by the image sensor and is determined by the width of lens diaphragm opening (iris adjustment), the amount of exposure by the sensor (shutter speed) and other exposure parameters. With this item, users can define how the Auto Exposure (AE) function works.

### EXPOSURE COMPENSATION

The exposure value ranges from -10.5 dB  $\sim$  +10.5 dB. Select <OFF> to disable the function.

### AE MODE

#### **AUTO**

In this mode, the camera's Brightness, Shutter Speed, IRIS and AGC (Auto Gain Control) control circuits work together automatically to get consistent video output level.

NOTE: If not in AUTO exposure mode, IR cut filter cannot automatically switch to day/night mode.

#### **BRIGHT**

The brightness control function adjusts IRIS and AGC using an internal algorithm. Brightness is controlled by gain when the light condition is dark and by iris when the light condition is bright. The bright value ranges from 00-31.

### **SHUTTER**

With this option, SHUTTER speed takes main control of exposure and both IRIS and AGC will function automatically in cooperation with shutter speed to achieve consistent exposure output. The range of shutter speed is: from 1/10000 ~ 1.

### **IRIS**

With this option, the IRIS function adjusts exposure in higher property. SHUTTER speed and AGC circuit will function automatically in cooperating with IRIS to get consistent exposure output. The opening of a lens controls the amount of light reaching to the surface of the selected device. By increasing the F-stop number (F1.6, F2, F2.4, etc.), less light is permitted to pass; options range from F1.6 ~ F28.

### **MANUAL**

In this mode, users can adjust shutter speed (1/10000  $\sim$  1), iris value (F1.6  $\sim$  F28) and gain value (-3 dB  $\sim$  +28 dB).

### **EXIT**

Exit the AE MODE menu and go back to the **Main Page 1** to continue to set the WBC mode.

MAIN PA	GE 1
LANGUAGE	ENGLISH
DEFAULT CAMERA	ON
BACKLIGHT	OFF
FOCUS	AUTO
AE MODE	ENTER
WBC MODE	AUTO
SETUP MENU 1	ENTER
SETUP MENU 2	ENTER
(	

### **3.3.6 WBC MODE**

A digital camera needs to find reference color temperature, which is a way of measuring the quality of a light source, for calculating all the other colors. The unit for measuring this ratio is in degree Kelvin (K). You can select one of the White Balance Control modes according to the condition. The following table shows the color temperature of some light sources.

Light sources	Color Temperature in K
Cloudy Sky	6000 to 8000
Noon Sun and Clear Sky	6500
Household Lighting	2500 to 3000
75-watt Bulb	2820
Candle Flame	1200 to 1500
Cloudy Sky	6000 to 8000

### AUTO

In this mode, white balance works within its color temperature range. This mode computes the white balance value output using color information from the entire screen. It outputs the proper value using the color temperature radiating from a black subject based on a range of values from 3000 K to 7500 K.

### INDOOR

3200 K Base mode.

#### OUTDOOR

5800 K Base mode.

### • ATW (Auto Tracking White Balance)

The dome takes the signal in the range from 2000 K to 10000 K.

### MANUAL

In this mode, users can change the White Balance value manually; R gain and B gain are adjustable and range from 000 to 127.

WBC M	ENU
R GAIN	050
B GAIN	050
SETUP MENU 1	ENTER
SETUP MENU 2	ENTER

After WBC relevant parameter setups are completed, please exit the WBC MODE menu and go back to the **Main Page 1** to continue to set other functions under the setup menu 1.

MAIN PAGE 1 LANGUAGE **ENGLISH** DEFAULT CAMERA ON BACKLIGHT OFF **FOCUS AUTO** AE MODE **ENTER WBC MODE** AUTO SETUP MENU 1 **ENTER** SETUP MENU 2 **ENTER** 

### 3.3.7 **SETUP MENU 1**

**SETUP MENU 1** ZOOM SPEED DIGITAL ZOOM ON SLOW SHUTTER **OFF IMAGE INVERSE OFF FREEZE** OFF **APERTURE** 11 **OFF STABILIZER** STABLE ZOOM OFF YES

### ZOOM SPEED

This item is used to set the zoom speed of the dome camera.

The zoom speed value ranges from <1> (slow) to <8> (fast). The default value is <8>.

### DIGITAL ZOOM

With this item, users can enable or disable the 12x Digital Zoom. The Digital Zoom will be activated after the full Optical Zoom level is reached.

NOTE: The difference between optical and digital zoom is that optical zoom uses the lens within the camera to draw the image closer via zoom in or out to achieve the desired effect. Optical zoom remains the same quality and full resolution of the zoomed image. On the other hand, Digital zoom takes a portion of an image and expands the partial image to the full size of the original image; therefore, the image quality will be reduced.

Maximum 12x digital zoom function is allowed to be enabled. The default setting is <ON>.

### SLOW SHUTTER

The shutter speed determines how long the image sensor is exposed to light. To see clear image in a dark environment, please enable Digital Slow Shutter function and select a slower shutter speed.

As enable the Digital Slow Shutter function, the dome camera will automatically adjust the shutter speed basing on the light condition of installation environment. It enables users to see objects in a dark environment below 0.2 lux.

# • IMAGE INVERSE (e. g. if the dome stands on a table for demo)

Users can select <ON> to make the displayed image inversed vertically and horizontally (see the figures shown below). Occasions to employ the function

include conferences, demonstration, testing, etc. The default setting is <OFF>.

**Application:** Users can see the displayed images, as shown below, when a dome is placed on the desk in a conference, for instance.

**IMAGE INVERSE (OFF)** 

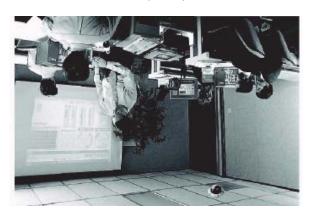


IMAGE INVERSE (ON)



 $\triangle$ 

**NOTE:** When Image Inverse function is enabled, the privacy mask(s) will be set off automatically (see **3.3.21 PRIVACY MASK**).

### • FREEZE

With the Freeze function, users can temporarily freeze the present picture if necessary. During movement to a preset position the picture stands frozen until the preset position is reached.

### • APERTURE

Under this setup menu, users can adjust enhancement of the edges of objects in the picture.

There are 16 levels of adjustment; the options are <01> ~ <16>; <01> represents "no enhancement". When shooting text, this function could make it sharp.

### STABILIZER

User can switch on the image stabilizer function (select <ON>) to reduce image blurring caused by vibration or other circumstances. A correction effect of approximately 90% can be achieved for a vibration with frequency around 10 Hz. The angle of view and resolution will be changed while sensitivity is maintained, because the image stabilizer function employs the digital zoom system. The default setting is <OFF>.

### STABLE ZOOM

With the Stable Zoom function, image stabilization starts naturally without bringing an abrupt change to the horizontal angle of view. An equivalent of 33x optical zoom is possible with Stable Zoom activated. The default setting is <OFF>.

### EXIT

Exit the SETUP MENU 1 and go back to the **MAIN PAGE 1** to set other functions under the setup menu 1.

(	MAIN PAGE	1
ı	LANGUAGE	ENGLISH
ı	DEFAULT CAMERA	ON
ı	BACKLIGHT	OFF
ı	FOCUS	AUTO
ı	AE MODE	ENTER
ı	WBC MODE	AUTO
ı	SETUP MENU 1	ENTER
l	SETUP MENU 2	ENTER
/		

### **3.3.8 SETUP MENU 2**

(	SETUP	MENU 2	1
ı	FLIP	ENTER	
ı	ANGLE ADJUSTER	ENTER	
ı	SPEED BY ZOOM	OFF	
ı	AUTO CALL	OFF	
ı	PASSWORD	OFF	
ı	SYSTEM RESET	YES	
ı	SCAN MODE	1	
l	EXIT	YES	
✓			J

### FLIP

Users can track an object continuously when it passes through under the dome camera with setting FLIP to IMAGE (digital flip) or M.E. (mechanical flip).

	FLIP SETTING	
FLIP	OFF	
EXIT	YES	

### **IMAGE**

IMAGE represents digital IMAGE FLIP, which enables users to keep tracking objects seamlessly; in this mode, almost no delay occurs in comparing with that under the M.E. mode.



**NOTE:** The Privacy Mask function will be automatically disabled if the Image Flip function is enabled, and the screen will show "MASK WILL BE SET OFF."

### M.E. (Mechanical Flip)

M.E. is a standard mechanical operation. As the Dome Camera tilts to the maximum angle, it will pan 180° and then continue tilting to keep tracking objects.

**NOTE:** Flip setting is manual-controlled only. If a Preset or a point of other function (e. g. Sequence) is set in the position that can only be reached through FLIP motion, when Flip is off, the position cannot be reached anymore.

### **OFF**

Select this item to disable the flip function.

NOTE: To make the dome camera tilt between a specific range, such as -10° to +100° or -10° ~ +190°, please go to **ANGLE**ADJUSTER (see next section) to set the angle range of tilt. Otherwise, the dome will tilt 90° as the default setting.

### ANGLE ADJUSTER

The item is for adjusting the angle range of tilt motion. The Range of the tilt motion varies in different FLIP modes: the angle ranges from -10° to +100° in the M.E. FLIP and FLIP OFF modes, and from -10° ~ +190° in the IMAGE FLIP mode.

ANGLE ADJUSTER
ADJUST MIN ANGLE -10DEG
ADJUST MAX ANGLE 100DEG
EXIT + SAVE YES

### SPEED BY ZOOM

If the item is set to <ON>, the pan/tilt speed will be automatically adjusted by internal algorithm when zooming. The larger zoom ratio leads to the lower rotating speed.

# AUTO CALI (Auto Calibration)

There are one horizontal point and one vertical infrared rays check point in each dome. During installation or maintenance, the dome camera's position may be moved. Therefore, the relative distance between the original set point and the check point will be changed. If the Auto Calibration function is enabled, the dome camera will automatically detect the matter and resets the horizontal point back to the original position.

### PASSWORD

The administrator can activate OSD Password function for security concerns. Once the function is turned on, users are required to enter the password every time when accessing to the OSD menu. The Password setting menu is shown below:

NEW PASSWORD:\_\_\_\_ CONFIRM PASSWORD:\_\_\_\_ 0123456789 <- SAVE EXIT

The password setting procedure is like the following:

STEP1: Choose a number with the joystick and then press the

**<CAMERA OFF>** button (**<ENTER>**) to input. For example:

<0> <CAMERA OFF>, <1> <CAMERA OFF>, <2> <CAMERA OFF>,

<3> <CAMERA OFF>.

PASSWORD: 0123

STEP 2: In the second line, enter the same password again to confirm the setting.

STEP 3: Move the cursor to <SAVE> and press **<CAMERA OFF>** to save the setting.

STEP 4: Move the cursor to <EXIT> and press **<CAMERA OFF>** to exit the password setting page.

If OSD Password function is enabled, when press the <CAMERA ON> button to enter the OSD menu, the password request message will be displayed as shown below. Please enter the password, press <ENTER> and then access to the OSD main menu. **The default password is "9527".** 

PLEASE ENTER PASSWORD

----0123456789
<- ENTER EXIT

### SYSTEM RESET

Select this item for system reboot (Default).

### SCAN MODE


Select <P> to enable Progressive Scan mode and <I> for Interlaced Scan mode. The default setting is <I>.



**NOTE:** It's a must to perform a cold boot after switching the scan mode in order to activate the scan mode selected. Please note that the new selected scan mode will only be activated after the dome is mechanically powered off and powered on again. A restart command is useless in this case.

### • EXIT

Exit the SETUP MENU 2 and go back to the **MAIN PAGE 1.** Then go to the **MAIN PAGE 2** to carry on setting other functions.

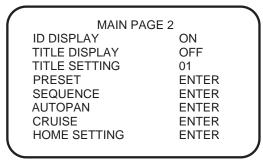

### 3.3.9 ID DISPLAY

Use the joystick moving down from MAIN MENU page 1 to page 2, and then the menu item <ID DISPLAY> is shown on the top. Users are allowed to choose whether the dome camera's ID will be displayed on screen for identifying the domes. For more information, please refer to **2.4 ID Setting** 

#### ON

Displays the ID address of the selected dome on the right bottom of the screen.

#### OFF

Hides the ID address of the selected dome.

### 3.3.10 TITLE DISPLAY

Users are allowed to name a view area, where the title will be displayed on screen for easy recognition.

#### ON

Select <ON> to display the title set for a view area on screen while the camera is shooting the view area.

#### OFF

When **TITLE DISPLAY** is set <OFF>, no title will be displayed on screen even titles have been set in advance.

### 3.3.11 TITLE SETTING

Up to 16 zone titles can be set with maximum 20 characters for each title.

Follow the steps to set a camera title.

STEP 1: Operate the dome to a view area where you want to set a title for it.

STEP 2: Turn on the OSD and go to the **MAIN PAGE 2** to select <TITLE SETTING>.

STEP 3: Select a number to represent the view area.

STEP 4: Press the **<CAMERA OFF>** button (**<ENTER>**) on the screen to go into the editing page.

	TITLE SETTING: 01									
C	) 1	2	3	4	5	6	7	8	9	EXIT
]	( L	M W +	Ν	Ο		Q	H R /	S	J T 1	SAVE LEFT RIGHT DELETE
A	ABC									

STEP 5: Choose a character with the joystick and then press the **<CAMERA**OFF> button (**<ENTER>**) to input. For example: A> **<CAMERA** OFF>, **<B> <CAMERA** OFF>, **<C> <CAMERA** OFF>.

TITLE: ABC

STEP 6: To delete input characters, move the cursor to <LEFT> or <RIGHT> and press <CAMERA OFF> to select a character in the entry field. Then move the cursor to <DELETE> and press <CAMERA OFF> to delete the selected character.

STEP 7: When the setting is completed, move the cursor to <SAVE> and press <CAMERA OFF> to save.

After completing title setting, go back to **MAIN PAGE 2** to carry on setup of preset points.

MAIN F	PAGE 2
ID DISPLAY	ON
TITLE DISPLAY	OFF
TITLE SETTING	01
PRESET	ENTER
SEQUENCE	ENTER
AUTOPAN	ENTER
CRUISE	ENTER
HOME SETTING	ENTER

### 3.3.12 PRESET

### PRESET SET

Totally 256 preset points (\*) can be set. Follow the steps below when in the preset setting menu.

STEP 1: Move the cursor right/left to select a number (001 for preset point 1, etc.)

STEP 2: Press the <CAMERA OFF> button (ENTER) on the screen and then move the dome camera to a targeted shooting area/point.

STEP 3: Press the <CAMERA OFF> button again to save the defined preset point. Once completing setup of a preset point, users could move the cursor to the next item to run the preset point.

(\*) **CAUTION!** If you run preset points **via GscTelecontrol/MBeg**, some **preset positions** are **not available**, because they are reserved for special functions!! **See appendix C.** 

### PRESET RUN

Press the **<CAMERA OFF>** button and the camera will go to the appointed point. To run other defined preset points select the preset point you want to go and press the **<CAMERA OFF>** button again.

#### • EXIT

Exit the PRESET menu and go back to the **MAIN PAGE 2** to carry on setup of sequence.

MAIN P	AGE 2
ID DISPLAY	ON
TITLE DISPLAY	OFF
TITLE SETTING	01
PRESET	ENTER
SEQUENCE	ENTER
AUTOPAN	ENTER
CRUISE	ENTER
HOME SETTING	ENTER
(	



NOTE: Users could set preset points through a keyboard. Please refer to the control keyboard's quick guide for further information.

### 3.3.13 SEQUENCE

The function executes pre-positioning of the pan, tilt, zoom and focus features in a certain sequence for a camera. Before setting this function, users must pre-define at least two preset points.

SEQUENCE
SEQUENCE LINE 1
SEQUENCE POINT 01
PRESET POSITION 001
SPEED 01
DWELL TIME 001
RUN SEQUENCE ENTER
EXIT YES

### SEQUENCE LINE

There are eight sets of sequence lines built in the dome camera. Using the joystick to select a line first and then set its sequence points.

### SEQUENCE POINT

Up to 32 points can be specified for each sequence line. The sequence points

represent the order of the preset points that the dome will automatically run. The following setup items, including PRESET POSITION, SPEED and DWELL TIME, will influence how the camera runs through each sequence point.

### PRESET POSITION

Users can assign a specific preset position to the selected Sequence Point with this item. Options include "1-256" and "END." END is used for the Sequence Point following the last Sequence Point when the amount of sequence points (see the previous section) is less than 32 points.

NOTE: If not all 32 points are used, please set the point following the last Sequence Point as "END" (PRESET POSITION) so that the sequence line can work properly. For example, if a user intends to set a Sequence Line with 5 sequence points, it is required to set the PRESET POSITION of Sequence Point 06 as "END."

### SPEED

Users can set the pan/tilt speed of the dome camera from one sequence point to the next one, and the range of setup speed is from 1 to 15. Within the range, PAN speed varies from 10 ~ 400 (degree/sec.) and TILT speed varies from 8 ~ 400 (degree/sec.).

### DWELL TIME


The DWELL TIME is the duration time that the dome camera will stay at a sequence point and the range is from <0> to <127> seconds. The dome will go to the next sequence point when the DWELL TIME expires. If the setting is <0>, the dome camera will stay at this sequence point for less than 1 second and then shift to the next point.

#### RUN SEQUENCE

Users can command the dome camera to run the selected sequence line manually. Press the **<CAMERA OFF>** button to execute a sequence line.

#### EXIT

Select the item to exit the SEQUENCE menu; go back to **MAIN PAGE 2** to carry on setup of autopan.

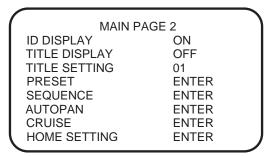



**NOTE:** Users could execute the sequence function through a keyboard. Please refer to the control keyboard's quick guide for further information.

### **3.3.14 AUTOPAN**

Autopan means motion of scanning an area horizontally so that the dome camera can catch horizontal view. The parameters are listed as follows.

#### AUTOPAN LINE

There are four sets of autopan line built in the dome camera. Users can choose a line to execute using the joystick right/left. In addition, users are able to command the dome camera to do endless panning by setting the start point the same as the end point.

#### START POINT

Follow the description below to set the start position of the AUTOPAN path.

- 1. Move the cursor to <START POINT> and press <ENTER> while the item <TO FIND> is flashing. Then the item will turn <TO SAVE> automatically.
- 2. Move the dome to a desired position and press <ENTER> to save the position as the start point; the cursor will move to <END POINT> automatically. Ensure setting the end point to complete autopan setting.




**NOTE:** The tilt and zoom values of the start point will be recorded and **fixed** for the selected autopan line.

#### END POINT

Users are able to set the end point after the start point is defined. Pan the dome to another position and press <ENTER> to save the position as the endpoint.

### DIRECTION

The item is for setting the AUTOPAN direction of the dome camera. The dome will start to pan clockwise from the start point to the end point if your selection is <RIGHT> and then return to the start point. The dome will start to pan counter-clockwise from the start point to the end point if your selection is <LEFT>. Refer to the diagram below.

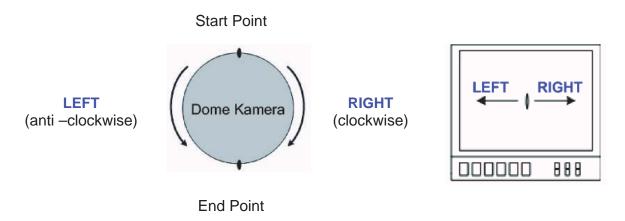

#### SPEED


The item is for defining the dome camera rotation speed while running autopan. The speed is adjustable from 1 to 4 (10 ~ 45 degree/sec.).

### RUN AUTOPAN

After all settings related to autopan are completed, select this item to execute the autopan function. Press the **<CAMERA OFF>** button (**<ENTER>**) to run an autopan path.

### • EXIT

Exit the AUTOPAN setup menu; go back to the MAIN PAGE 2 to carry on setup of cruise.

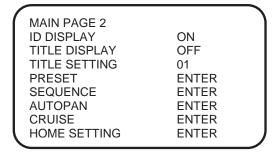



**NOTE:** Users could execute the autopan function through a keyboard. Please refer to the control keyboard's quick guide for further information.

### 3.3.15 CRUISE

CRUISE is a route formed with manual operation, through adjusting pan, tilt position and zoom parameters, which can be stored and recalled to execute repeatedly.

**CRUISE CRUISE LINE** RECORD START **ENTER** RECORD END **ENTER RUN CRUISE ENTER EXIT** YES

#### CRUISE LINE

There are four sets of Cruise line built in the dome camera. Using the joystick right/left to select a line first and then follow the steps below to start recording the cruise path.

#### RECORD START

Follow the description below to record the CRUISE path.

- 1. Rotate the dome camera to a desired view area (for some protocols, users may need to do it before entering the OSD) and press <ENTER> to build the cruise path using the joystick on the screen. The percentage of the memory buffer used will be displayed on the screen.
- 2. Pan, tilt and zoom the dome camera to form a path.



**NOTE:** Beware of the memory size when building a cruise path. Once the buffer percentage reaches 100%, recording of the path will stop.

### RECORD END


The cursor will be moved to RECORD END while building the cruise line; when the setting is completed, press <ENTER> to save the path.

### RUN CRUISE

After cruise setting is completed, press the **<CAMERA OFF>** button to run the defined cruise.

#### EXIT

Exit the CRUISE setup menu; go back to the **MAIN PAGE 2** to carry on setup of home setting.

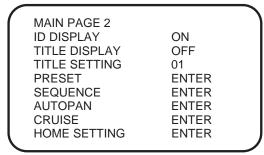



**NOTE:** Users could execute the cruise function through a keyboard. Please refer to the control keyboard's quick guide for further information.

### 3.3.16 HOME SETTING

Users are able to set an operation mode to ensure constant monitoring. If the dome camera idles for a period of time, the selected function will be activated automatically; this is the HOME function. The HOME function allows constant and accurate monitoring to avoid the dome camera idling or missing events.

HOME SETTING
HOME FUNCTION OFF
SELECT MODE PRESET
PRESET POINT 001
RETURN TIME 001MIN.
GO ENTER
EXIT YES

### HOME FUNCTION

The item is used to enable or disable the HOME function. Use the joystick right/left to change the setting.

### SELECT MODE

Select one of the modes that the dome should execute when the HOME function is enabled and the RETURN TIME expires. The options include <AUTOPAN>, <SEQUENCE>, <CRUISE> and <PRESET>. Use the joystick left/right to change the setting and the items below will change in cooperation with your selection.

### PRESET POINT

Select a preset point where the dome should go after the Return Time function, which will be mentioned later, is activated. The preset point(s) should be set prior either in the PRESET setup menu or via joystick.

### SEQUENCE LINE

Select a sequence line that the dome camera should execute after the Return Time function is activated. The sequence line(s) should be defined prior either in the SEQUENCE setup menu or via joystick.

### **AUTO PAN LINE**

Select an autopan line that the dome camera should execute after the Return Time function is activated. The autopan line(s) should be defined prior either in the AUTOPAN setup menu or via joystick.

#### **CRUISE LINE**

Select a cruise line that the dome camera should execute after the Return Time function is activated. The cruise line should be defined prior either in the CRUISE setup menu or via joystick.

#### RETURN TIME

The dome starts to count down RETURN TIME when the dome idles and then execute the SELECT MODE function when the return time is up. The RETURN TIME ranges from 1 to 128 minutes.

### • GO

If HOME function is enabled, users are allowed to execute HOME function by selecting this item.

#### EXIT

Exit the HOME SETTING menu. Then go to the **MAIN PAGE 3** to carry on other setups.

MAIN PAGE 3 IR FUNCTION **AUTO** ALARM SETTING **ENTER** ALARM DETECT **OFF** WDR FUNCTION **OFF** PRIVACY MASK **ENTER** TIME SETTING **FNTFR** SCHEDULE **ENTER EXIT OSD** YES

# 3.3.17 IR FUNCTION (Removable IR Cut)

With the IR cut filter, the dome can still catch clear image at night time or in low light conditions. During day time, the IR cut filter will be on to block the infrared light for clear image; during night time, the IR cut filter will be removed to catch infrared light and the displayed images will become black and white. Refer to the description below to operate the IR function.

#### AUTO

The internal circuit will automatically decide the occasion to remove the IR cut filter according to the value of light condition calculated by the internal light algorithm. Users can set its threshold value from <1> ~ <29>. The smaller the value, the easier the camera switches from night (B/W) mode to day (color) mode. When the threshold level is set as <29> and the camera is in night mode, it will return to day mode later as with setting <1>.

#### MANUAL

### IR MANUAL ON

Select the item to remove the IR cut filter; the camera will be in B/W (night) mode.

#### IR MANUAL OFF

Select the item to attach the IR cut filter; the camera will be in Color (day) mode.

### • CABLE

The alarm input 8 (potential free) is responsible for switching between

Color mode and B/W mode.

- closed = B/W mode; - open = color mode

### **Sub-menu of IR Function**



#### **THRESHOLD**

The dome will remove the filter immediately when the threshold value is reached. The threshold can be adjusted between <01> and <29>; the threshold <01> indicates a higher sensitivity but it may cause an oscillation between day and night mode, because the hysteresis could be too small. Setting <29> switches nearly at the same light condition into night mode as setting <1>, but it must be much brighter to switch back into day mode.

### **LIGHT SOURCE**

Here you can choose the light source, either infrared or visible.

### **Exit**

Exit the IR function menu and go back to the **MAIN PAGE 3** carry on setup of alarm setting.

MAIN PAGE 3					
IR FUNCTION	AUTO				
ALARM SETTING	ENTER				
ALARM DETECT	OFF				
WDR FUNCTION	OFF				
PRIVACY MASK	ENTER				
TIME SETTING	ENTER				
SCHEDULE	ENTER				
EXIT OSD	YES				
	_				

# 3.3.18 ALARM SETTING

Both speed domes provide 7 + 1\* alarm inputs and one alarm output (N.O. or N.C) to connect alarm devices. With this function the dome camera can cooperate with alarm systems to catch events' images. For wiring, please refer to the installation guide and/or qualified service personnel. Adjustable alarm parameters are listed below.

\* = Alarm Input 8 = day/night switch (open = day mode; closed = night mode)

```
ALARM SETTING
ALARM PIN 1
ALARM SWITCH OFF
ALARM TYPE N.C.
ALARM ACTION PRESET
PRESET POINT 001
DWELL TIME ALWAYS
EXIT YES
```

### ALARM PIN

The dome provides 8 alarm inputs and 1 output (N.O. or N.C.). Select an alarm connector which you want to set its alarm-related parameters with this item and then set its alarm-related parameters in the Alarm Setting menu. For alarm pin definitions, please refer to 2.6 22 - Pin Connector Definition of the installation guide.

NOTE: If two or more alarm pins are triggered at the same time, smaller alarm pin number will have higher priority of being handled.


For example, if Alarm-1 and Alarm-3 are triggered simultaneously, only Alarm-1 will actually be handled.

### ALARM SWITCH

The item is used to enable or disable the selected alarm pin function. Use the joystick left/right on the screen to change the setting.

#### ALARM TYPE

There are two alarm types: Normal Open and Normal Close, which are illustrated as below. Select an alarm type that corresponds with the alarm application.

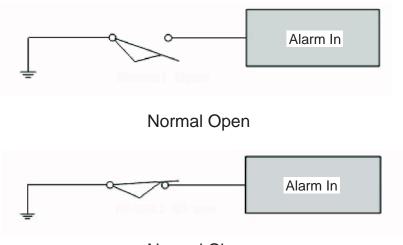

**Normal Close** 

### ALARM ACTION

The alarm actions include PRESET, SEQUENCE, AUTOPAN and CRUISE functions. Select one of these modes so that certain action will be executed when an alarm is triggered. Use the joystick on the screen to select a particular action mode, and the item listed below will change in accordance with your selected alarm action. Additionally, when an alarm is triggered, there will be a flash warning notice: ALARM displayed in the upper right corner of the screen.

#### PRESET POINT

Select a preset point where the dome should go when an alarm pin is triggered. The preset point(s) should be set prior either in the PRESET setup menu or via joystick.

#### **SEQUENCE LINE**

Select a sequence line that the dome camera should execute when an alarm pin is triggered. The sequence line(s) should be defined prior either in the SEQUENCE setup menu or via joystick.

### **AUTOPAN LINE**

Select an autopan line that the Dome Camera should execute when an alarm pin is triggered. The autopan line(s) should be defined prior either in the AUTOPAN setup menu or via joystick.

### **CRUISE LINE**

Select a cruise line that the Dome Camera should execute when an alarm pin is triggered. The cruise line(s) should be defined prior either in the CRUISE setup menu or via joystick.

### DWELL TIME

DWELL TIME means the duration of executing an alarm action. If the PRESET mode is selected, the dome camera will go to the selected preset position and stay there for a user-defined period of time (1~127seconds/always) when alarm takes place. If other modes (SEQUENCE/AUTOPAN/CRUISE) have been selected, the camera will keep executing the selected mode (DWELL TIME: ALWAYS) until alarm condition is released or users rotate the joystick to change the status of the dome camera.



**NOTE:** The dwell time is only adjustable when selecting **Preset** for alarm action. When the dwell time is up, the dome camera will go back to its trigger position and recheck alarm pin status.

### • EXIT

Exit the ALARM SETTING menu and go back to the **<MAIN PAGE 3** to carry on setup of Alarm Detect.

/		
	MAIN	PAGE 3
	IR FUNCTION	AUTO
	ALARM SETTING	ENTER
	ALARM DETECT	OFF
	WDR FUNCTION	OFF
	PRIVACY MASK	ENTER
	TIME SETTING	ENTER
	SCHEDULE	ENTER
	EXIT OSD	YES
◟		

### 3.3.19 ALARM DETECT

When the alarm detect function is activated, the camera will detect movement within a monitoring area and then send an alarm signal automatically. There will be a flash warning notice: MOTION displayed in the upper left corner of the screen.

ALARM DETECT
DETECT SWITCH OFF
DETECT MODE NONE
BLOCK MODE NONE
FRAME SET NONE
FRAME DISABLE NONE
THRESHOLD NONE
FXIT YFS

#### DETECT SWITCH

The item is used to enable or disable the ALARM DETECT function.

### DETECT MODE

Four alarm detect modes are provided for different applications.

### **INT FOCUS (Internal Focus)**

The alarm will be triggered if the internal focus changes; if the focus returns to the original position, the alarm will stop.

### **FIX FOCUS**

If focus movement is detected, the alarm will be triggered and the alarm stops when focus returns to the original position. If the detected focus movement keeps changing for more than four seconds, the new focus position will be memorized as the reference and the alarm will stop.

NOTE: The INT FOCUS and FIX FOCUS detect modes will be activated only with the Auto Focus mode.

### **INT AE (Internal AE)**

When Auto Exposure (AE) movement is detected, the alarm will be triggered; if the Exposure level returns to the original level, the alarm will stop.

#### **FIX AE**

The alarm will be triggered if the Exposure value changes; if the adjusted AE value retains for four seconds, the value will be saved as the reference and the alarm will stop.

#### MOTION

Motion Detection function allows detecting suspicious motion and triggering alarms when motion volume in the detected area reaches/exceeds the determined sensitivity threshold value. The main menu is shown below:

ALARM DE	TECT
DETECT SWITCH	ON
DETECT MODE	MOTION
BLOCK MODE	ON
FRAME SET	01
FRAME DISABLE	01
THRESHOLD	016
EXIT	YES

#### BLOCK MODE

In Motion Detect Mode, users can set Block Mode as "ON" or "OFF". When BLOCK MODE is turned on, if there are any variations (e.g. caused by intrusion) in the sections of the monitoring image, the affected parts will be high lighted dynamically.

### FRAME SET

In a monitored field, users can define specific areas as motion detection target zones. Please refer to the instructions as follows to configure parameters for each motion detection zone so-called "Frame". When motion is detected within a defined frame, a flash warning notice: MOTION will display in the upper left corner of the screen.

Totally 4 frames can be set. Select a frame using the joystick right/left and press "ENTER" to enter the frame's submenu, as shown below.

FRAME S	SET 1
LEFT LIMIT	L/R
TOP LIMIT	D/U
HSIZE	-/ +
VSIZE	-/ +
MODE	PRESET
PRESET POINT	001
DWELL TIME	001 SEC
EXIT	YES

#### LEFT LIMIT

Move the frame right/left using the joystick right/left.

### **TOP LIMIT**

Shift the frame up/down using the joystick right/left.

### H/V SIZE

Adjust the frame size via changing H/V size value using the joystick right/left.

### **MODE**

Assign a trigger action for a motion detection frame. Options include PRESET, SEQUENCE, AUTOPAN and CRUISE. When motion is detected within a frame, the dome camera will execute the set trigger action.

### **DWELL TIME**

The DWELL TIME is duration of executing a trigger action. If select the PRESET mode, when motion is detected, the dome camera will go to the selected preset position and stay there for a user-defined period of time (1-127 seconds/always). If select other modes (SEQUENCE/AUTOPAN/CRUISE), the dome camera will keep executing the selected mode (DWELL TIME: ALWAYS) until it is interrupted by commands sent from a connected control device.

### **EXIT**

Exit the FRAME setting page and go back to ALARM DETECT main page.

### • FRAME DISABLE

Select a frame to be cancelled and press <ENTER>. The selected frame will then be removed from the monitored field.

#### THRESHOLD

The threshold range is adjustable from 1-255. The smaller the value, the more sensitive it is; i.e. 1: highest sensitivity; 255: lowest sensitivity.

### • EXIT

Exit the ALARM DETECT menu and go back to the **<MAIN PAGE 3** to carry on setup of WDR function (see 3.3.20 - WDR FUNCTION).

MAIN PA	GF 3
IR FUNCTION	AUTO
ALARM SETTING	ENTER
ALARM DETECT	OFF
WDR FUNCTION	OFF
PRIVACY MASK	ENTER
TIME SETTING	ENTER
SCHEDULE	ENTER
EXIT OSD	YES

### 3.3.20 WDR FUNCTION

The Wide Dynamic Range (WDR) function is especially effective in solving indoor and outdoor contrast issues to enhance better image quality and video display. It enables the dome to catch detailed data from the dark part (indoor) without any saturation from the bright part (outdoor).

**Select "ON"** to enable the WDR function

**Select "OFF"** to disable the WDR function

**Select "AUTO"** to enable the AUTO WDR function which switches the WDR ON/OFF automatically with the intensity difference of the subject.

**Select "RF (Ratio Fix)"** to enable fixed exposure ratio mode. This mode fixes the shutter speed of a short exposure and configures the shutter speed of a long exposure by setting the ratio with regards to a short exposure with the exposure ratio parameter. Blocked-up shadow correction is not performed in this mode.

**Select "DC (D version Compatible)"** to enable the WDR mode which uses a histogram to correct blocked-up shadows and blown-out highlights, which operation is similar to that of former FCB-EX1010/P D version model.

		_
MAIN PA	AGE 3	
IR FUNCTION	AUTO	
ALARM SETTING	ENTER	
ALARM DETECT	OFF	
WDR FUNCTION	OFF	
PRIVACY MASK	ENTER	
TIME SETTING	ENTER	
SCHEDULE	ENTER	
EXIT OSD	YES	
1		

## 3.3.21 PRIVACY MASK

The Privacy Mask function aims to avoid any intrusive monitoring. Users can adjust the camera view position using the joystick and adjust the mask size and area via joystick on the screen. When setting a mask, it is suggested to set it at least **twice** bigger (height and width) than the masked object. The dome camera will memorize the center of the selected view as an original point, so the joystick will be locked as users enter the SET MASK menu (mentioned later). Refer to the following description for setting privacy masks.



NOTE: The IMAGE FLIP function and the IMAGE INVERSE function will be disabled automatically while the PRIVACY MASK function is enabled.

The available area for setting a privacy mask is restricted within tilt angle 70 degrees. Maximum 8 masks can be displayed in one scene. All the settings are described as the following:

PRIVACY MASK MENU
PRIVACY SWITCH OFF
TRANSPARENCY OFF
COLOR BLACK
SET MASK 01
CLEAR MASK 01
EXIT YES

## PRIVACY SWITCH

Users can enable or disable the PRIVACY MASK function through this item. Set this item to <ON> before configuring mask zones.

### TRANSPARENCY


The color of privacy masks can be set as transparent. Select <ON> to display transparent masks (use only for easier setting!).

### COLOR

The color of privacy masks can be set through this item. The available colors are black, HI/LO gray, white, red, green, blue, cyan, yellow and magenta.

### SET MASK

Use the control device to move the dome camera to the area where you want to set a mask. Press <ENTER> to enter the SET MASK menu. The dome will memorize the present position as a privacy mask position. Up to 24 masks can be set.

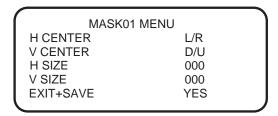

## **H CENTER**

The original horizontal center of a mask zone is the center of a screen; it is able to move a mask zone to the other position by adjusting the horizontal value with the joystick left/right. The camera will pan right or left according to user's control.

### **V CENTER**

The original vertical center of a mask zone is the center of a screen; it is able to move a mask zone to the other position by adjusting the vertical value with the joystick left/right. The camera will tilt up or down according to user's control.

# H SIZE (00-80)

Users can adjust the horizontal size of a privacy mask through this item. Set the H and V size to 0 can also delete the selected mask.

# **V SIZE (00-60)**

Users can adjust the vertical size of a privacy mask through this item. Set the H and V size to 0 can also delete the selected mask.

## CLEAR MASK

Users can delete a preset mask zone with this item. Please follow the steps listed below.

- 1. Select the mask zone that will be erased (e.g. 01).
- 2. Press <ENTER> to confirm the selection.

#### EXIT

Exit the PRIVACY MASK menu and go back to the **MAIN PAGE 3** to carry on setup of time related setting.

	`	`
MAIN F	PAGE 3	1
IR FUNCTION	AUTO	
ALARM SETTING	ENTER	
ALARM DETECT	OFF	
PRIVACY MASK	ENTER	
TIME SETTING	ENTER	
SCHEDULE	ENTER	
EXIT OSD	YES	
	_	J

# 3.3.22 TIME SETTING

The TIME SETTING function is used to set the TIME related parameters of the integrated high speed dome. Each item in the menu is listed as follows.

NG	
OFF	
00	
01	
00	
00	
00	
YES	
	00 01 00 00 00

## TIME DISPLAY

Select <ON> to display time information on the screen or <OFF> not to display.

# YEAR / MONTH / DAY

The items are for setting up the system date.

## HOUR/MINUTE

The items are for setting up the system time.

## EXIT+SAVE

Exit the TIME SETTING menu and go back to the **MAIN PAGE 3** to carry on setup of schedule.

MAIN P	AGE 3
IR FUNCTION	AUTO
ALARM SETTING	ENTER
ALARM DETECT	OFF
PRIVACY MASK	ENTER
TIME SETTING	ENTER
SCHEDULE	ENTER
EXIT OSD	YES
(	

# **3.3.23 SCHEDULE**

The schedule function enables users to program a preset point or function (Sequence/Autopan/Cruise) automatically to perform in a specific period of time.

	$\overline{}$
SCHEDULE	`
SWITCH	OFF
POINT	00
HOUR	00
MINUTE	00
MODE	PRESET
PRESET POINT	001
SCHEDULE RESET	YES
EXIT	YES
(	

## SWITCH

Select <ON> to enable or <OFF> to disable the schedule function.

### POINT

Users are allowed to arrange 32 sets of schedule point, i.e. each set of schedule point can be assigned one kind of schedule modes.

### HOUR/MINUTE

The items are for setting up the time to execute each schedule point.

## MODE

This is for setting the schedule function of the selected schedule point; the options are listed as follows.

### **NONE**

No action will be executed for the schedule if select the item.

## **PRESET**

Users can select the PRESET mode as an action carried out in a schedule point.

## **SEQUENCE**

Users can select the SEQUENCE mode as an action carried out in a schedule point.

# **AUTOPAN**

Users can select the AUTOPAN mode as an action carried out in a schedule point.

# **CRUISE**

Users can select the CRUISE mode as an action carried out in a schedule point.

# IR FUNC. (IR function)

If the IR function mode is selected, the AUTO IR FUNCTION will be activated for a schedule point.

# SCHEDULE RESET

Users can reset the whole schedule with the item.

## EXIT

Exit the SCHEDULE menu and go back to the MAIN PAGE 3.

# 3.3.24 EXIT OSD

To exit the OSD setup menu, users can select this item on the bottom of **MAIN PAGE 3** and press the <CAMERA OFF> button.

# **Appendix A: Technical Specification GNSD882**

Image sensor (Chip)  Scanning system  Progressive Scan  Scanning frequency  15.625 kHz (H), 50 Hz (V)  Pixel (H x V)  Pixel (H x V)  Horizontal resolution  Stanning frequency  15.625 kHz (H), 50 Hz (V)  752 x 582 (effective)  Horizontal resolution  550 TV lines  Minimum sensitivity:  Colour  B/W  0.1 lux (50 IRE);IR cut filter, AGC on 0.01 lux (50 IRE);IR pass filter, AGC on Internal / External (line lock)  S/N ratio  >50 dB (AGC off)  White balance  Automatic / Manual
Scanning frequency  Pixel (H x V)  Pixel (H x V)  Horizontal resolution  Minimum sensitivity:  Colour  B/W  Outlines  Outlines  Internal / External (line lock)  S/N ratio  15.625 kHz (H), 50 Hz (V)  752 x 582 (effective)  550 TV lines  0.1 lux (50 IRE);IR cut filter, AGC on 0.01 lux (50 IRE);IR pass filter, AGC on Internal / External (line lock)  >50 dB (AGC off)
Pixel (H x V)  Horizontal resolution  550 TV lines  Minimum sensitivity:  Colour  B/W  0.1 lux (50 IRE);IR cut filter, AGC on 0.01 lux (50 IRE);IR pass filter, AGC on  Internal / External (line lock)  S/N ratio  752 x 582 (effective)  550 TV lines  0.1 lux (50 IRE);IR cut filter, AGC on 0.01 lux (50 IRE);IR pass filter, AGC on  Internal / External (line lock)  >50 dB (AGC off)
Horizontal resolution  Minimum sensitivity: Colour B/W  O.1 lux (50 IRE);IR cut filter, AGC on 0.01 lux (50 IRE);IR pass filter, AGC on Internal / External (line lock) S/N ratio  550 TV lines  0.1 lux (50 IRE);IR cut filter, AGC on Internal / External (line lock) S/O dB (AGC off)
Minimum sensitivity: Colour B/W 0.1 lux (50 IRE);IR cut filter, AGC on 0.01 lux (50 IRE);IR pass filter, AGC on Internal / External (line lock) S/N ratio >50 dB (AGC off)
Colour 0.1 lux (50 IRE);IR cut filter, AGC on 0.01 lux (50 IRE);IR pass filter, AGC on Synchronization Internal / External (line lock)  S/N ratio >50 dB (AGC off)
B/W 0.01 lux (50 IRE);IR pass filter, AGC on Synchronization Internal / External (line lock) S/N ratio >50 dB (AGC off)
Synchronization Internal / External (line lock) S/N ratio >50 dB (AGC off)
S/N ratio >50 dB (AGC off)
, ,
Mhite belence
Shutter On / Off - Manual/Automatic electronic (AES), 1/1.5 to 1/4000 s
Back-light compensation On / Off
Automatic gain control (AGC)  Automatic / Manual
Extendend dynamic range Yes
LAN interface RJ45 connector, 10/100Base-TX
Transmission TCP (Transmission Control Protocol)
Compression/Encoding Pictures directly will be transmitted in a GeViScope compatible data format: MPEG4CCTV
Colour / B/W switching Automatic (IR-cut filter)
Privacy masking 24 adjustable masking zones via on screen menu
Lens 3.4 mm to 122.4 mm (optical)
Zoom ratio (optical) 36x
Zoom ratio (digital) 1x - 12x proportional
Image Stabilizer Yes
Stable Zoom Yes
Panning range 360° endless
Tilting range -10° to 190°
Panning/Tilting speed 1°/s to 90°/s (manual)
Preset speed 5°/s to 400°/s (pan/tilt)
Preset accuracy 0.225° (pan), 0.45° (tilt)
Auto flip / Digital flip Yes
Auto focus Automatic / Manual
Preset positions* 256 positions with with freeze function
*(possibly less than 256 positions, see chapter 3.3.12)
Sequence Yes; 8 x
Cruise Yes; 4 x
Auto Pan Yes; 4 x
Inbuilt protocols JVC/Geutebrueck protocol
Operating temperature - 50 °C to + 50 °C
Humidity in operation 0 % to 90 % rel. humidity (non condensing)
Protective rating IP 66 with sunshield
Voltage supply 24 V AC
Power consumption Approx. 65 W (incl. heater)
Dimensions in mm (Diameter x H) 233,5 x 302.5
Weight Approx. 2.6 kg
Certificates CE, FCC
Order No. 0.34874

# **Appendix A: Technical Specification GNSD682**

Technical specifications	VIPCAM-GNSD682	
Image sensor (Chip)	1/4" Sony EX-View HAD sensor	
Scanning system	Progressive Scan	
Scanning frequency	15.625 kHz (H), 50 Hz (V)	
Pixel (H x V)	752 x 582 (effective)	
Horizontal resolution	550 TV lines	
Minimum sensitivity:	333 163	
Colour	0.1 lux (50 IRE)	
	IR cut filter, AGC on	
B/W	0.01 lux (50 IRE)	
	IR pass filter, AGC on	
Synchronization	Internal / External (line lock)	
S/N ratio	>50 dB (AGC off)	
White balance	Automatic / Manual	
Shutter	On / Off - Manual/Automatic electronic (AES), 1/1.5 to 1/4000 s	
Back-light compensation	On / Off	
Automatic gain control (AGC)	Automatic / Manual	
Extendend dynamic range	Yes	
LAN interface	RJ45 connector, 10/100Base-TX	
Transmission	TCP (Transmission Control Protocol)	
Compression/Encoding	Pictures directly will be transmitted in a GeViScope compatible data format: MPEG4CCTV	
Colour / B/W switching	Automatic (IR-cut filter)	
Privacy masking	24 adjustable masking zones via on screen menu	
Lens	3.4 mm to 122.4 mm (optical)	
Zoom ratio (optical)	36x	
Zoom ratio (digital)	1x - 12x proportional	
Image Stabilizer	Yes	
Stable Zoom	Yes	
Panning range	360° endless	
Tilting range	-10° to 190°	
Panning/Tilting speed	1°/s to 90°/s (manual)	
Preset speed	5°/s to 400°/s (pan/tilt)	
Preset accuracy	0.225° (pan), 0.45° (tilt)	
Auto flip / Digital flip	Yes	
Auto focus	Automatic / Manual	
Preset positions*	256 positions with with freeze function	
	*(possibly less than 256 positions, see chapter 3.3.12)	
Sequence	Yes; 8 x	
Cruise	Yes; 4 x	
Auto Pan	Yes; 4 x	
Inbuilt protocols	JVC/Geutebrueck protocol	
Operating temperature	- 10 °C to + 45 °C	
	(0 °C bis 40 °C recommended)	
Humidity in operation	0 % to 90 % rel. humidity (non condensing)	
Protective rating	IP 20 (for indoor use only)	
Voltage supply	24 V AC	
Power consumption	Approx. 20 W	
Dimensions in mm (Diameter x H)	131 x 226	
Weight	Approx. 1.6 kg	
Certificates	CE, FCC	
Order No.	0.34873	

# **Appendix B: Available Accessories**

The following chapters show the available accessories for dome installation.

NOTE: the sleeve anchors with hex nut for fixing the bracket, box or straight tube onto wall or ceiling are not supplied. Use parts that are appropriate for the accessories.

# Power Supply PSU-24VAC/80VA/Boxed(5.14040)

It's highly recommended to use this application to connect the domes.



# Bracket Wall Mount GSD/BWM-003 (5.04802)


Wall mount for day/night outdoor dome GNSD882 (and in combination with a dome mount adaptor GSD/BDA-001; 5.04866, also for the GNSD682 for indoor use!).

Dimensions in mm (W x H x D): 114 x 138 x 350 Material: Die casted aluminium (powder coated)

Weight: Approx. 1.5 Kg / Color: RAL 7032

Follow the steps to mount the wall mount.

- 1) Make a cable entry hole on the wall if needed.
- 2) Fix the suspension bracket on the wall.
- 3) Thread the cables through the wall mount and the top holder.
- **4)** Fix the top holder to the wall mount using the equipped screws and washers and connect the cable to the dome.
- 5) Attach the dome camera to the top holder and tighten with screws.

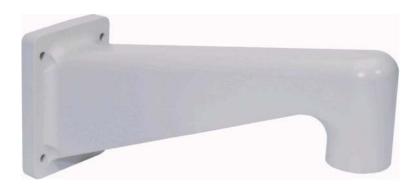

# **Bracket Ceiling Mount GSD/BCE-002 (5.04801)**

Ceiling mount for day/night dome GNSD882

# The bracket is only applicable for indoor use.

Dimensions in mm (Diameter x L): 140 x 250

Weight: approx. 1.0 Kg / Color: beige

Follow the steps to mount the straight tube on the ceiling.

- 1) Ensure that the ceiling can support the weight of the dome camera and straight tube.
- 2) Make a cable entry hole on the ceiling.
- 3) Mount the suspension bracket onto the ceiling.
- 4) Thread the cables through the straight tube and the top holder.
- 5) Fix the top holder to the straight tube using the screws and washers and connect the cable to the dome.
- 6) Attach the dome camera to the top holder and tighten with screws.



CAUTION: Please make sure, that water cannot intrude into the ceiling mount.

Dome electronics may be damaged!



# Corner Mount Adapter GSD/CMA-003 (5.04806)

Corner mount adapter for day/night outdoor dome GNSD882 (and in combination with a dome mount adaptor GSD/BDA-001; 5.04866, also for the GNSD682). Suitable only in combination with GSD/BWM-003 (5.04802) -> for both domes.

Dimensions in mm (W x H x D): 206 x 222 x 121

Material: Steel sheet (powder coated)
Weight: Approx. 2.0 Kg / Color: RAL 7032



With a corner mounting plate and the bracket wall mount GSD/BWM-003 (5.04802, order separately), the dome can be mounted on corners.

- 1) Make a cable entry hole on the wall if needed.
- 2) Fix the suspension bracket on the wall.
- **3)** Attach the wall mount to the fixed bracket.
- **4)** For installation of the cables, top holder and the dome unit, refer to section 2.3.2.3 as the steps are the same as Wall Mounting.

# Pole Mount Adapter GSD/PMA-003 (5.18374)

Pole mount adapter for day/night outdoor dome GNSD882

Suitable only in combination with GSD/BWM-003 (5.04802).

Dimensions in mm (W x H x D): 137 x 182 x 50

Material: Stainless steel (1.4571)

Weight: Approx. 1.0 Kg

Accessories: 2 x tension band with locking and 4 x hexagon screw M8 x 30.

For the locking a wrench M5 is necessary.

Follow the steps to mount the pole mount adaptor with the wall mount.




- **1)** Fasten the pole mount adaptor on a pole with the stainless straps.
- **2)** Fix the wall mount GSD/BWM-003 (5.04802) on the pole mount adaptor.
- 3) Thread the cables through the wall mount and the top holder.
- 4) Fix the top holder to the wall mount using the screws and washers and connect the cable of the dome.

# Wall mount accessories for GNSD682 Wall Mount GSD/BWM-001 (5.04864)

## **Mini Pendant Mount**

White/Ivory;  $184 \times 104 \times 115.2 \text{ mm}$  (7.24 × 4.09 × 4.54 inches)

Supplied with rubber washer ->  $8\times1$ , pendant tube washer ->  $\times1$ , spring washer ->  $8\times1$  and M8\*12 screw ->  $\times1$ .

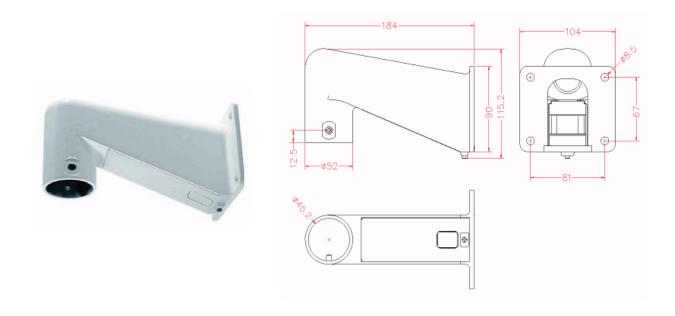

# Indoor Mount Kit GSD/BDA-001 (5.04866)

# **Indoor Mount Kit**

For mounting indoor dome camera onto a gooseneck/straight tube.

White; Diameter: 140 mm (5.5 inches); Height: 74 mm (2.9 inches)

Attached Components: Hexagon Key, Lock Screw Plate and Screws -> x3








# Hard Ceiling Mount Accessories for GSD-682 Hard Ceiling Mount and Decoration Ring (supplied)

For hard ceiling mount. Height: 21.4 mm; Bore diameter: 4.5 mm;

Diameter mounting bolt circle: 158 mm

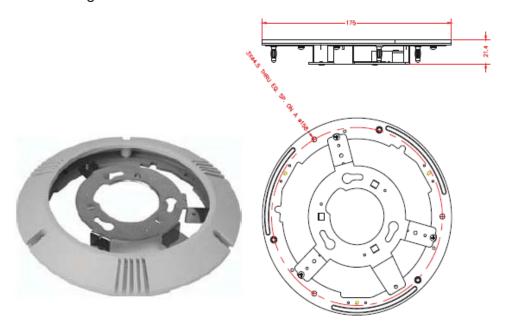



# In-Ceiling-Kit GSD/BFC-001 (5.04860)

For in-ceiling mounting.

Height: 170 mm; Diameter: 180 mm; 0.5 Kg



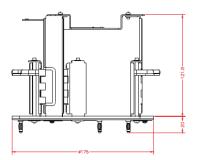

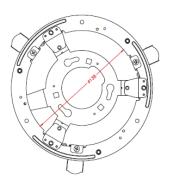


# **Straight Tube GSD/BPE-001 (5.04862)**

White; Height: 250 mm; Diameter: 50 mm

1 Kg with supplied screws, gaskets and washers

1 x white rubber sealing.

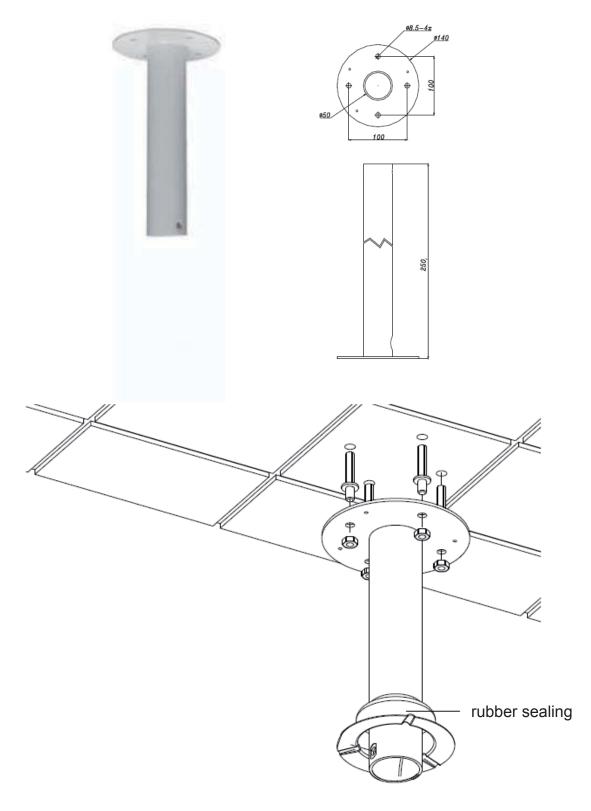

# **Appendix C: Remote Control Protocol KDec->JVC**

Die Kommandos der Dome-Systeme GNSD882/GNSD-682 mit TK-C676 Protokoll sind nicht kompatibel zu den Kommandos des KDec-Systems.

Es muss eine vollständige Umsetzung erfolgen. Diese ist in der folgenden Abbildungstabelle beschrieben.

The commands for the Dome-Systems GSD-882/GSD-682 with TK-C676 protocol are NOT compatible to the commands for the KDEC-System.

A complete translation has to be carried out. This is described in the following list.

Number of possible RS-485 bus units: 32 max.

(Es sind maximal 32 Bus-Teilnehmer möglich!)

GNSD882/682-Funktion	KDec-Befehl	MBeg-GCT	MBeg-GCT/VS Modus
Schwenken rechts mit	SNkkkS- vvv	Mit Joystick	Mit Joystick
variabler Geschwindigkeit	011110	BACC I C. I	Navi I di I
Schwenken links mit	SNkkkS+vvv	Mit Joystick	Mit Joystick
variabler Geschwindigkeit	0111100		
Schwenken Stopp	SNkkkS0	Joystick neutral	Joystick neutral
Neigen nach unten mit	SNkkkN+vvv	Mit Joystick	Mit Joystick
variabler Geschwindigkeit	CNIIddaNi yaar	Mit levetiels	Mit levetiels
Neigen nach oben mit	SNkkkN-vvv	Mit Joystick	Mit Joystick
variabler Geschwindigkeit	SNkkkN0	Joystick neutral	Joystick neutral
Neigen stopp Fokus nah	SNkkkF-	100-305	PA - 105
Fokus nan	SINKKKF-	Taste Fokus nah	Taste Fokus nah
		drücken	drücken
Fokus fern	SNkkkF+		
		Taste Fokus fern	
		drücken	drücken
Fokus stopp	SNkkkF0	Taste Fokus	Taste Fokus
		lösen	lösen
Zoom weit mit	SNkkkZ-vvv	Mit Joystick	Mit Joystick
variabler Geschwindigkeit	011117	NAC 1 C 1	NAME OF THE OWNER OWNER OF THE OWNER
Zoom tele mit	SNkkkZ+vvv	Mit Joystick	Mit Joystick
variabler Geschwindigkeit	ONILLE	AD.	4A
Blende auf. Danach ist der	SNkkkB+	Taste 🕏 Blende auf	Taste 🟵 Blende auf
Dome im manuellen Blenden- modus			
Blende zu. Danach ist der	SNkkkB-	Taste  Blende zu	Taste Blende zu
Dome im manuellen Blenden-	SINKKD-	Taste ₩ Blende zu	Laste ₩ Blende zu
modus			
Autofokus-und Auto-Iris	SNkkkW1	Taste drücken	Taste ♥ drücken
Betriebsarten aktivieren	OTTICKET	raste \ arucken	raste \ arucken
Autoflip-Modus	SNkkkP1	Taste drücken	Taste drücken
Ein-/ausschalten		umschalten erneut	umschalten erneut
Ohne Privacy Mask digitaler		drücken	drücken
Flip. Mit Privacy Mask		didoken	dideken
Mechanischer Flip			
VarPan ein-/ ausschalten	SNkkkX1	Taste X drücken	Taste X drücken
Schwenkgeschwindigkeit		umschalten erneut	umschalten erneut
an Zoom anpassen		drücken	drücken
Stoppen aller Bewegungen	SNkkkY1	Taste Y gedrückt	Taste <b>Y</b> gedrückt
Anzeige der Firmware-Vers.		halten	halten
Ein			
Anzeige der Firmware-Vers.	SNkkkY0	Taste Y lösen	Taste Y lösen
Aus		- · <b>T</b> ·	- · [*]a.:
OSD Menü einschalten	SNkkkK1	Taste La Kamera	Taste  Kamera
00001	0.11.1.12	Ein drücken	Ein drücken
OSD Menü Set	SNkkkK0	Taste 2 Kamera	Taste  Kamera
Otantan dan Carra d	ONIL-1-1-4	Aus drücken	Aus drücken
Starten der Sequenz 1	SNkkkL1	Taste <b>¶</b> € Lampe	Taste <b>¶</b> € Lampe
		Ein drücken	Ein drücken

GNSD882/682-Funktion	KDec-Befehl	MBeg-GCT	MBeg-GCT/VS Modus
Stoppen der Sequenz 1	SNkkkL0	Taste <b>¶</b> Lampe	Taste <b>¶</b> Lampe
		Aus drücken	Aus drücken
Starten der Sequenz 1-8	SNkkk.pp	Festposition 69-76	Festposition 69-76
		anfahren	anfahren
Starten Automatisches	SNkkk.pp	Festposition 65-68	Festposition 65-68
Schwenken (Autopan) 1-4		anfahren	anfahren
Starten der Tour 1-4	SNkkk.pp	Festposition 77-80	Festposition 77-80
		anfahren	anfahren
Start Kamerafahrt der	SNkkk.64	Festposition 64	Festposition 64
manuellen Aufzeichnung		anfahren	anfahren
Startposition (Autopan 1) für	PPkkk.64	Festposition 64	Festposition 64
Automatisches Schwenken		speichern	speichern
setzen, Schwenkrichtung links			
Return-Position (Autopan 1)	PPkkk.39	Festposition 39	Festposition 39
Automatisches Schwenken		speichern	speichern
setzen		•	·
Festpositionen speichern	PPkkk.pp	Festpositionen	Festpositionen
		1-37/ 41-63/ 77-255	1-37/ 41-63/ 77-99
Grundposition speichern	PPkkk.40	Grundposition 40	Grundposition 40
(Homeposition)		speichern	speichern
` '	CNINK CD		· .
Grundposition anfahren (Homeposition)	SNkkk.GP	Taste ** Hdrücken	Taste <sup>‡</sup> H drücken

<sup>\*</sup> Bedeutung der Variablen:

kkk Nummer der Domekamera einsetzen, gegebenenfalls mit führenden Nullen pp Festposition der gewählten Domekamera einsetzen, gegebenenfalls mit führenden Nullen

vvv zusätzliche variable Geschwindigkeitsparameter

Notes	

Notes		

Technische Änderungen und Liefermöglichkeit vorbehalten. Supplied subject to technical modifications and availability.

# **GEUTEBRÜCK GmbH**